



NEW TRASDATA PLUGIN:

- 341 - Continental Siemens VDO M3C S12X256SV Ducati**
- 540 - Continental Siemens VDO M3C S12XET256MAL Can-Am/BRP/Ducati**
- 552 - Continental Siemens VDO M3C S12XET256MAL Can-Am/BRP**
- 909 - Continental Siemens VDO M3C MC9S12XE256 Arctic cat**
- 911 - Continental Siemens VDO M3C MC9S12XE256 Kymco**

The lay-by pins are placed in the lower part of the ECU. It is ONLY possible the BDM FREE WIRING CONNECTION with the wire F34NTF051.

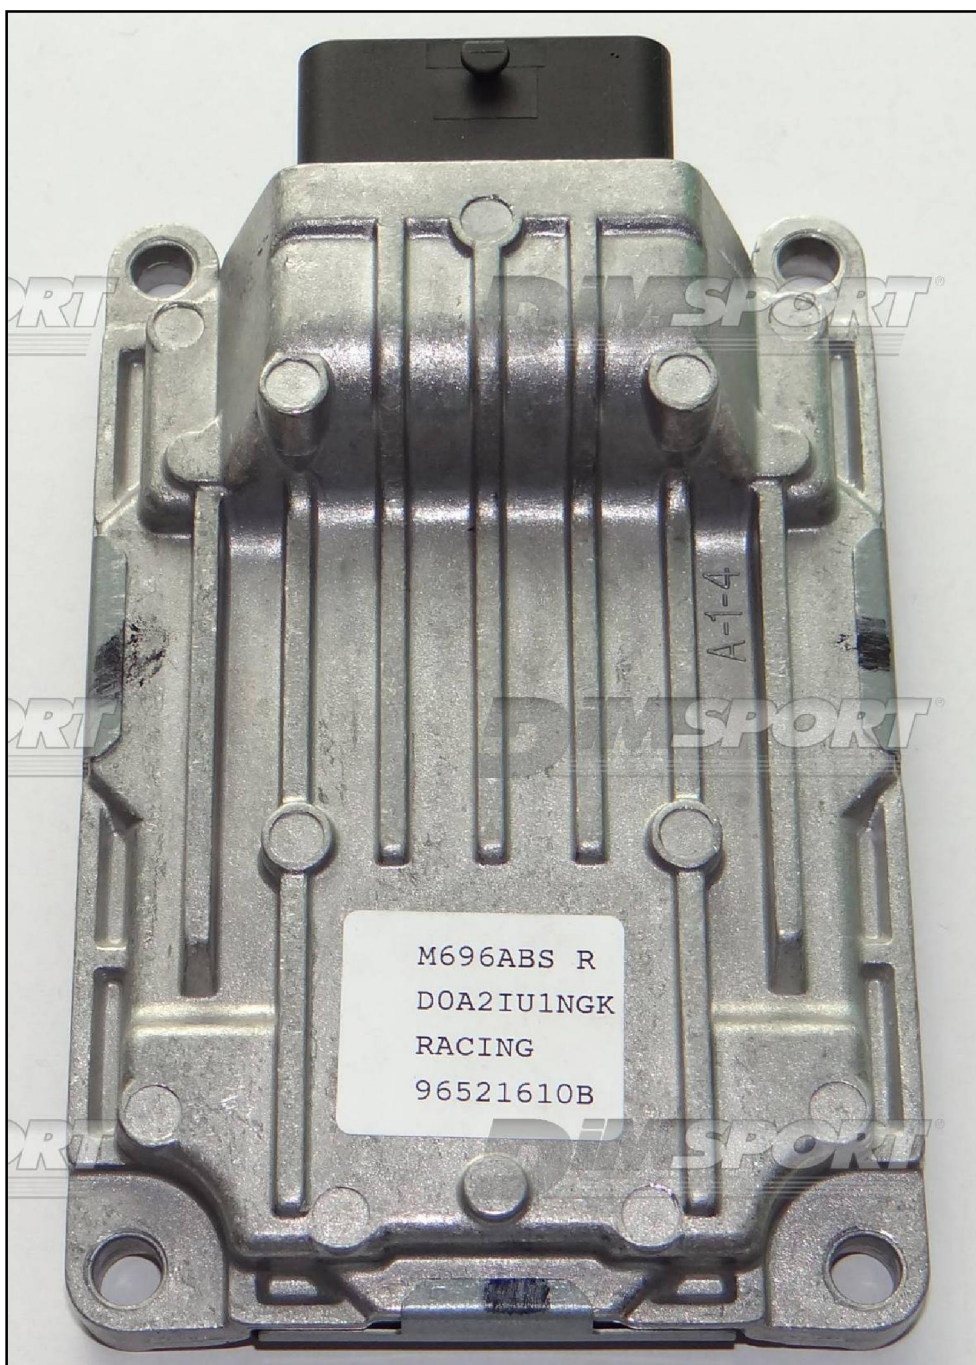



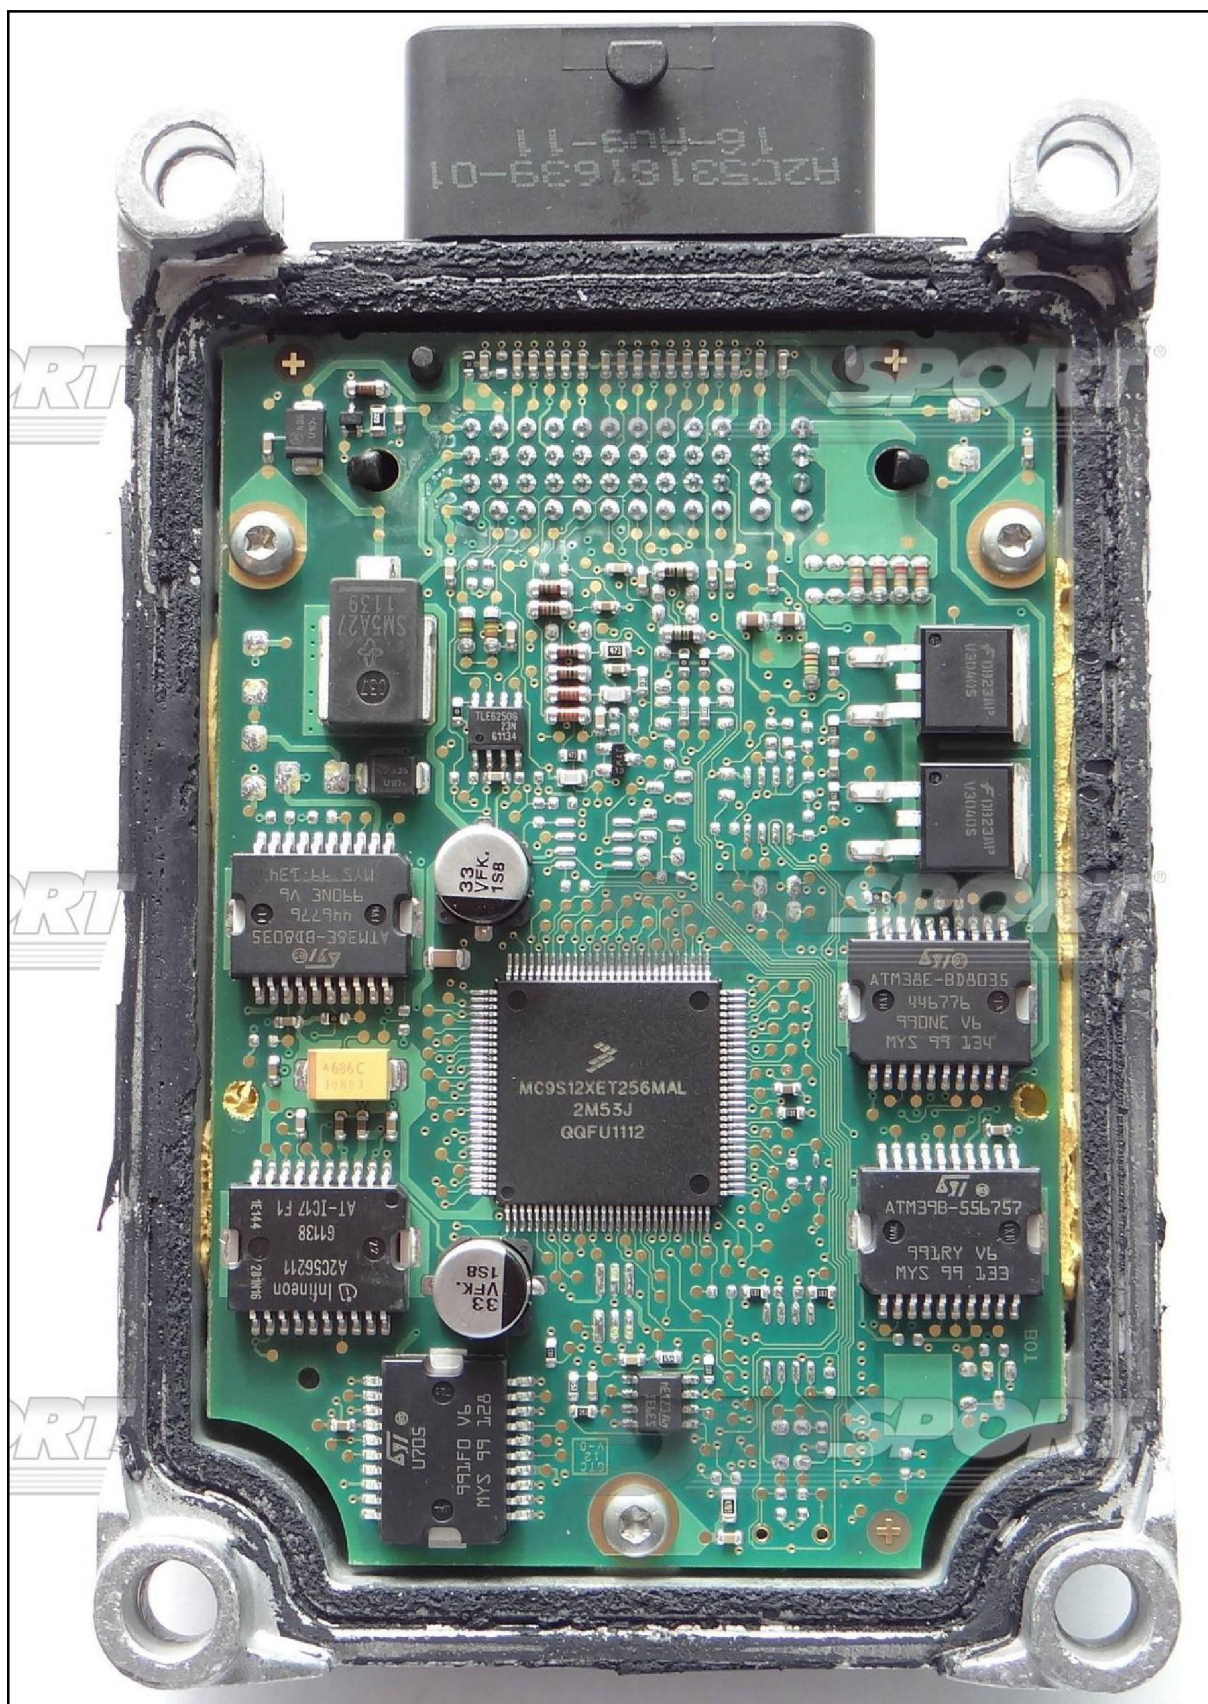


ECU CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

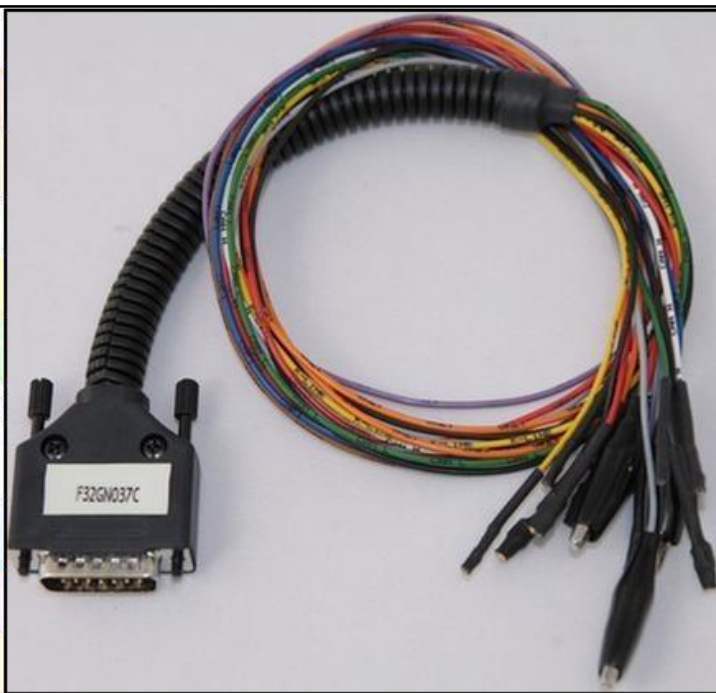

BDM FREE WIRES CONNECTION

Connect the F34NTF051 wiring as shown here below:

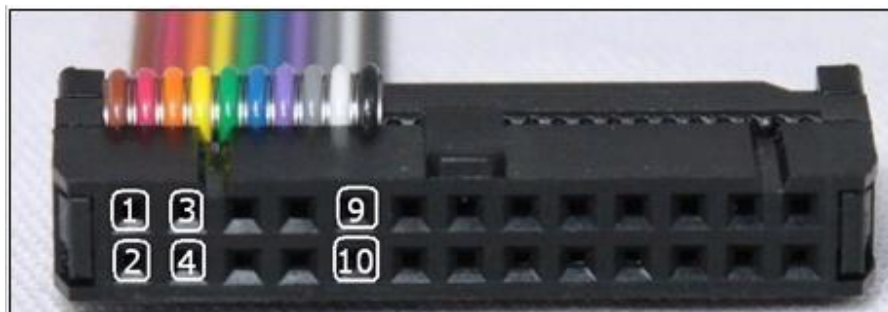

Pin	Colore Colour
1	Non usato Not used
2	Non usato Not used
3	Non usato Not used
4	Non usato Not used
5	Verde Green
6	Blu Blue
7	Viola Violet
8	Non usato Not used
9	Non usato Not used
10	Non usato Not used

