



PLUGIN 422 :NEW TRASDATA

ECU upper side

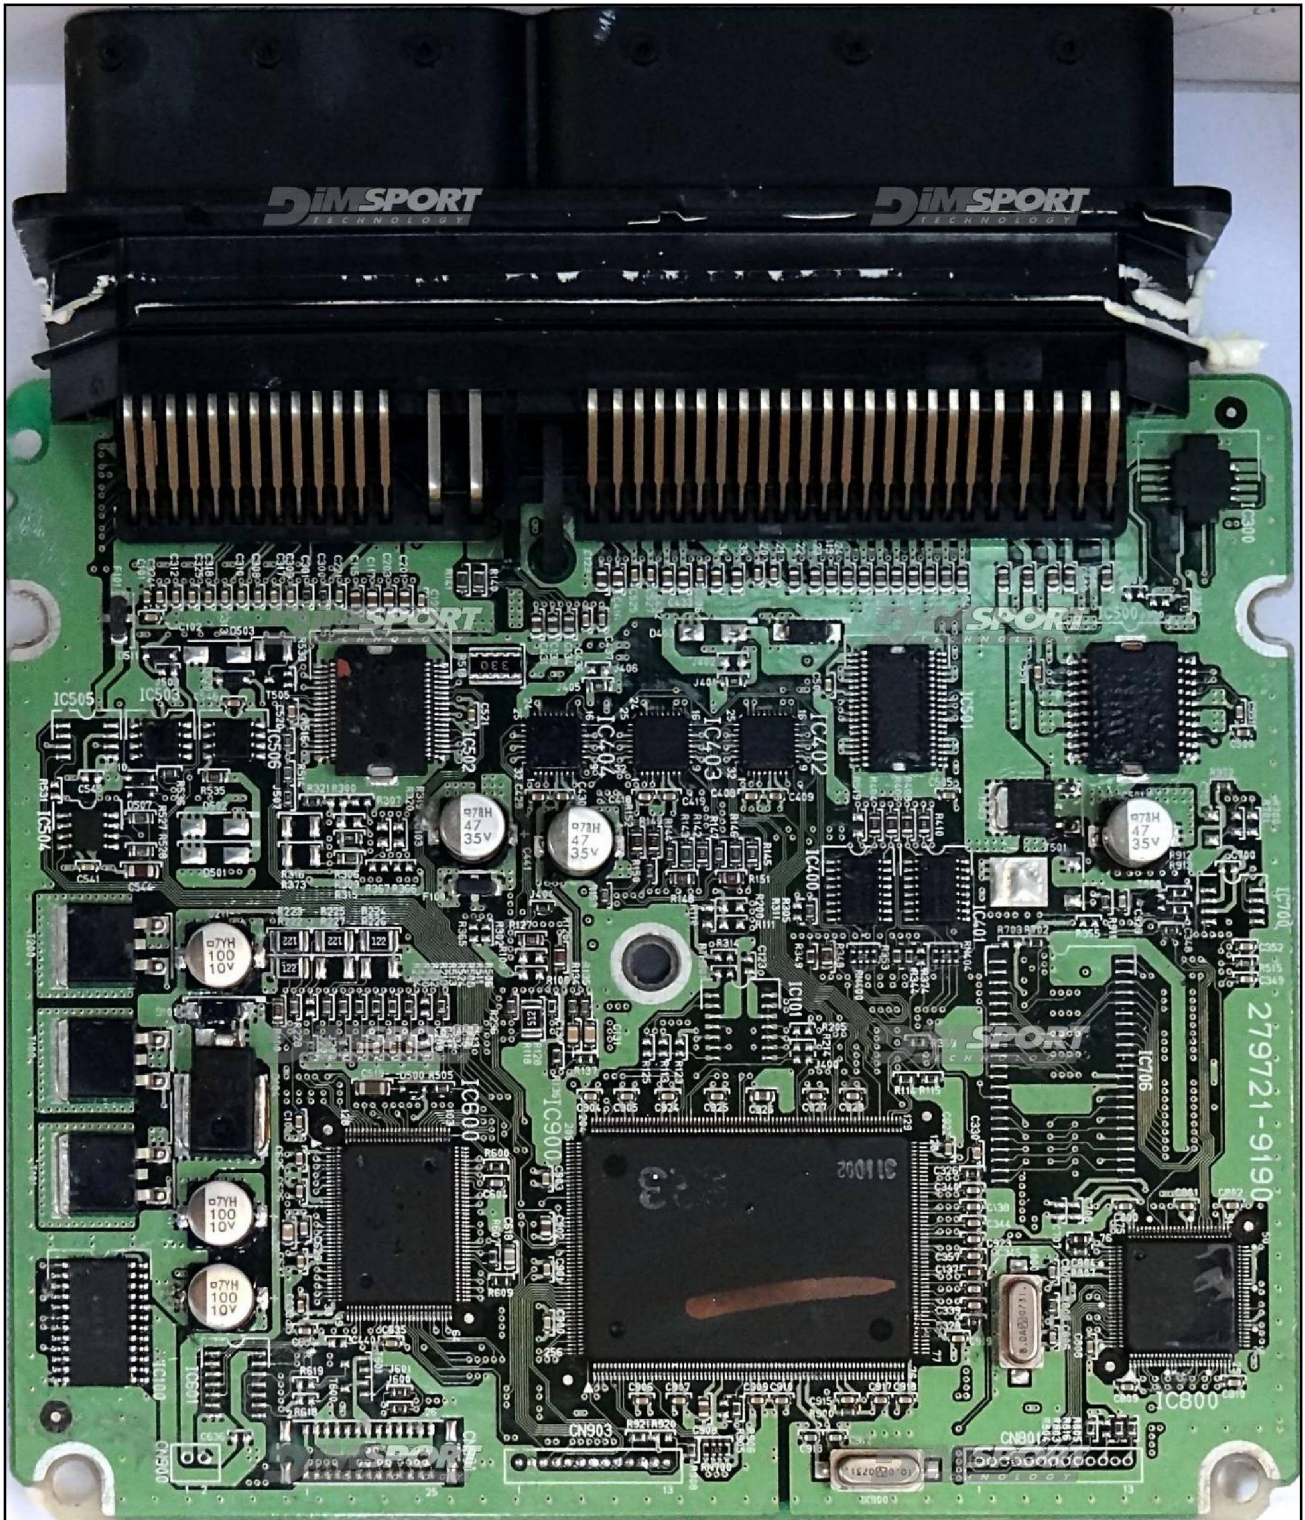

ECU lower side

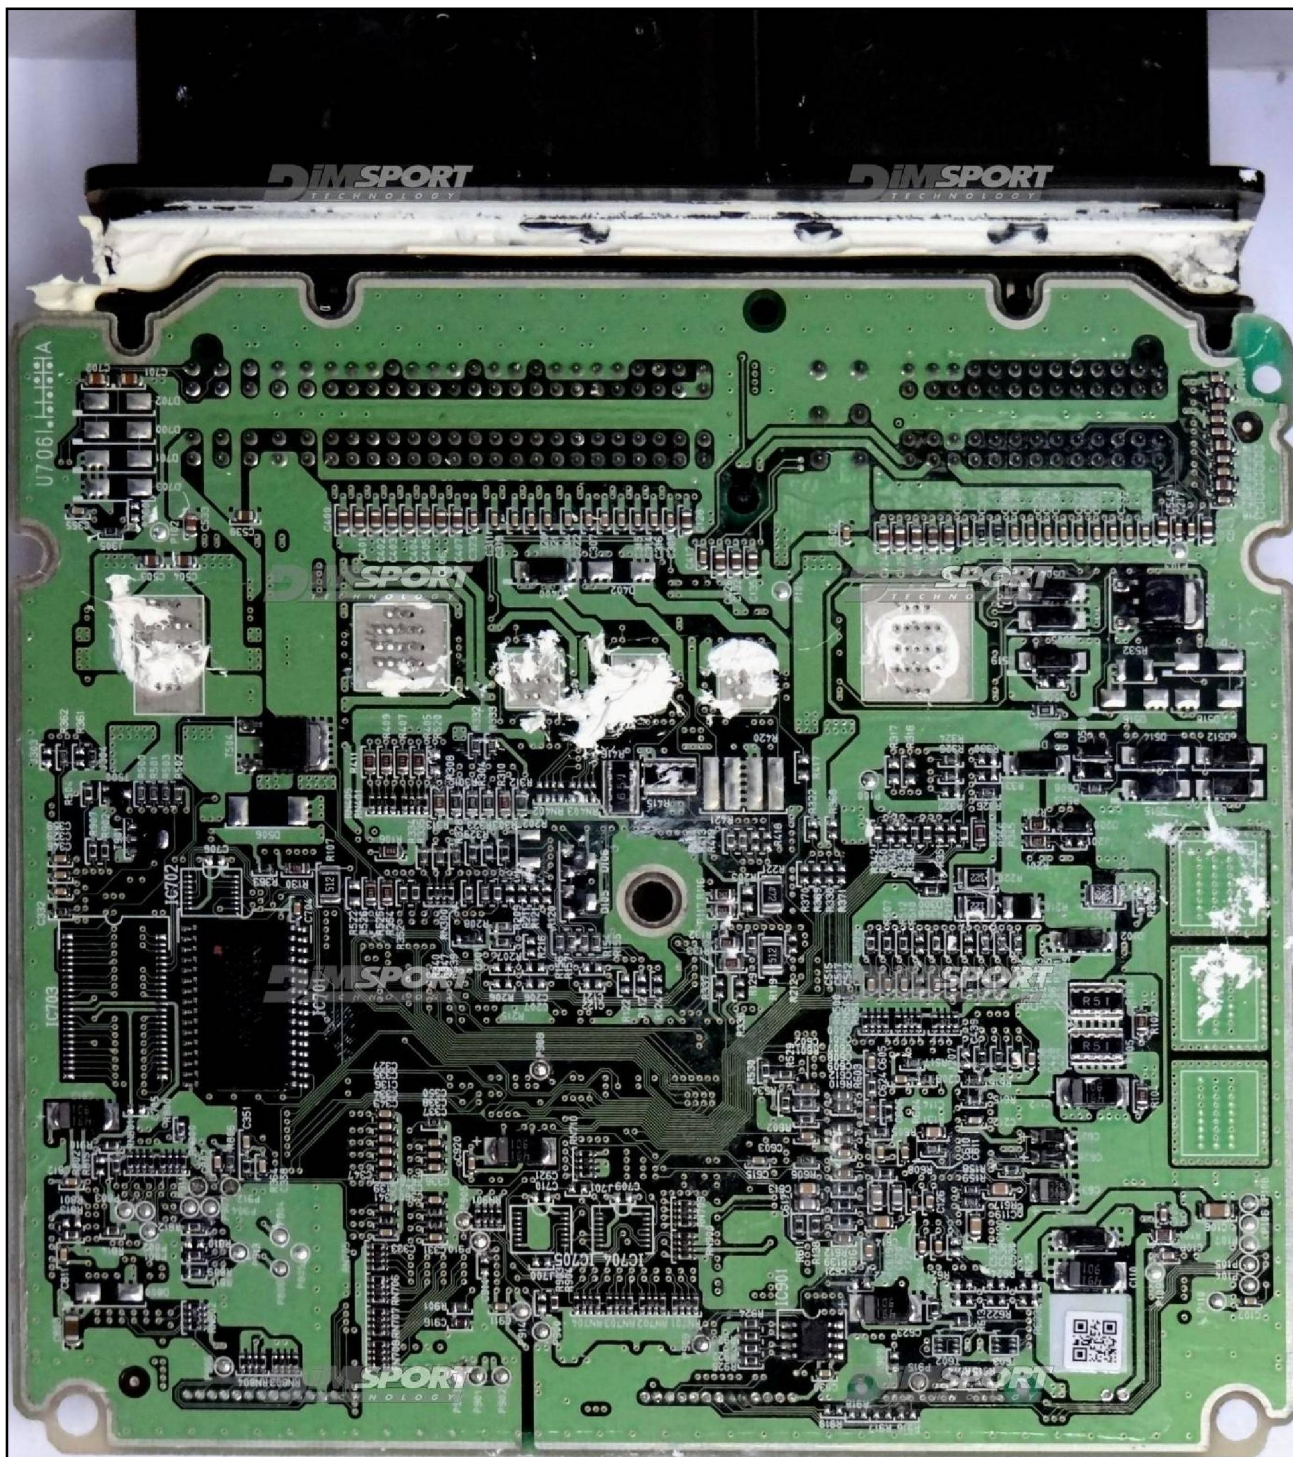


DIRECT CONNECTION


In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

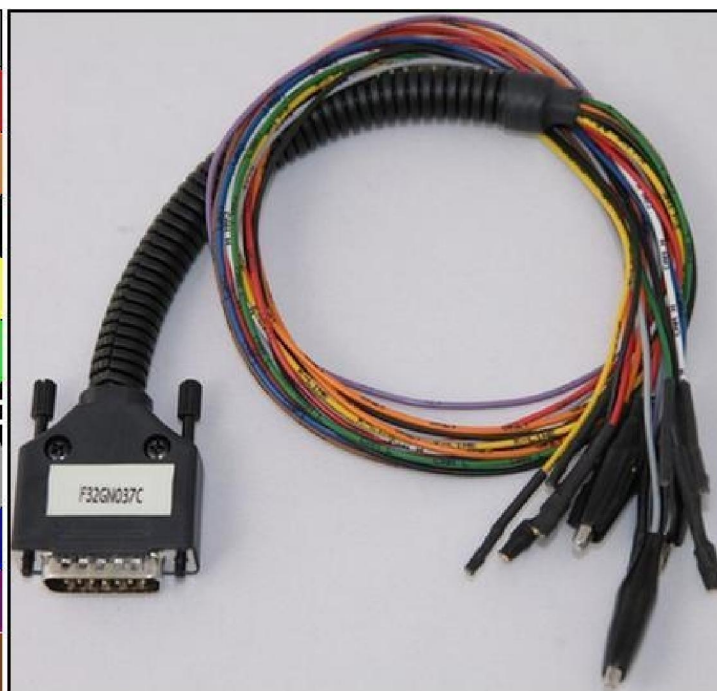

ECU CONNECTOR

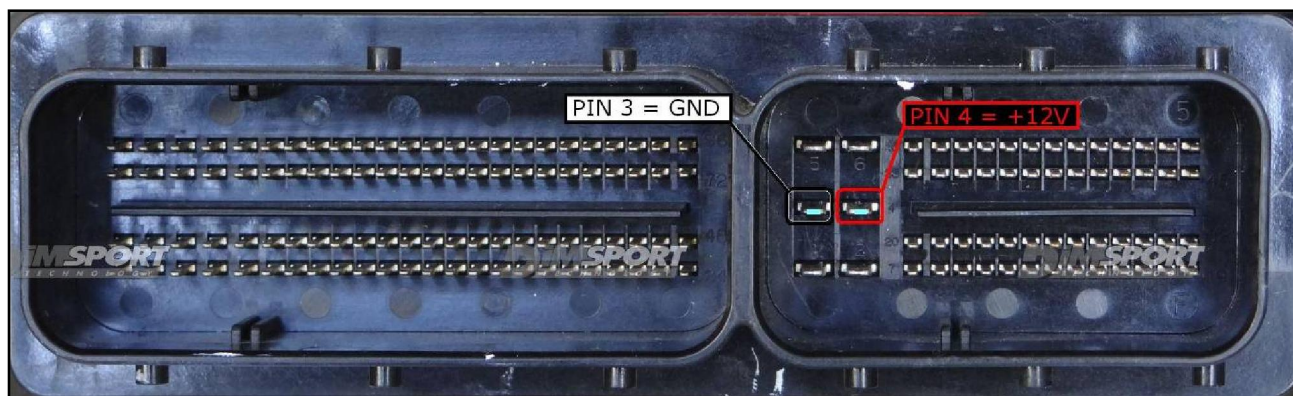


WARNING:

on this ECU you must use two different flat cables: one is for the READING procedure and one is for the WRITING procedure.

DIRECT CONNECTION – ECU READING:


For the READING procedure use the FLAT cable F34NTF53

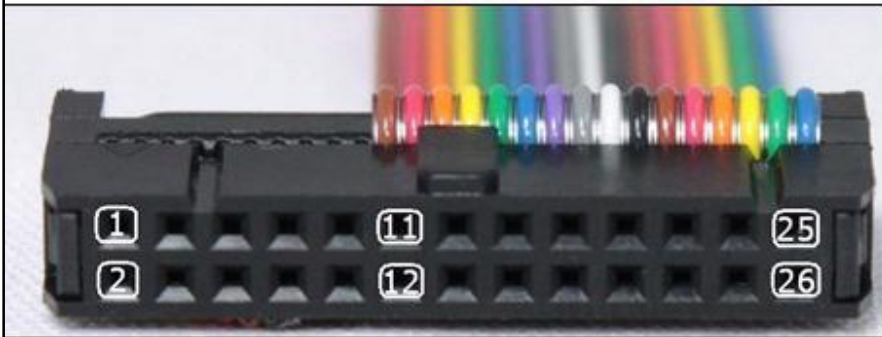			
Pin	Colore Colour		
11	Non usato Not used		
12	Non usato Not used		
13	Non usato Not used		
14	Non usato Not used		
15	Non usato Not used		
16	Blu Blue		
17	Viola Violet		
18	Grigio Grey		
19	Bianco White		
20	Nero Black		
21	Marrone Brown		
22	Rosso Red		
23	Arancio Orange		
24	Giallo Yellow		
25	Verde Green		
26	Non usato Not used		


For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film.
We suggest you to use fine grit glass-paper smoothing by gentle pressure
the connection lay by pins

For the reading procedure it is required a little short circuit (LINK) as shown in the picture here below. Such bridge is used for the READING ONLY, remove it after the reading procedure.

Upper side

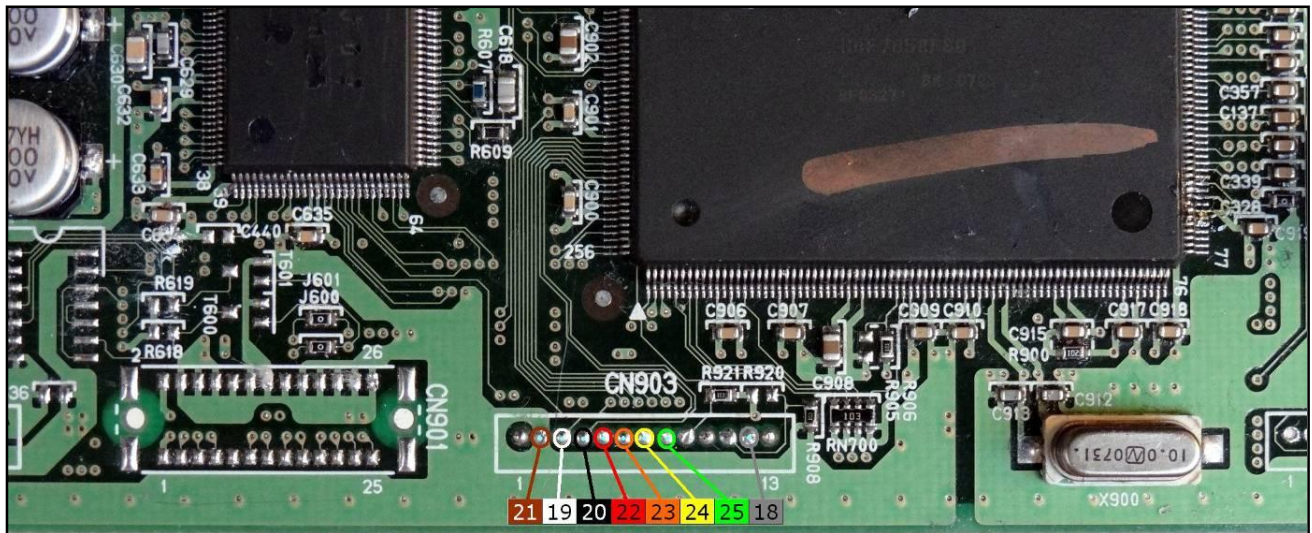


Lower side (link)

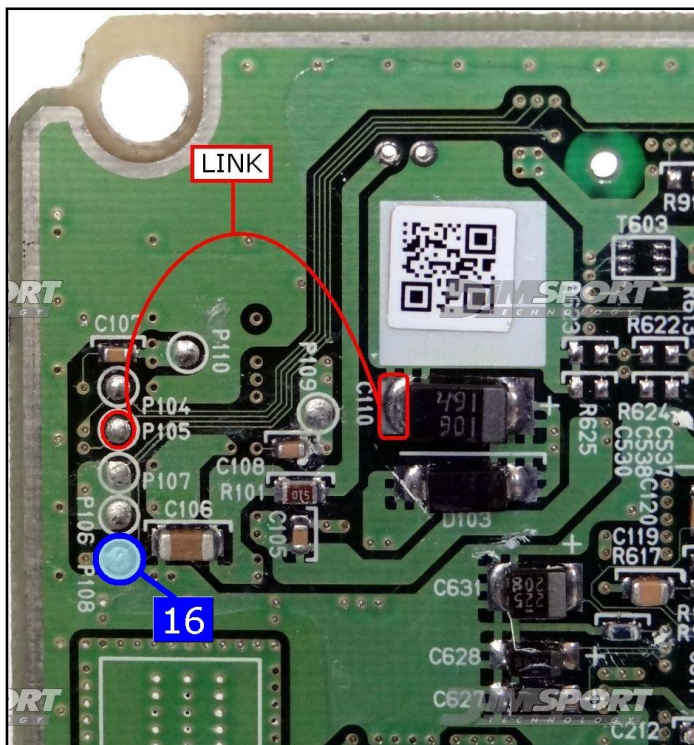


DIRECT CONNECTION – ECU WRITING:

For the WRITING procedure use the FLAT cable F34NTF51



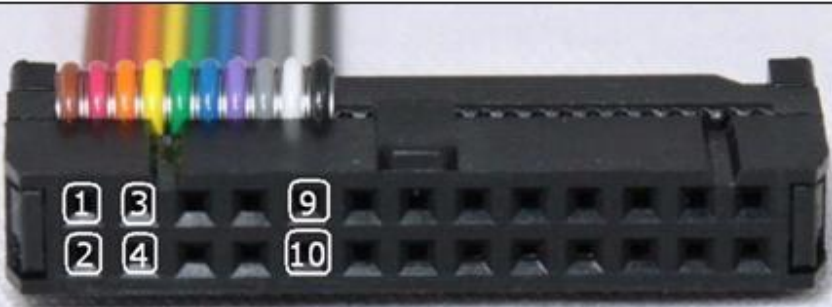
			
Pin	Colore Colour		
1	Marrone Brown		
2	Non usato Not used		
3	Non usato Not used		
4	Giallo Yellow		
5	Verde Green		
6	Blu Blue		
7	Viola Violet		
8	Grigio Grey		
9	Bianco White		
10	Nero Black		


For a correct soldering procedure clean very well the soldering lay-by pins from the plastic film. We suggest you to use fine grit glass-paper smoothing by gentle pressure the connection lay by pins. The lay by pins are placed on the lower side of the ECU.

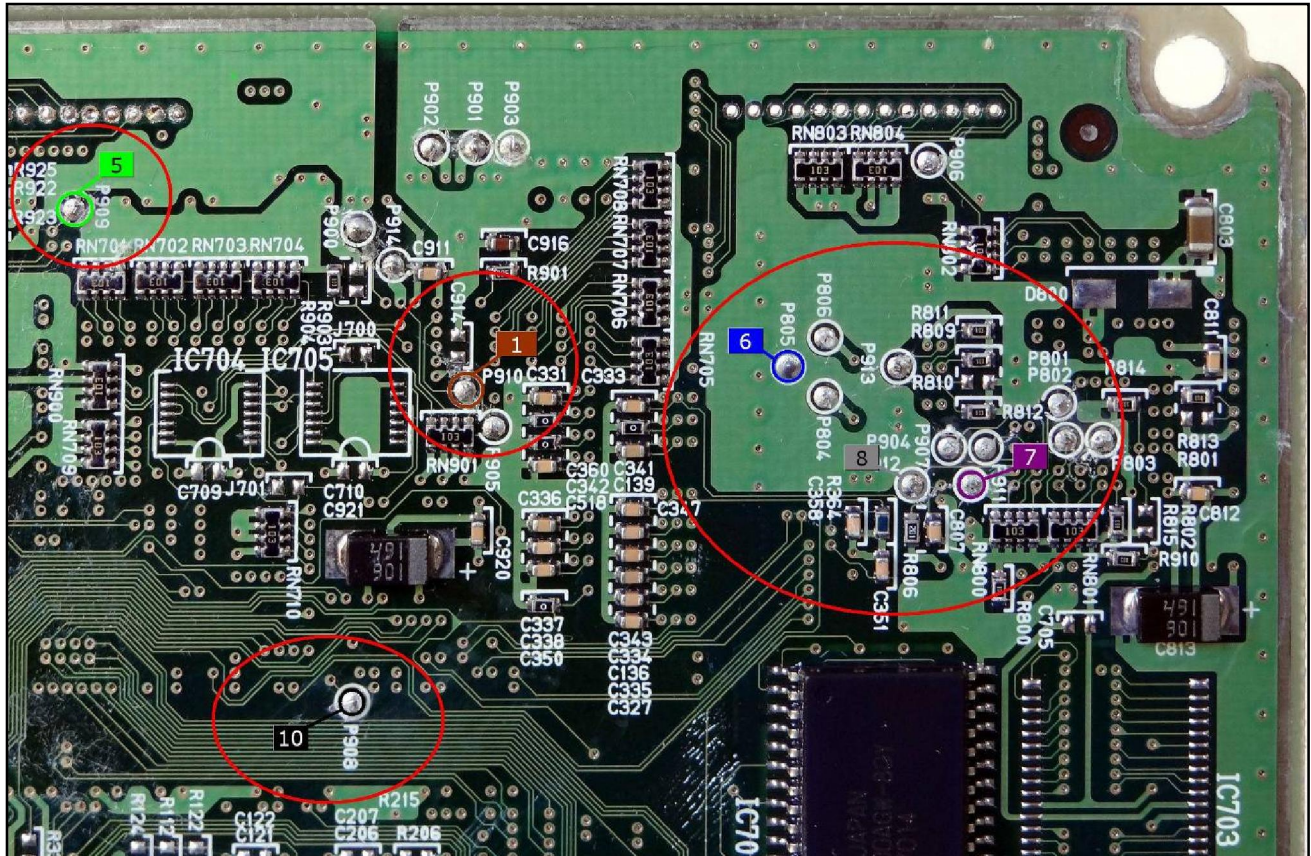

ECU READING – DIMA CONNECTION

Power the ECU with the wiring F32GN037C. Use the DIMA adapter F34NTD016. For the reading procedure it is necessary to use the lay by pins placed on the lower side of the ECU. It is necessary to create the LINK described in the picture and to connect the pin shown here below to the WDT connector of the DIMA ADAPTER.

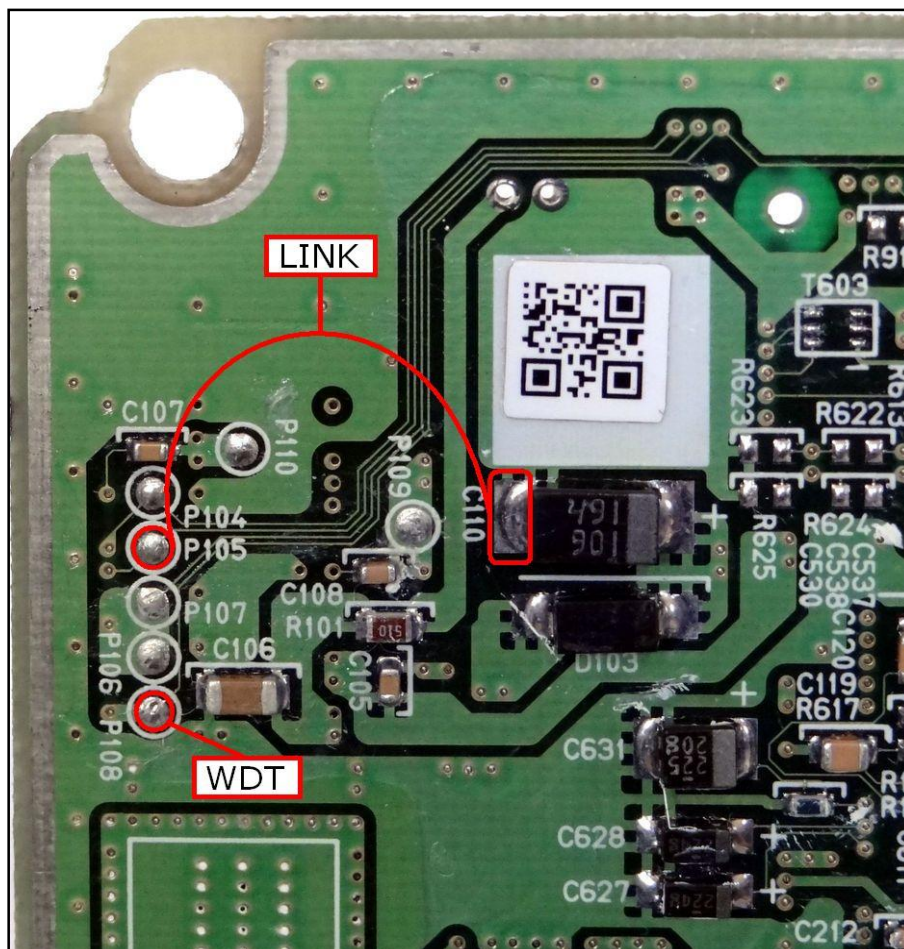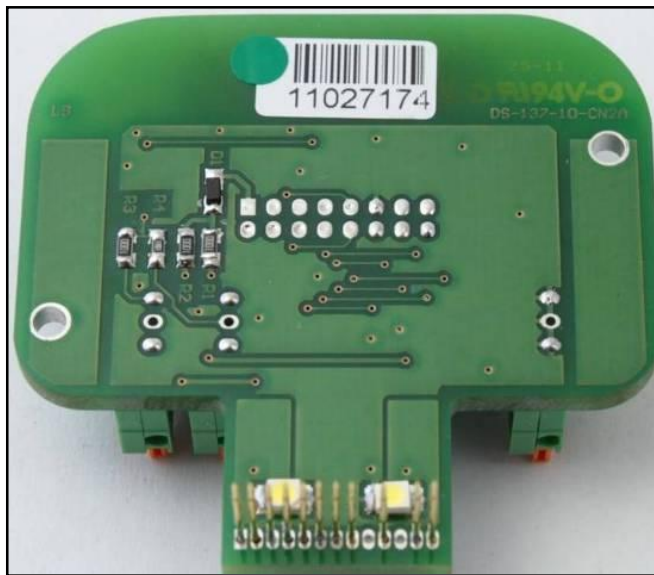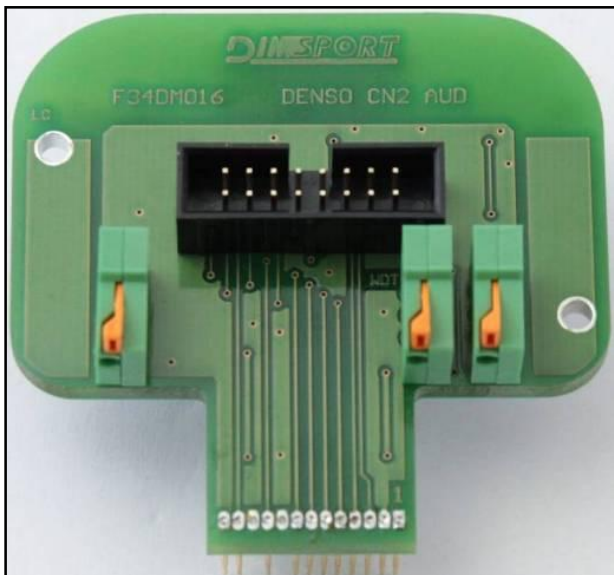

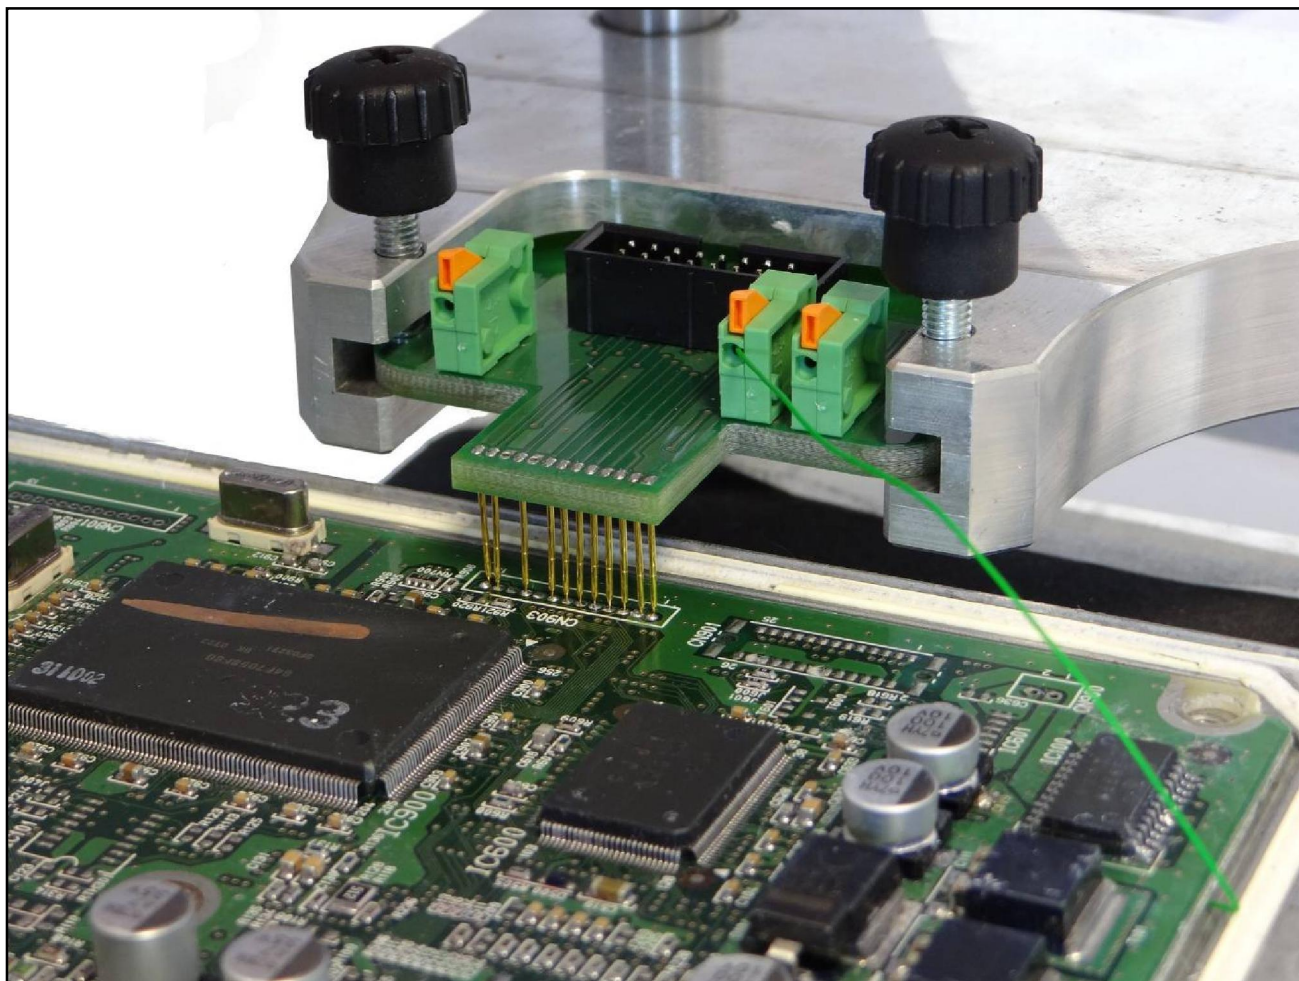

ECU WRITING – DIMA CONNECTION

It is not possible to use the DIMA for the ECU writing.