



PLUGIN 948 : NEW TRASDATA

In order to connect to the ECU use the CABLE F32GN037C.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

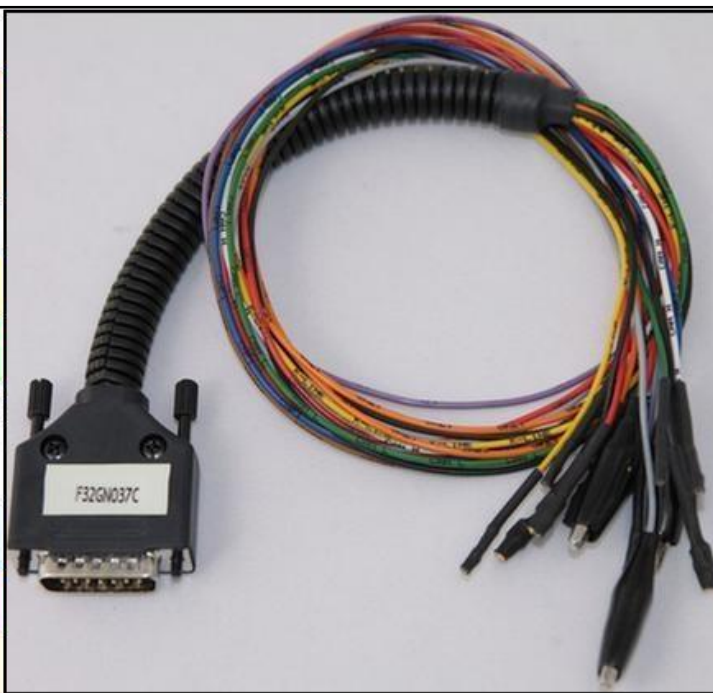

ECU CONNECTOR

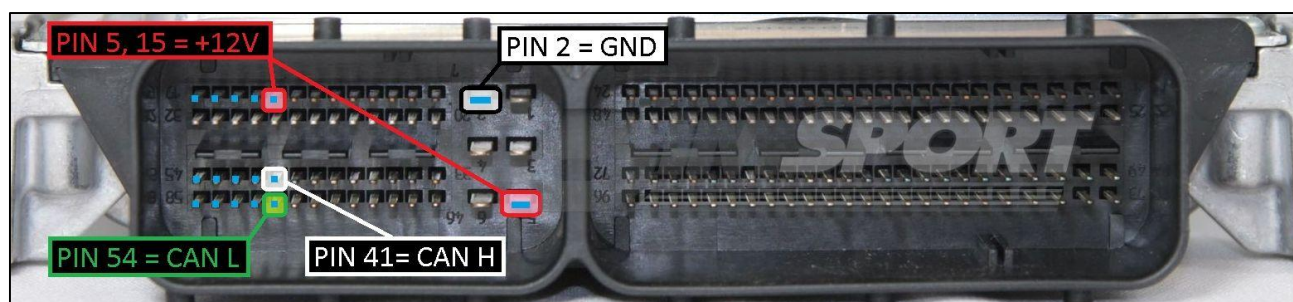


ECU equipped with OM651 SOLENOID system




BOOT/CNF1 DIRECT CONNECTION

Connect the GREY & BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	BOOT
BLU BLUE	CNF1

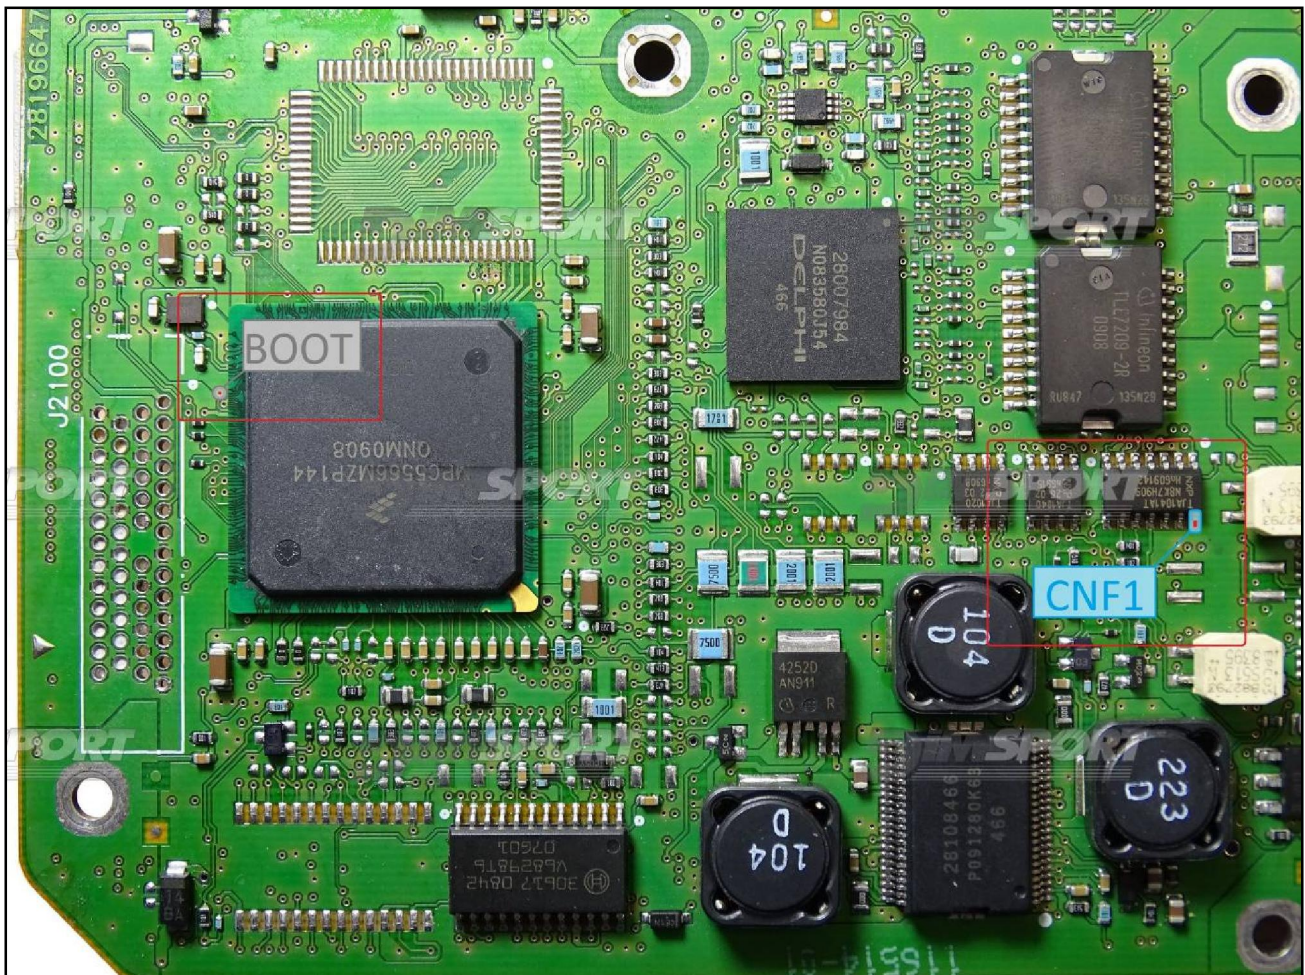


ECU equipped with OM651 PIEZOTEC system

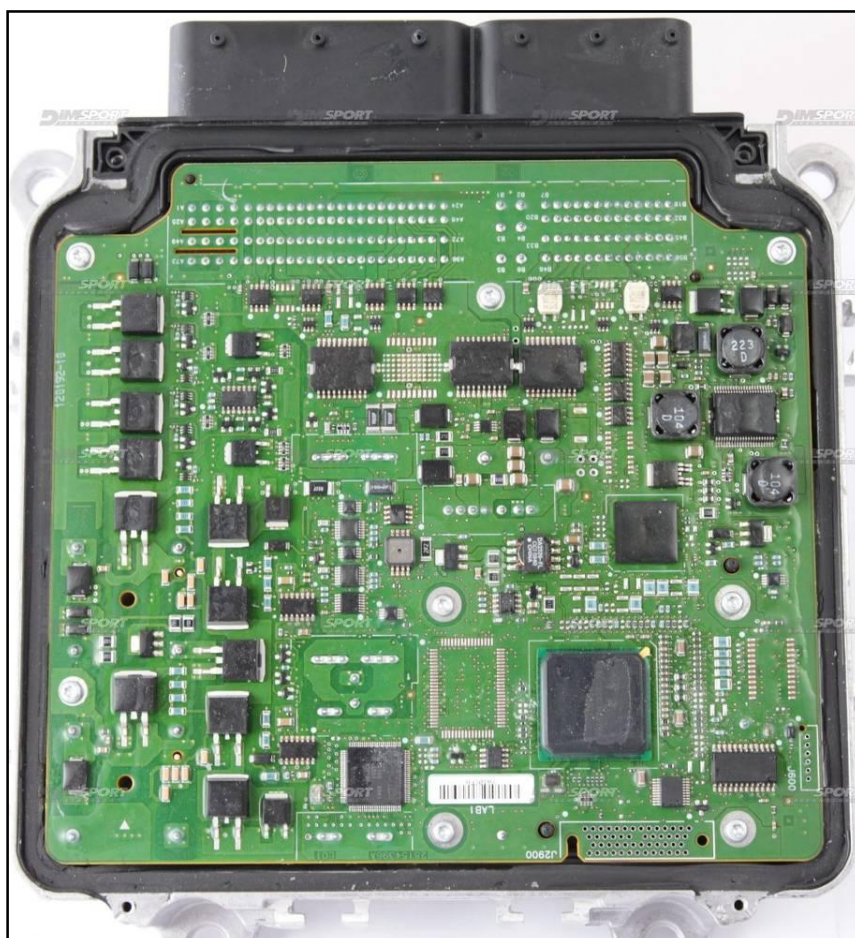

BOOT/CNF1 DIRECT CONNECTION

Connect the GREY & BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	BOOT
BLU BLUE	CNF1

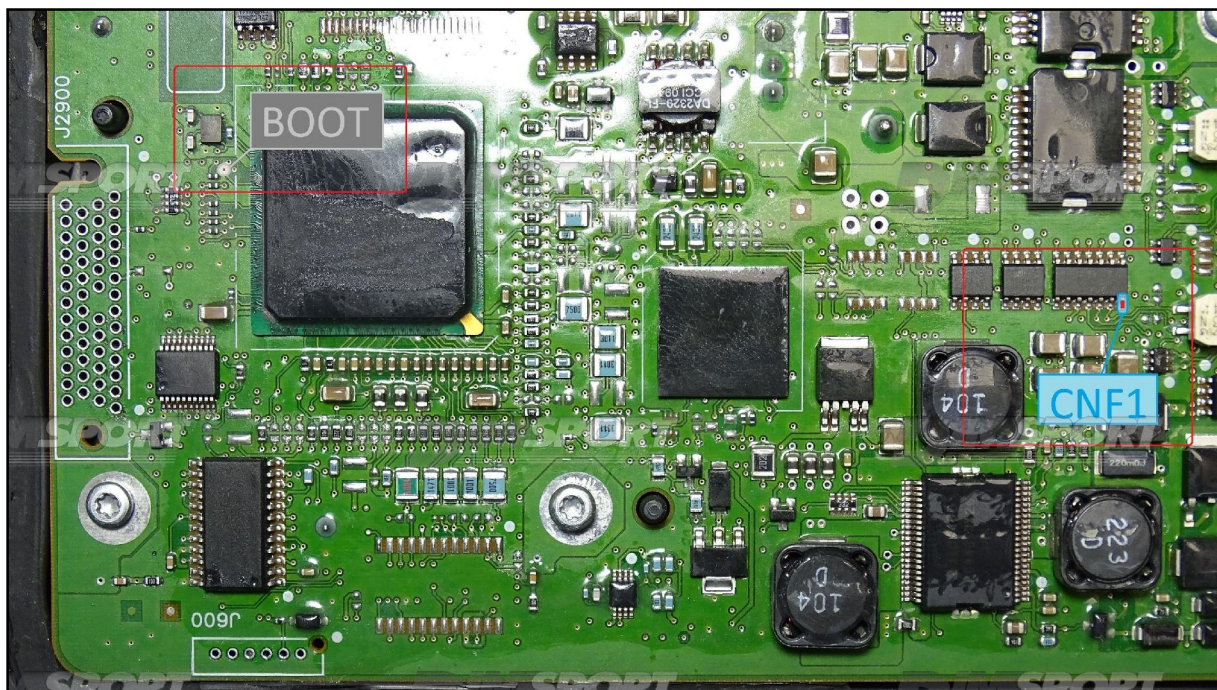**WARNING**

If instead of the 14-pin component, used for CNF1 signal, it is present a 8 pins component, the CNF1 connection must NOT be carried out, it is necessary the BOOT connection ONLY.

