

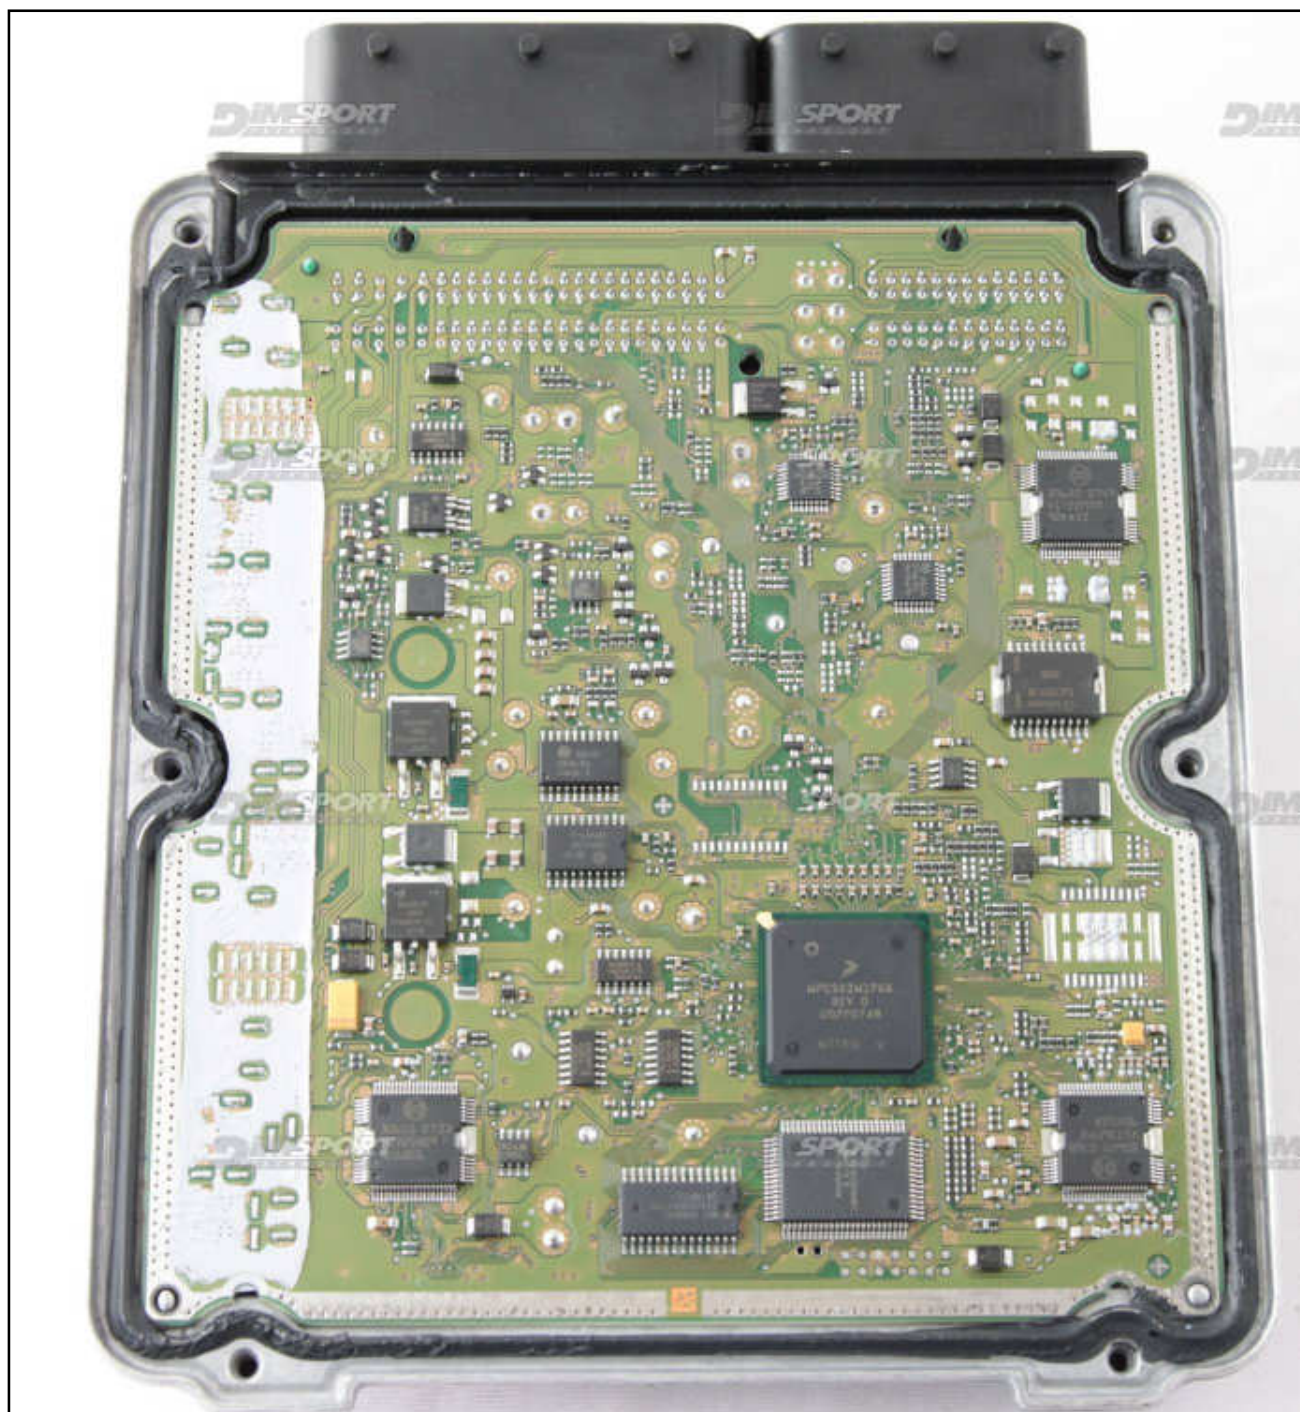


**PLUGIN 335 : NEW TRASDATA**

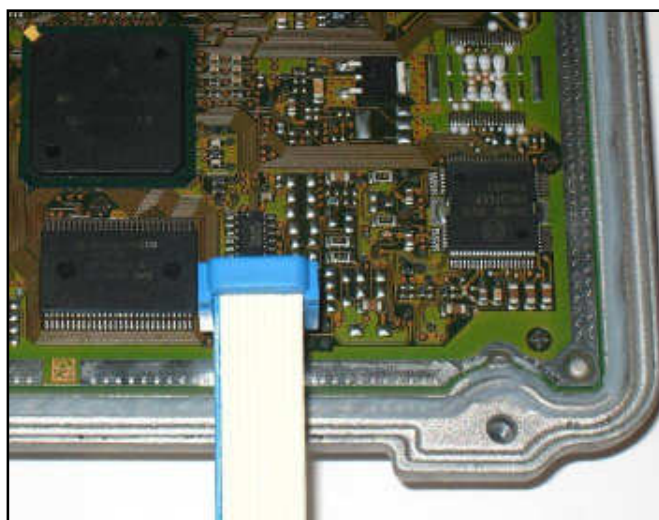

**DIRECT CONNECTION**

Among these 14's we will use the first 10's from the left to solder the strips or guiding pin strips.  
**The coloured stripe of the flat cable identifies the pin number one and MUST face left (you should watch the ECU with the connector placed upwards ( EPROM side ) ).**

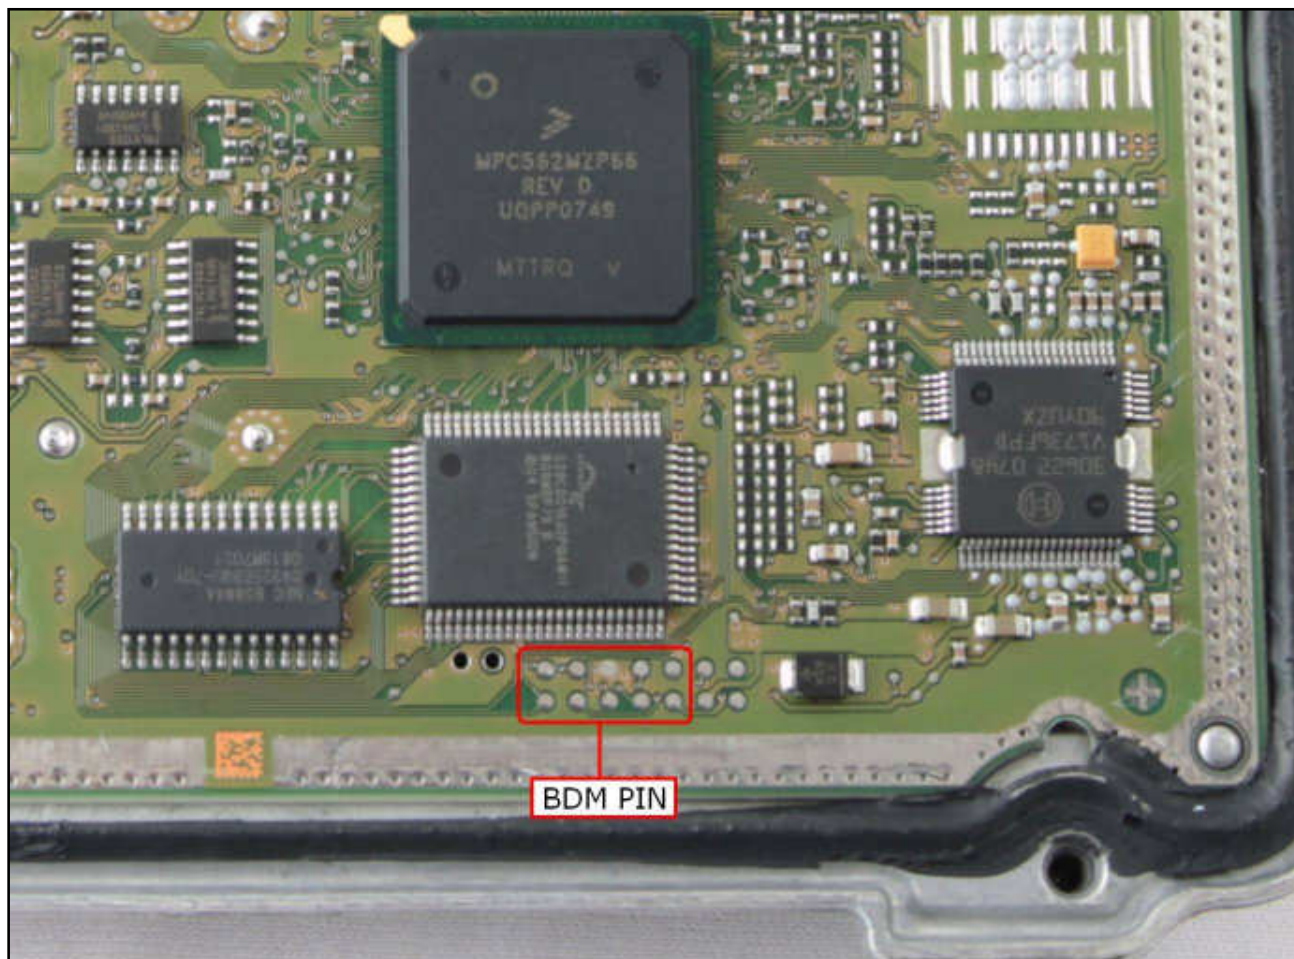

**DIMA CONNECTION F34DM002**



