

NEW TRASDATA : PLUGIN 935 NT_DELPHI_CRD3.E1_TC1793_IROM_MEB


Supported ECU models:

CRD3.E

CRD3.E1

CRD3P.B0

CRD3P.D1

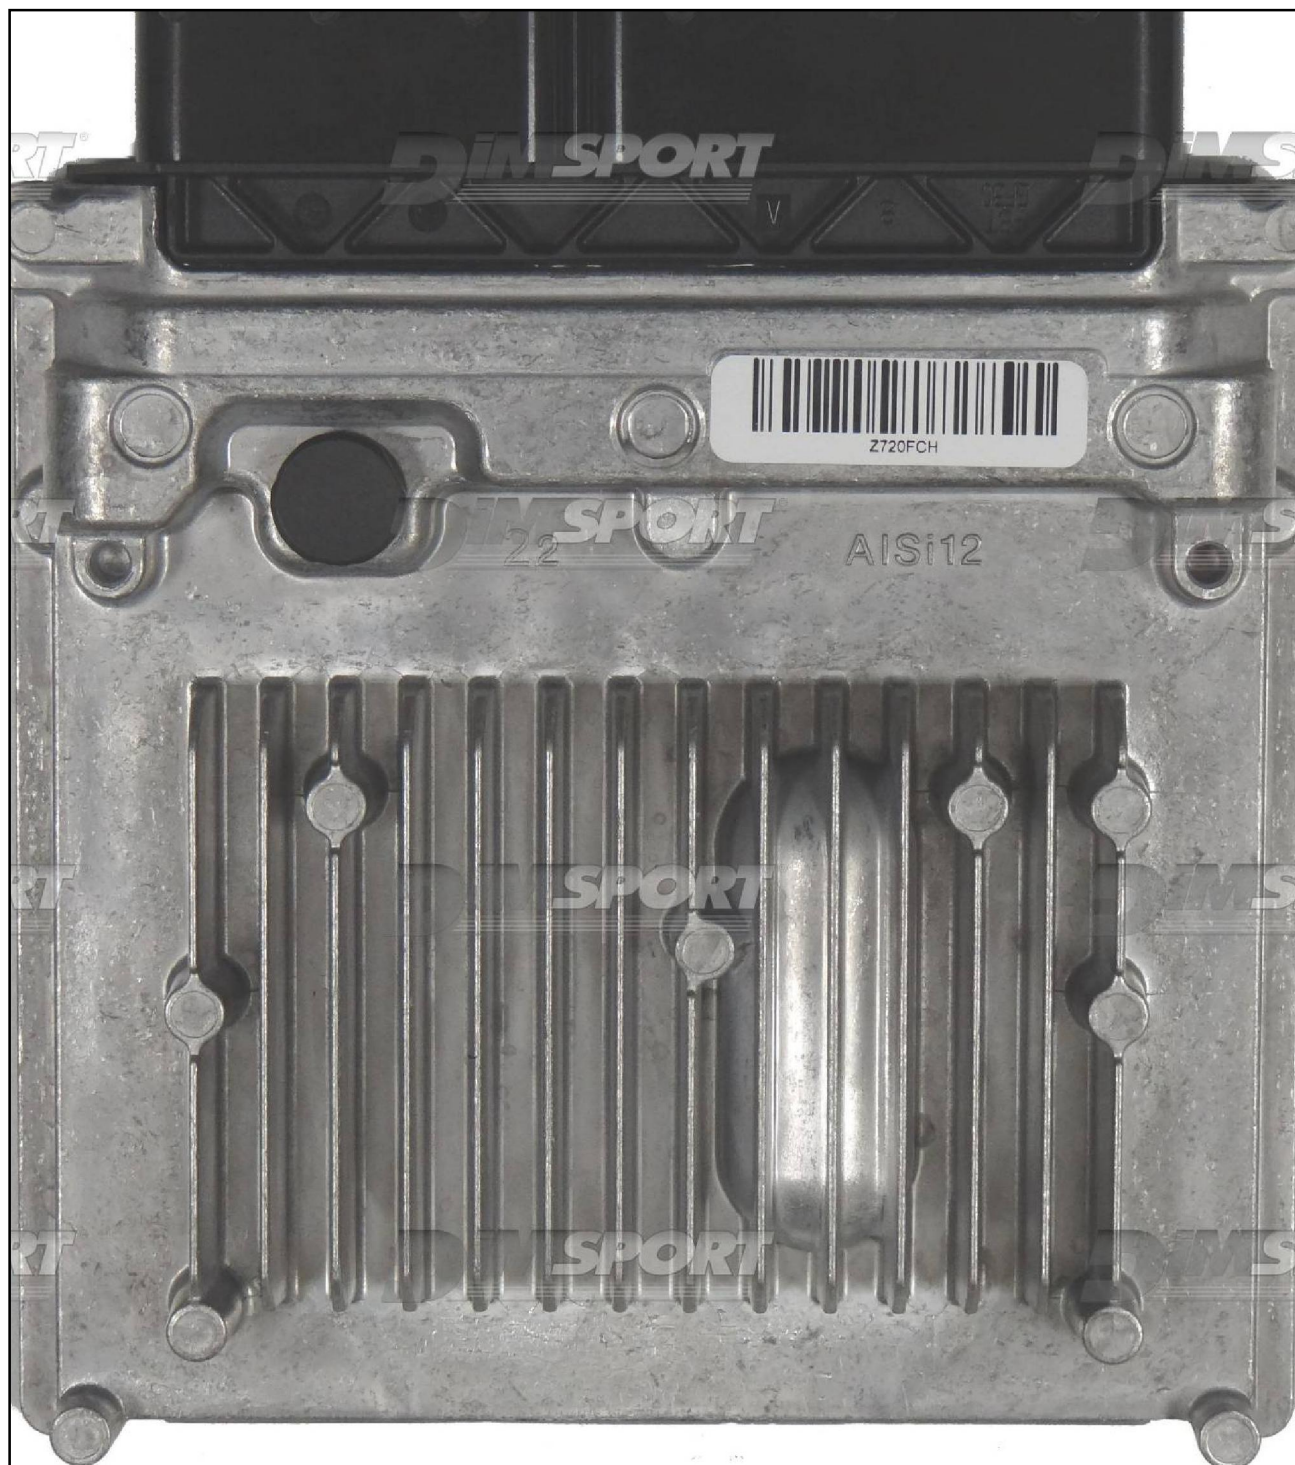







ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

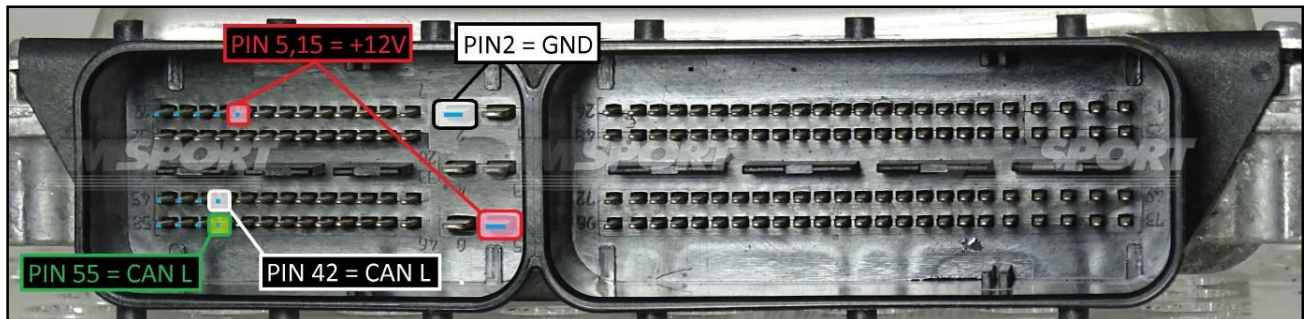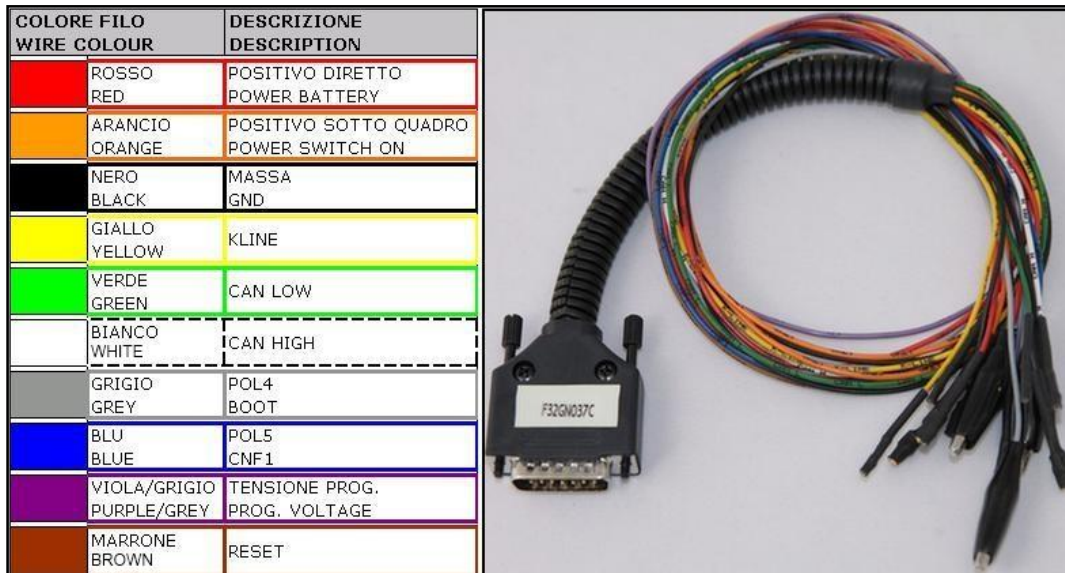

DIRECT BOOT&CNF1 CONNECTION

Connect the GREY&BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

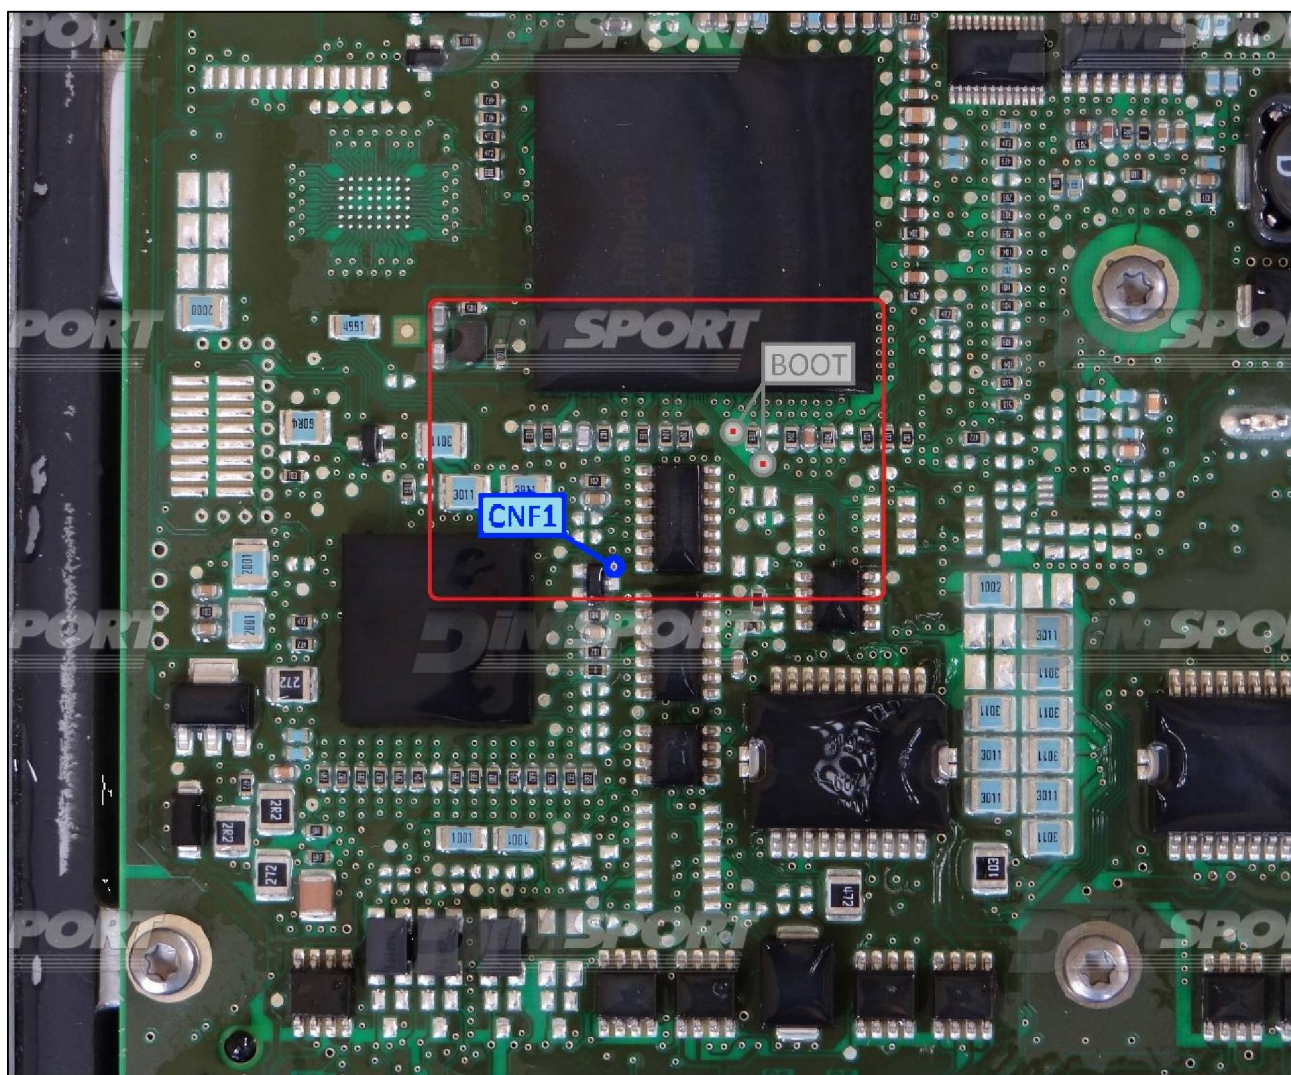CONNECTION 1**WARNING:**

if connection 1 does not work, you can use another pad for the CNF1 signal, as shown in the following picture connection 1

CONNECTION 2