



PLUGIN 1125 : NEW TRASDATA

ATTENZIONE : per una corretta identificazione della centralina è necessario aprire la ECU e verificare sempre che i numeri serigrafati sulla scheda siano gli stessi di quelli sulla foto del manuale, non affidarsi alle etichette del coperchio della ECU.

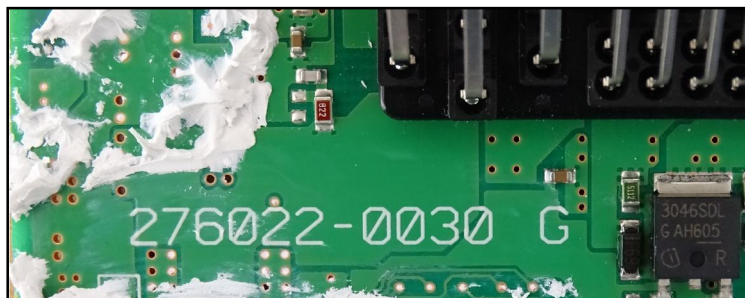

COVER SIDE

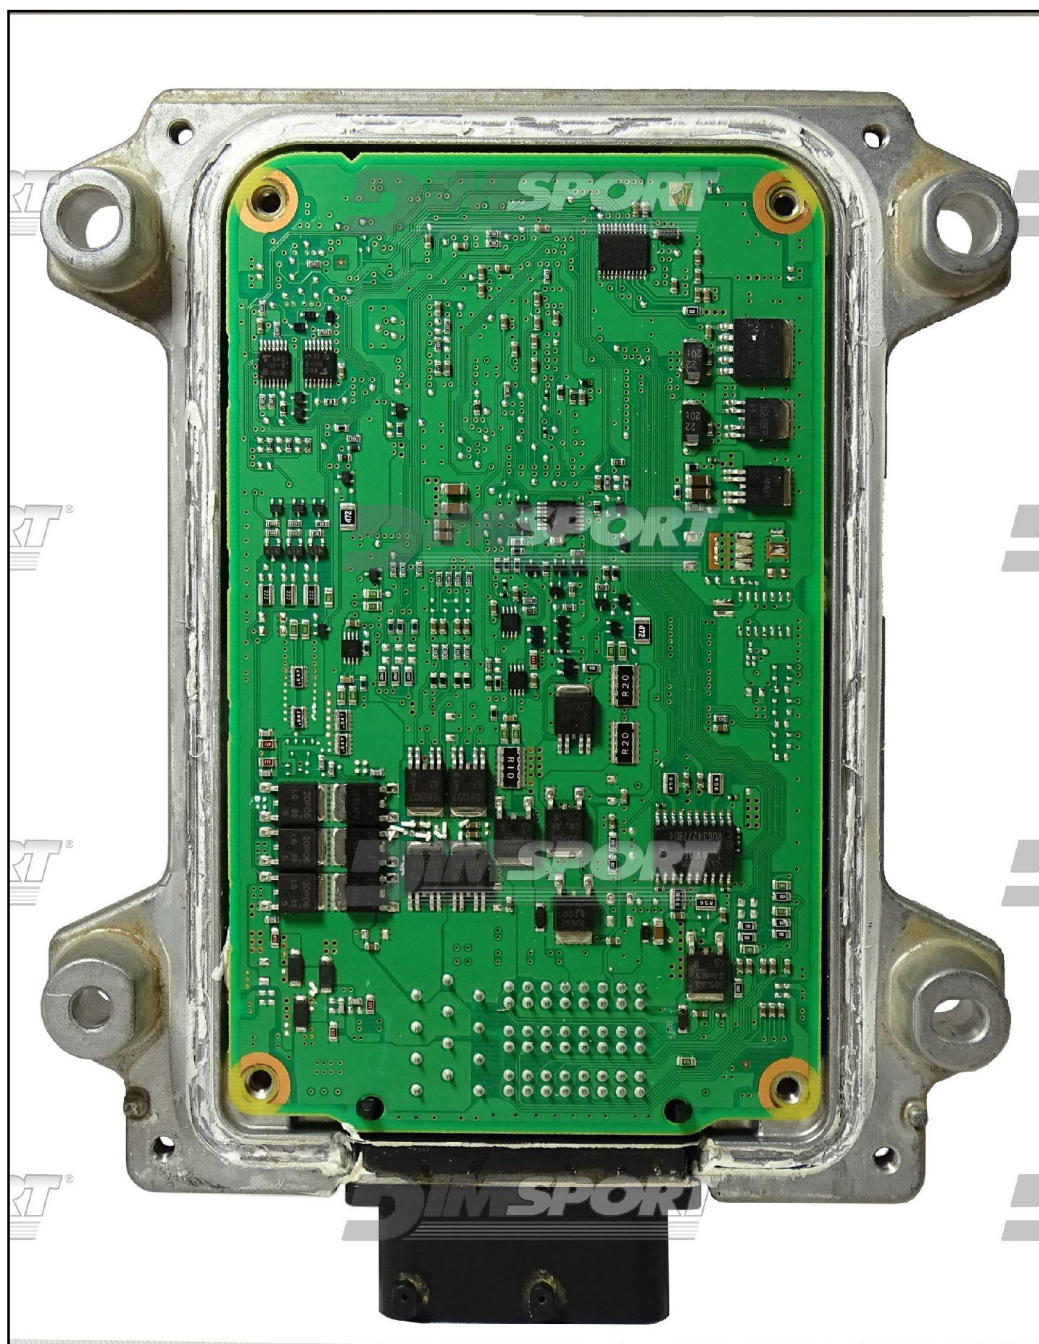

PROCESSOR SIDE





ECU CONNECTOR

In order to connect to the ECU use the cable F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

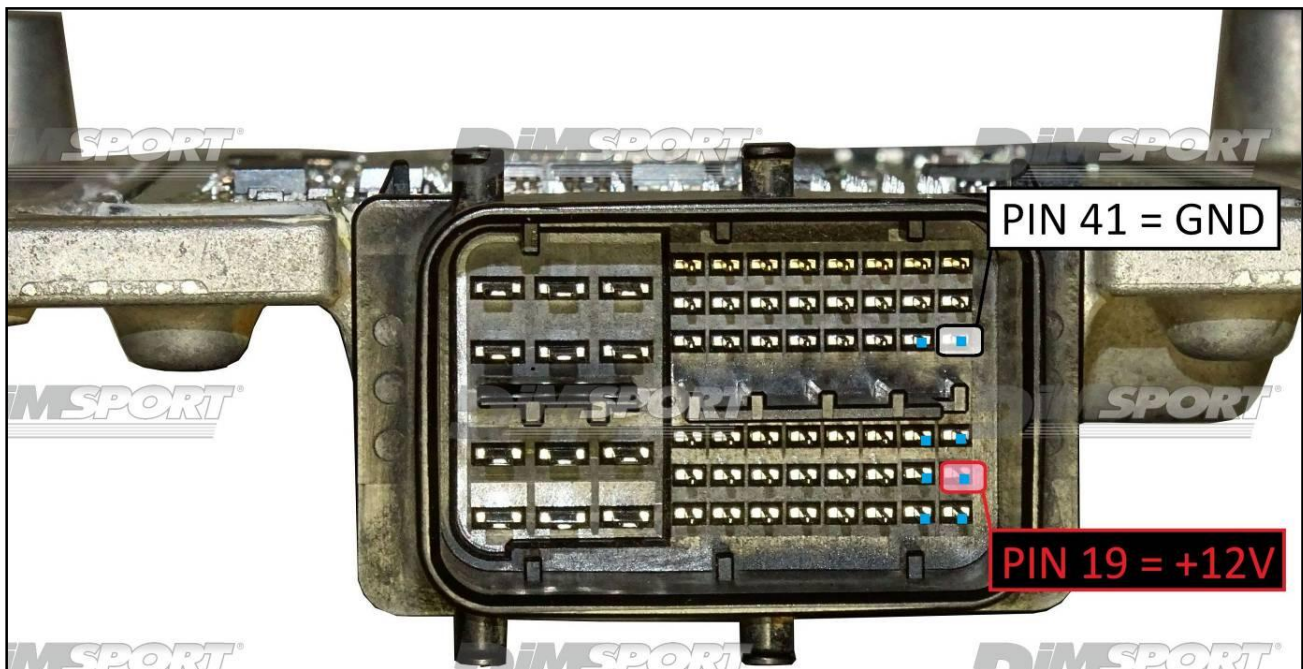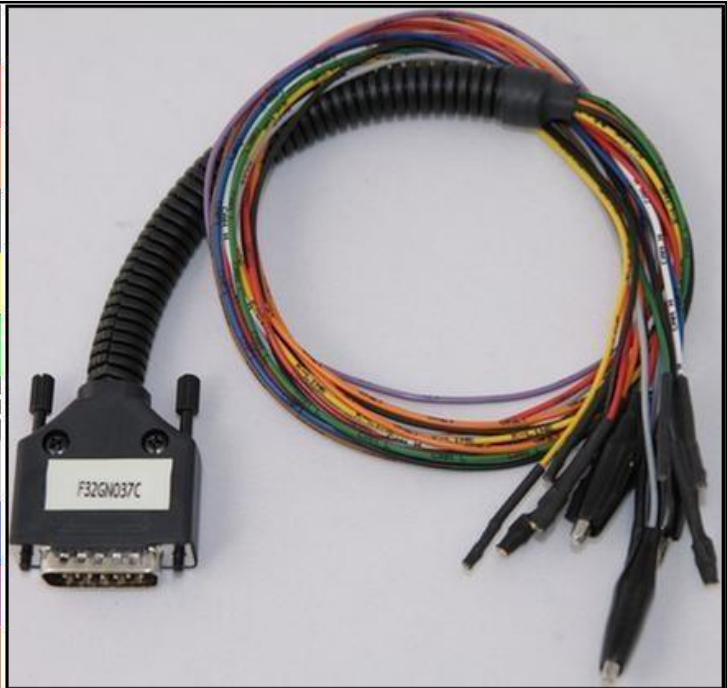

F34NTA21 SOLDERING ADAPTER CONNECTION




In order to communicate with the ECU it is necessary to have the F34NTA21 soldering adapter and proceed with the following operations:

- identify the communication pads placed on the processor side of the motherboard
- For a correct F34NTA21 adapter base soldering procedure clean very well the lay-by pins from the plastic film. We suggest you a smoothing by gentle pressure using a fine grit glass-paper.



Solder the F34NTA21 adapter base on the motherboard taking care of the correct PIN1 positioning and avoiding any short circuits.

At the end of the work you can leave the base of the F34NTA21 adapter soldered on the ECU motherboard.

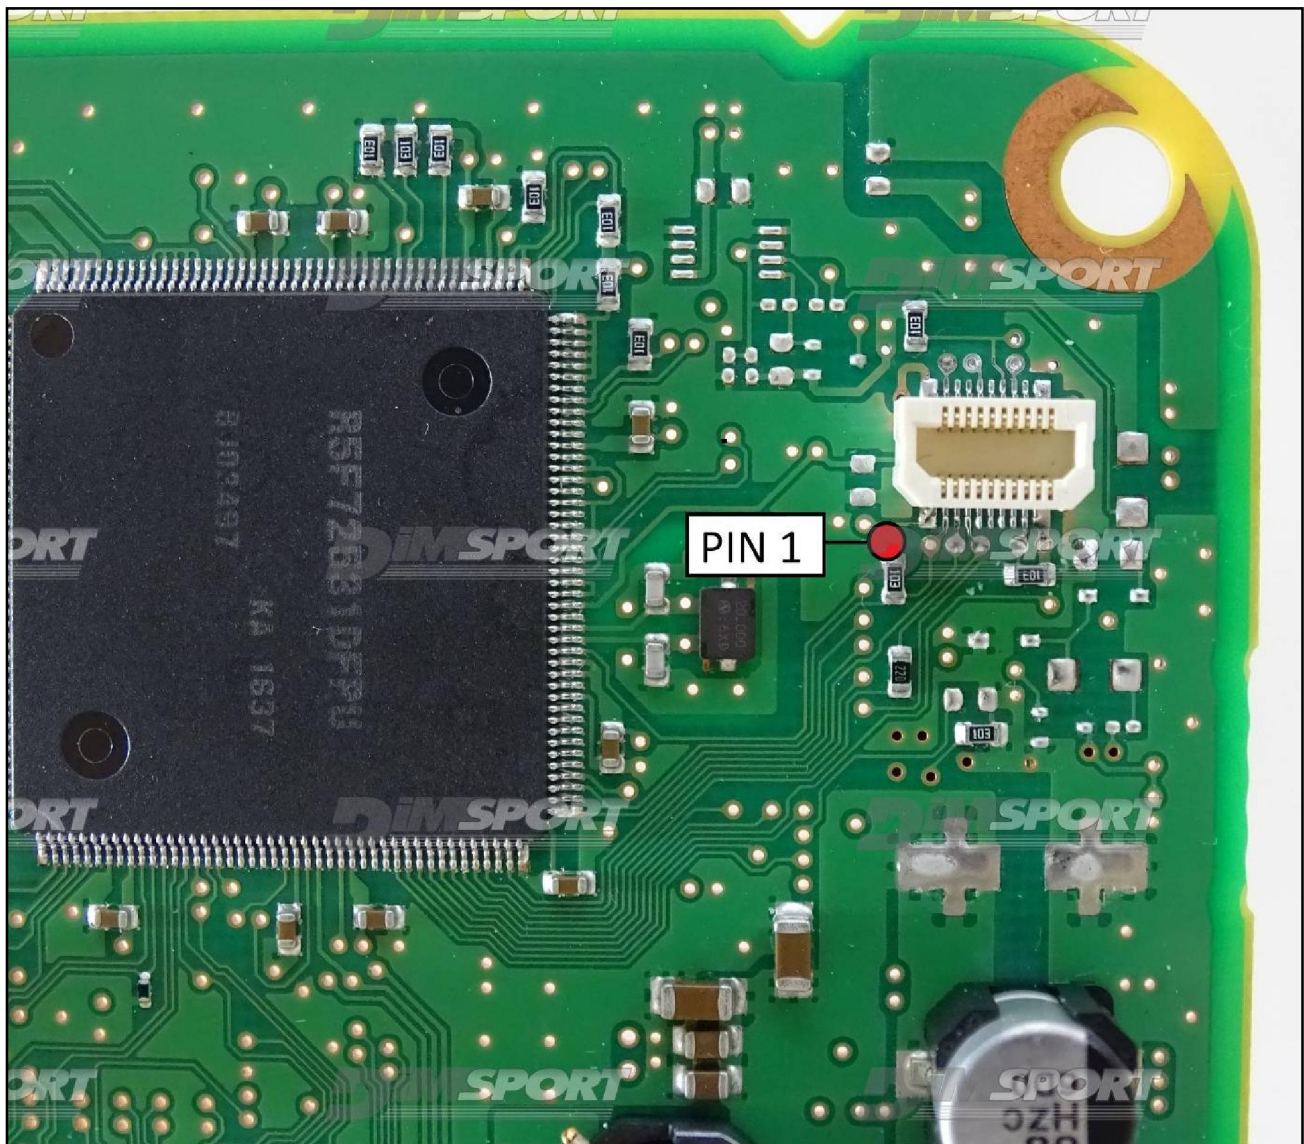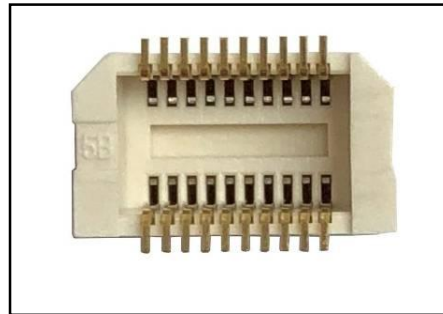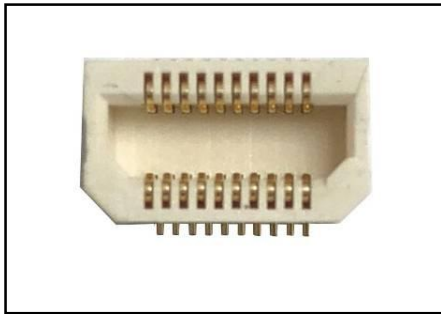

Use the flat F34NTF03 to connect the F34NTA21 adapter to the digital port of the New Trasdata

