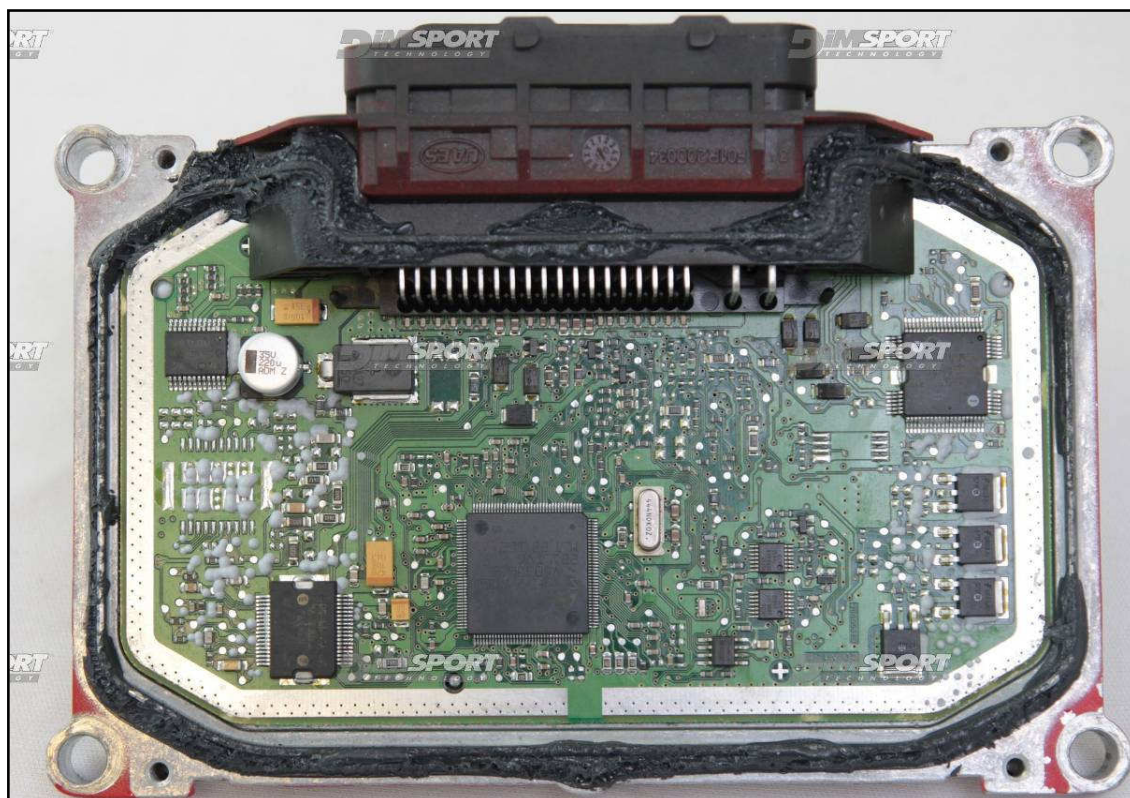


**PLUGIN 439 :NEW TRASDATA**

The lay-by pin is placed in the lower part of the ECU.

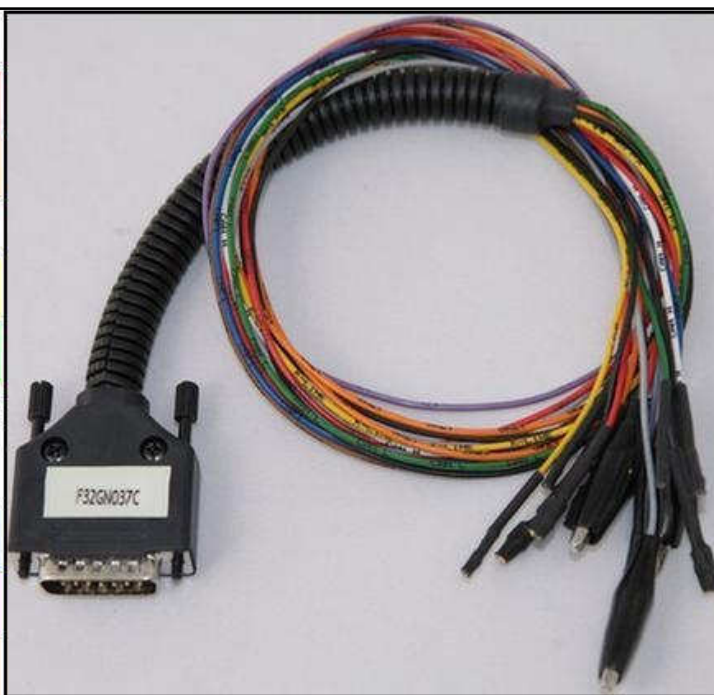
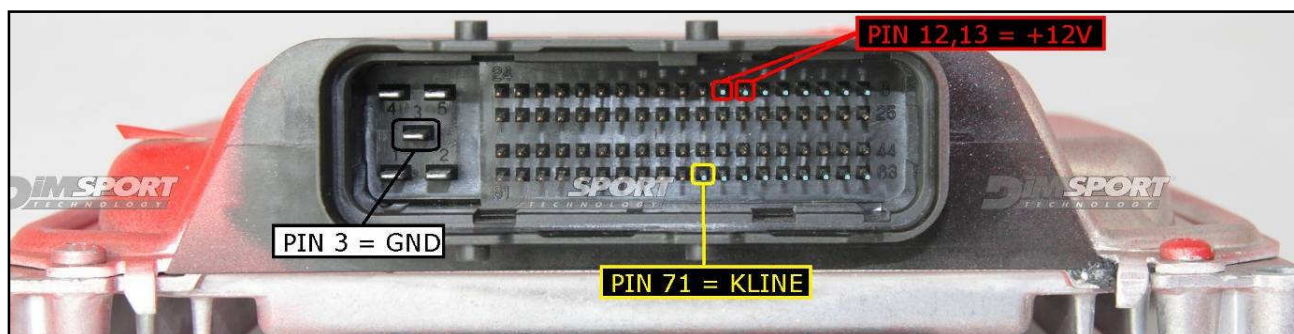


**DIRECT CONNECTION**

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

| COLORE FILO<br>WIRE COLOUR  | DESCRIZIONE<br>DESCRIPTION               |
|-----------------------------|------------------------------------------|
| ROSSO<br>RED                | POSITIVO DIRETTO<br>POWER BATTERY        |
| ARANCIO<br>ORANGE           | POSITIVO SOTTO QUADRO<br>POWER SWITCH ON |
| NERO<br>BLACK               | MASSA<br>GND                             |
| GIALLO<br>YELLOW            | KLINE                                    |
| VERDE<br>GREEN              | CAN LOW                                  |
| BIANCO<br>WHITE             | CAN HIGH                                 |
| GRIGIO<br>GREY              | POL4<br>BOOT                             |
| BLU<br>BLUE                 | POL5<br>CNF1                             |
| VIOLA/GRIGIO<br>PURPLE/GREY | TENSIONE PROG.<br>PROG. VOLTAGE          |
| MARRONE<br>BROWN            | RESET                                    |

**ECU CONNECTOR**

**POL4&POL5 CONNECTION**

**WARNING:** in order to communicate it is necessary to remove the resistor R0 shown in the picture here below.

Connect the BLU and GREY wires of the F32GN037C cable as shown in the following picture:

| COLORE FILO<br>WIRE COLOUR | DESCRIZIONE<br>DESCRIPTION |
|----------------------------|----------------------------|
| GRIGIO<br>GREY             | POL4<br>BOOT               |
| BLU<br>BLUE                | POL5<br>CNF1               |

