
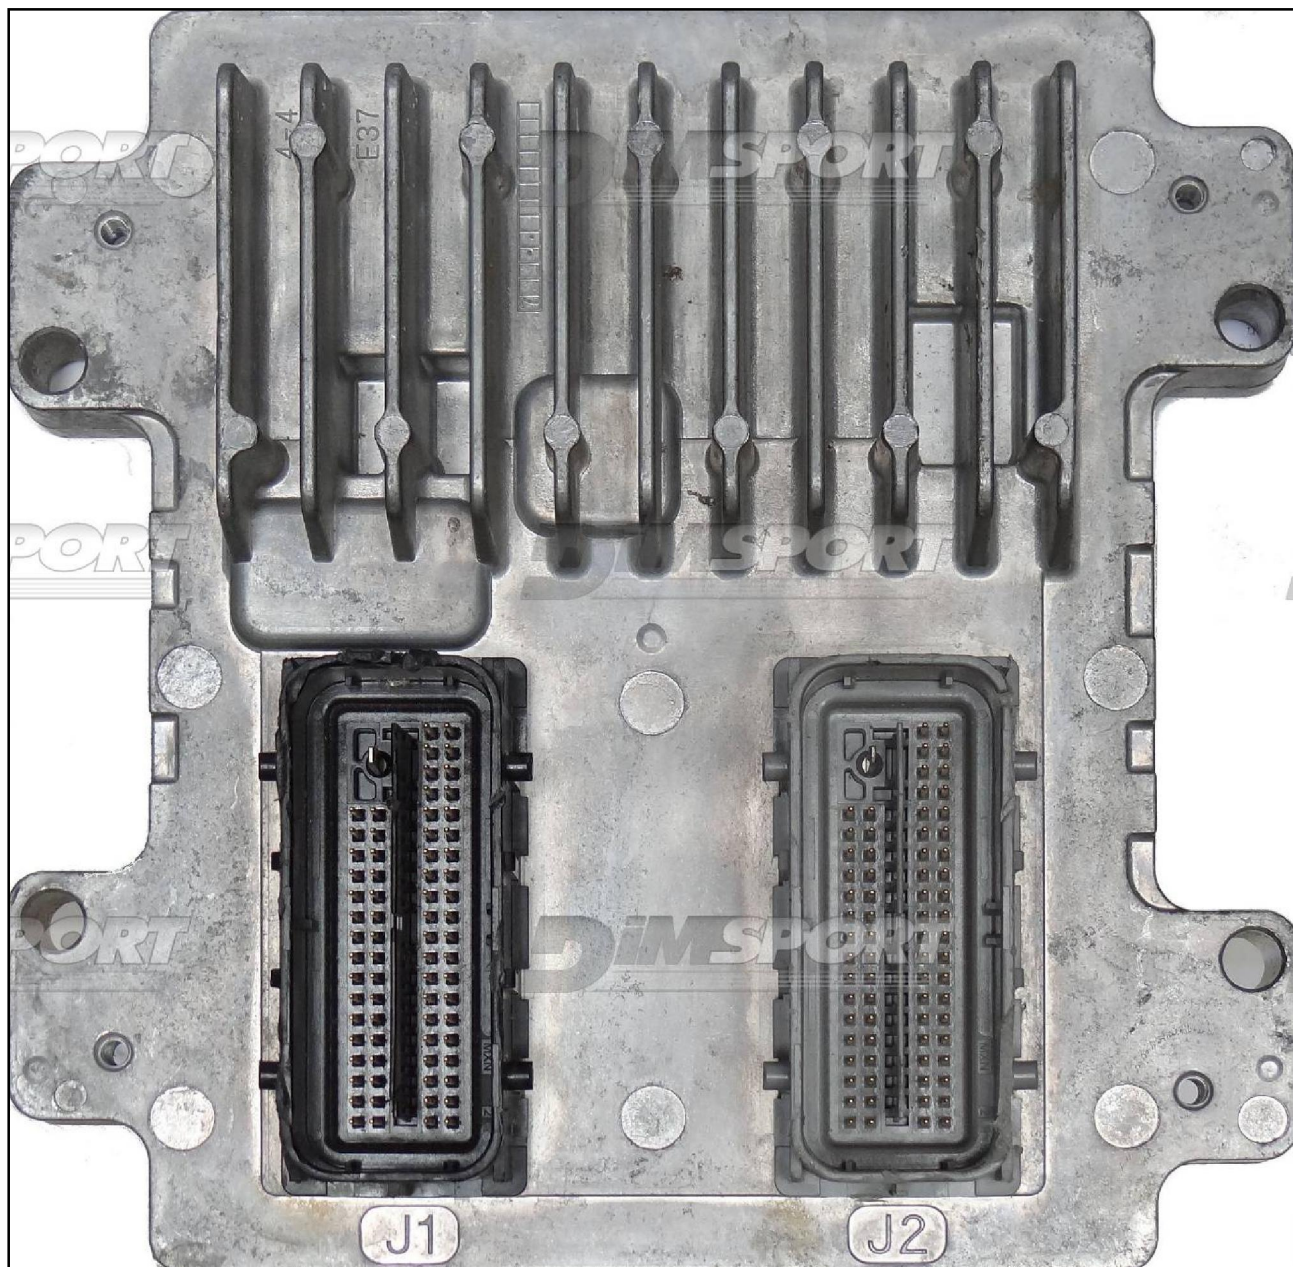


PLUGIN 466: NEW TRASDATA


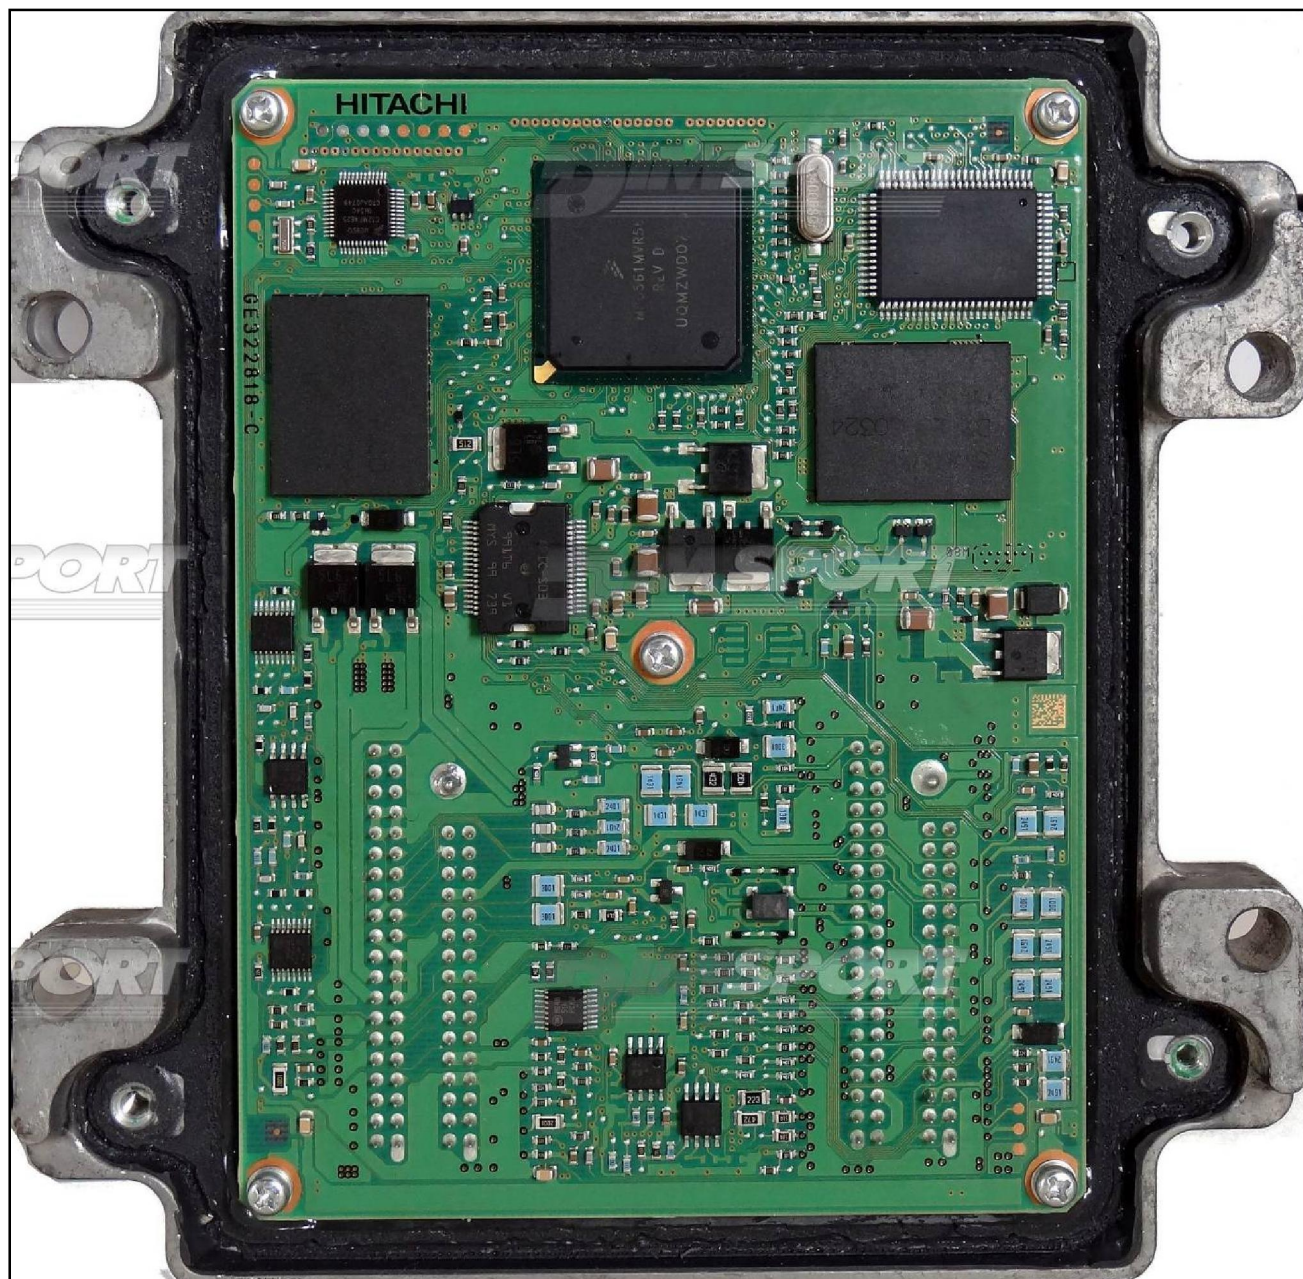


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

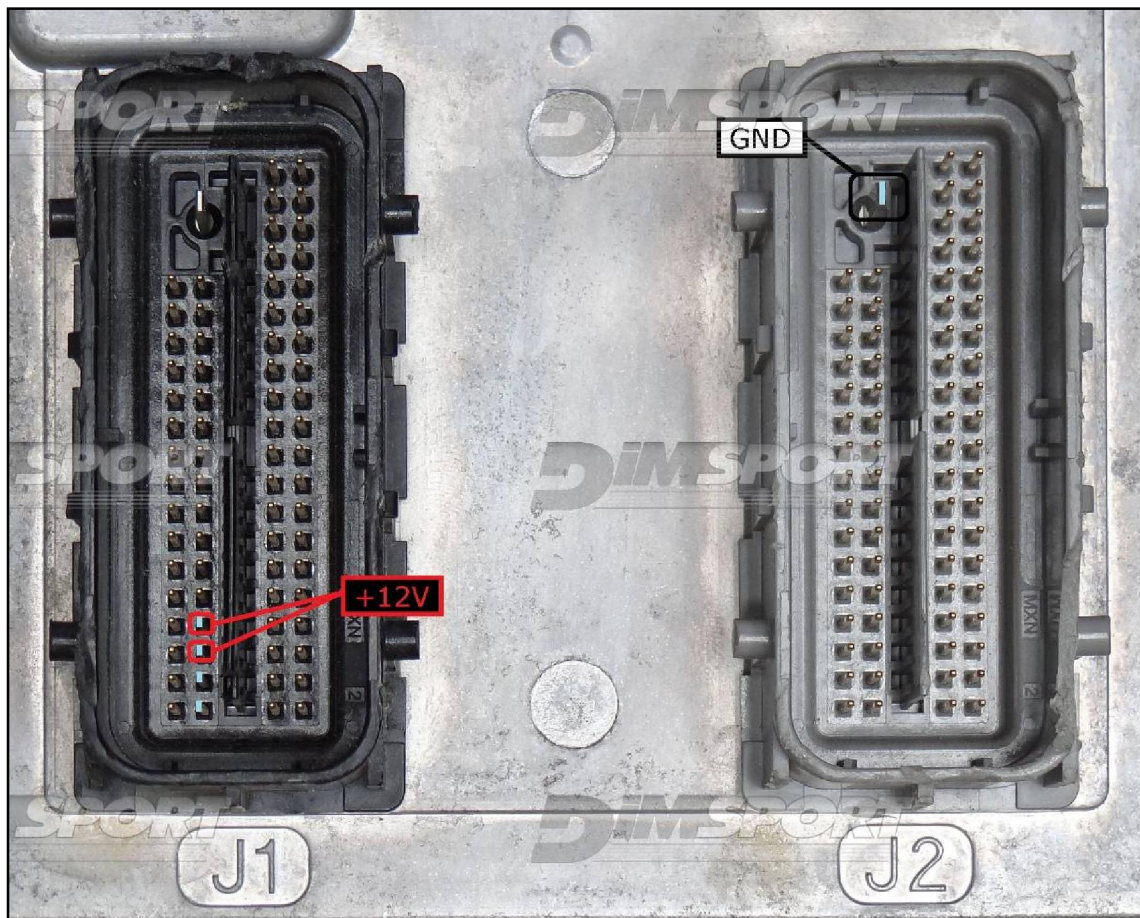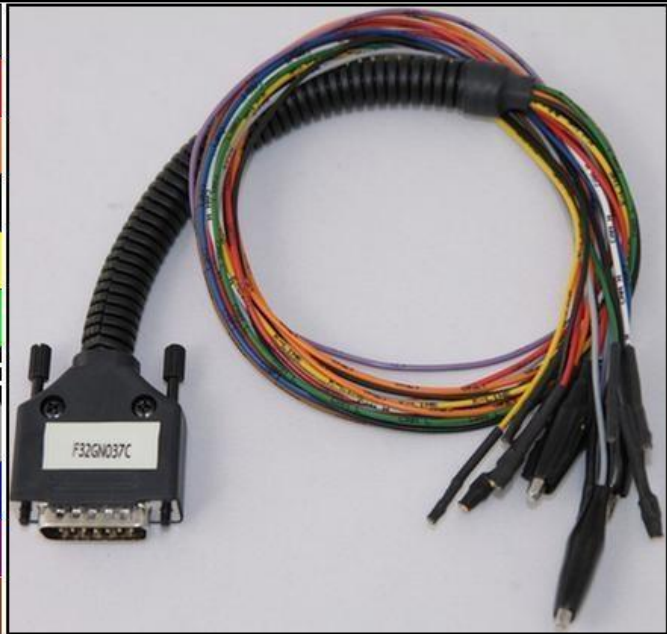

FREE WIRING CONNECTION

Connect the F34NTF51 wiring as explained here below :

		
Pin	Colore Colour	
1	Marrone Brown	
2	Non usato Not used	
3	Arancione Orange	
4	Non usato Not used	
5	Verde Green	
6	Blu Blue	
7	Viola Violet	
8	Grigio Grey	
9	Non usato Not used	
10	Non usato Not used	

Connect the BOOT GREY wire of the F32GN037C cable as shown here below:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT

