


NEW TRASDATA


Plugin 586 NT_BOSCH_MED172_IROM_TC1767_TPROT12_FORD

Plugin 1064 NT_BOSCH_MED1707_IROM_TC1782_TPROT12_FORD

BOSCH MED172 TC1767

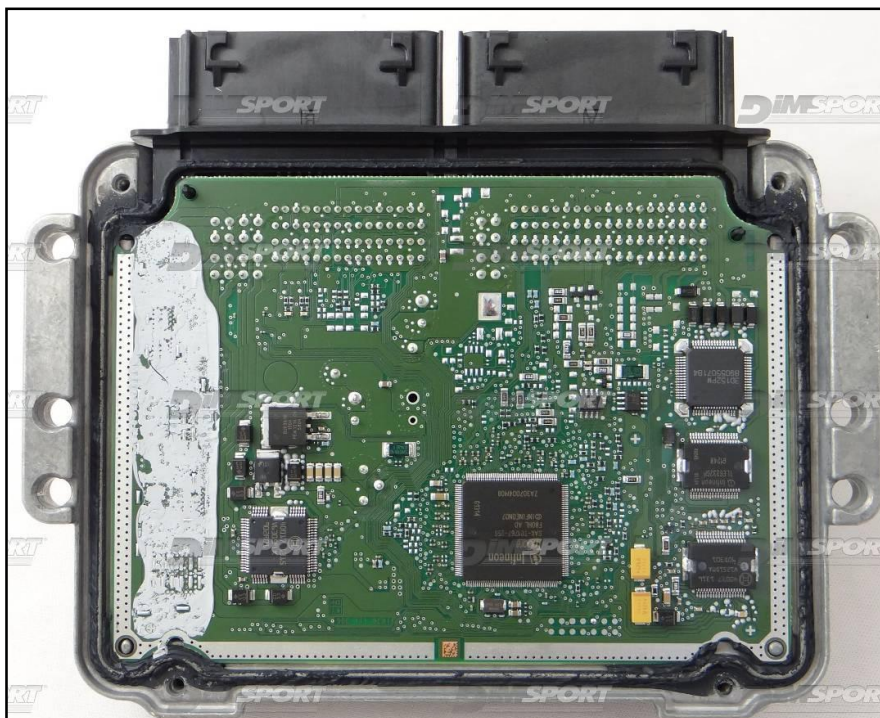

BOSCH MED1707 TC1782

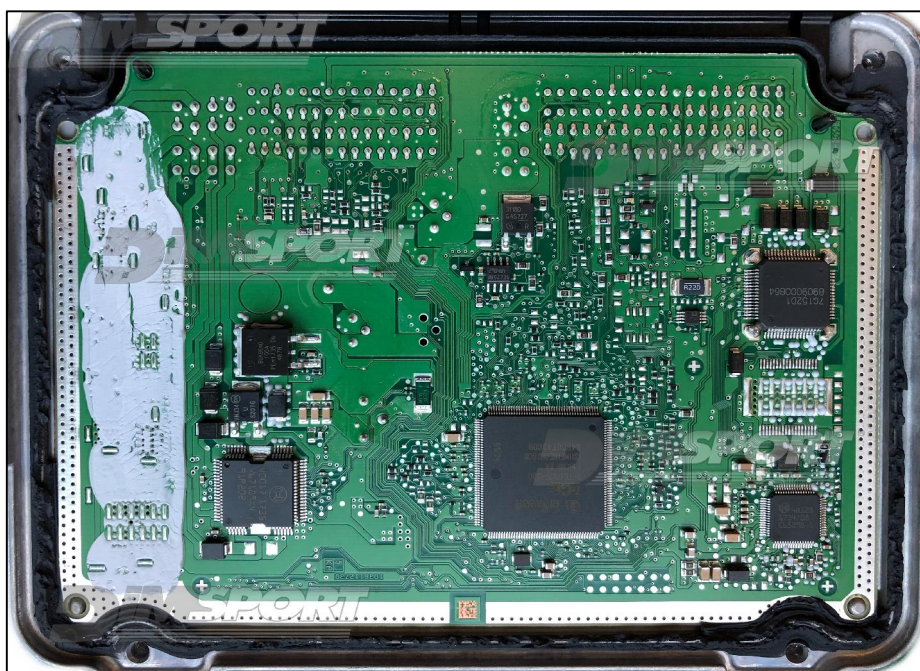



ECU CONNECTOR

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

On this ECU it is possible **ONLY the direct connection**, it is NOT possible to use the METAL POSITIONING FRAME.

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLO/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

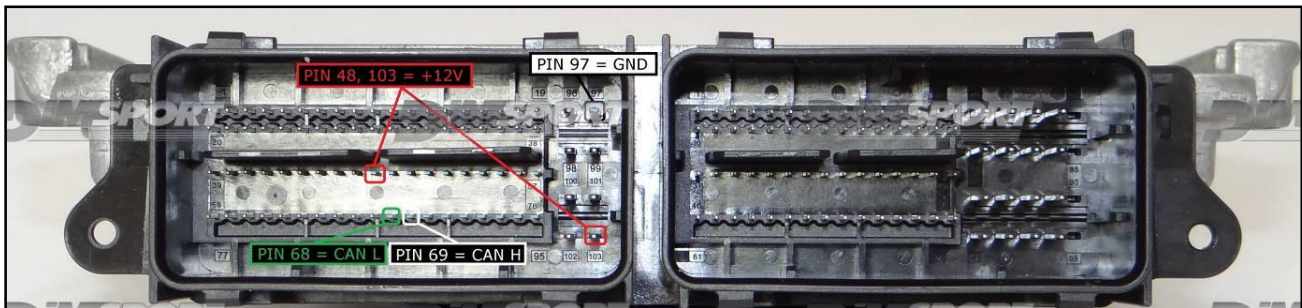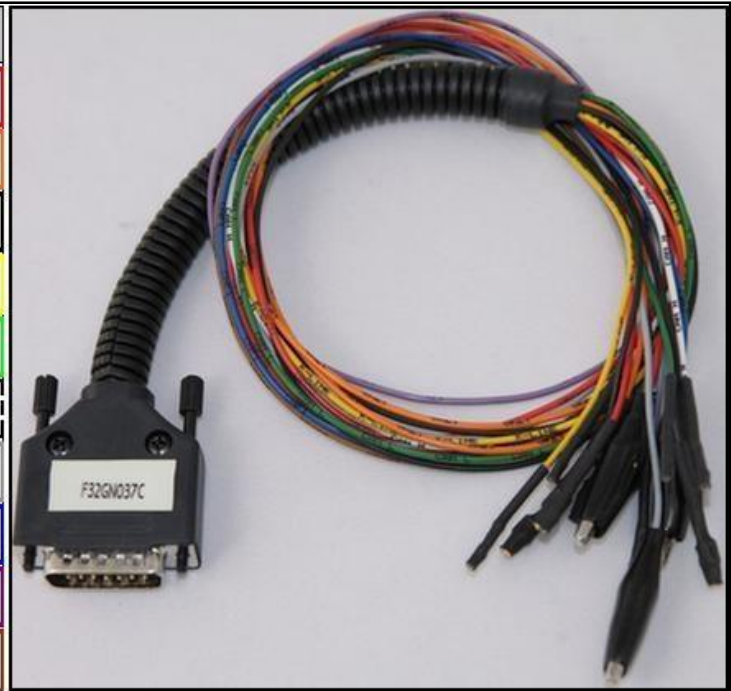


BOOT/CNF1 DIRECT CONNECTION

Connect the BLUE and GREY wires of the cable F32GN037C as described:

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

BOSCH MED172 TC1767

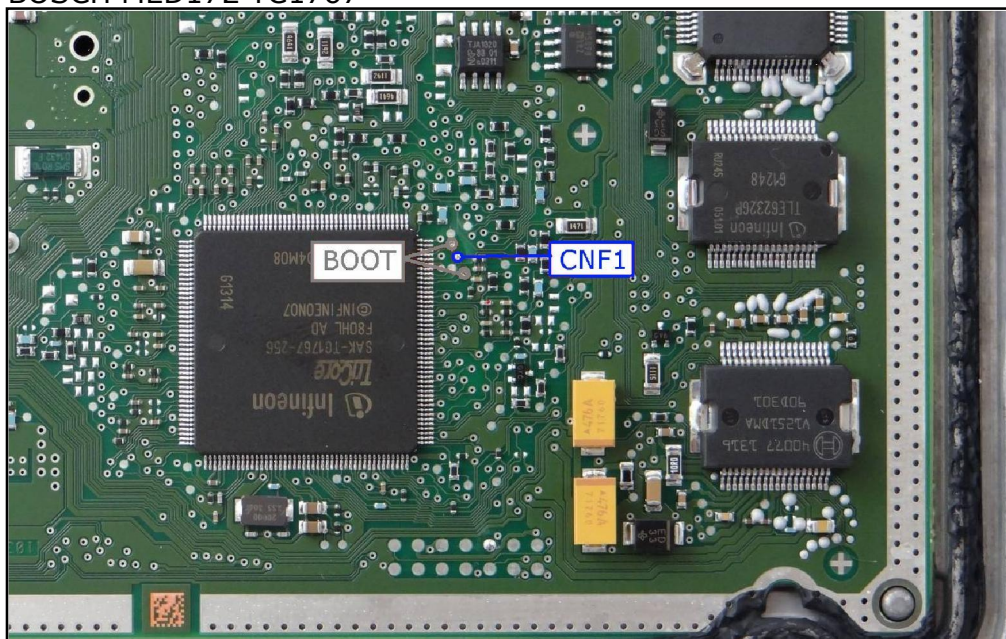

BOSCH MED1707 TC1782

