
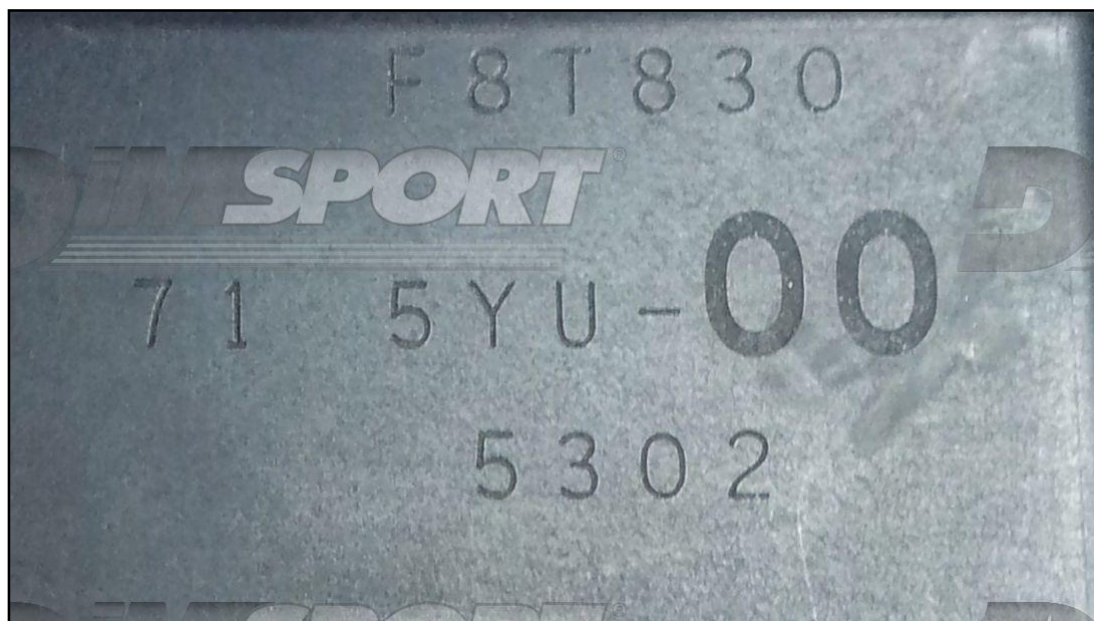


PLUGIN 842 :NEW TRASDATA


DIRECT LOOSE WIRES CONNECTION

For the connection with LOOSE WIRES use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on NEW TRASDATA is ON

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION	
ROSSO RED	POSITIVO DIRETTO POWER BATTERY	
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON	
NERO BLACK	MASSA GND	
GIALLO YELLOW	KLINE	
VERDE GREEN	CAN LOW	
BIANCO WHITE	CAN HIGH	
GRIGIO GREY	POL4 BOOT	
BLU BLUE	POL5 CNF1	
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE	
MARRONE BROWN	RESET	

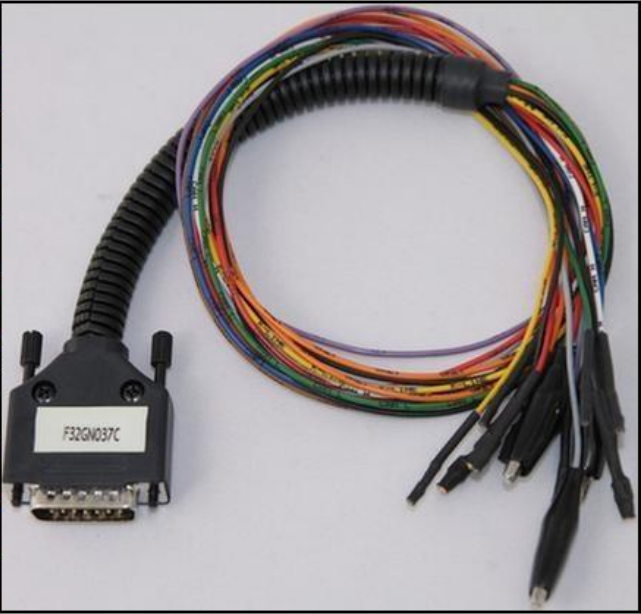

ECU CONNECTOR

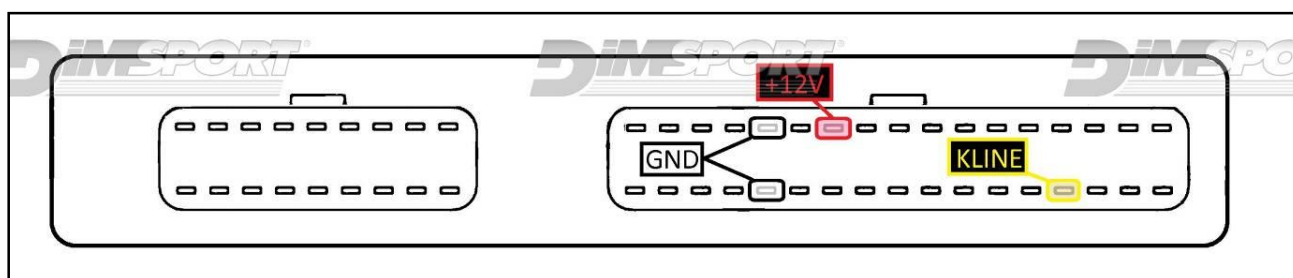

Warning: for a correct ECU connection it is necessary to make a little hole on the back side of the plastic cover (ECU side without signs nor writings) and connect the VPP signal (violet wire) to the test pad P1 as displayed in the following pictures.

