


**PLUGIN NEW TRASDATA:****142→ DELPHI DCMI Daf Truck****946→ DELPHI DCMI Hyundai Truck**


The lay-by pins are placed in the lower side of the ECU.

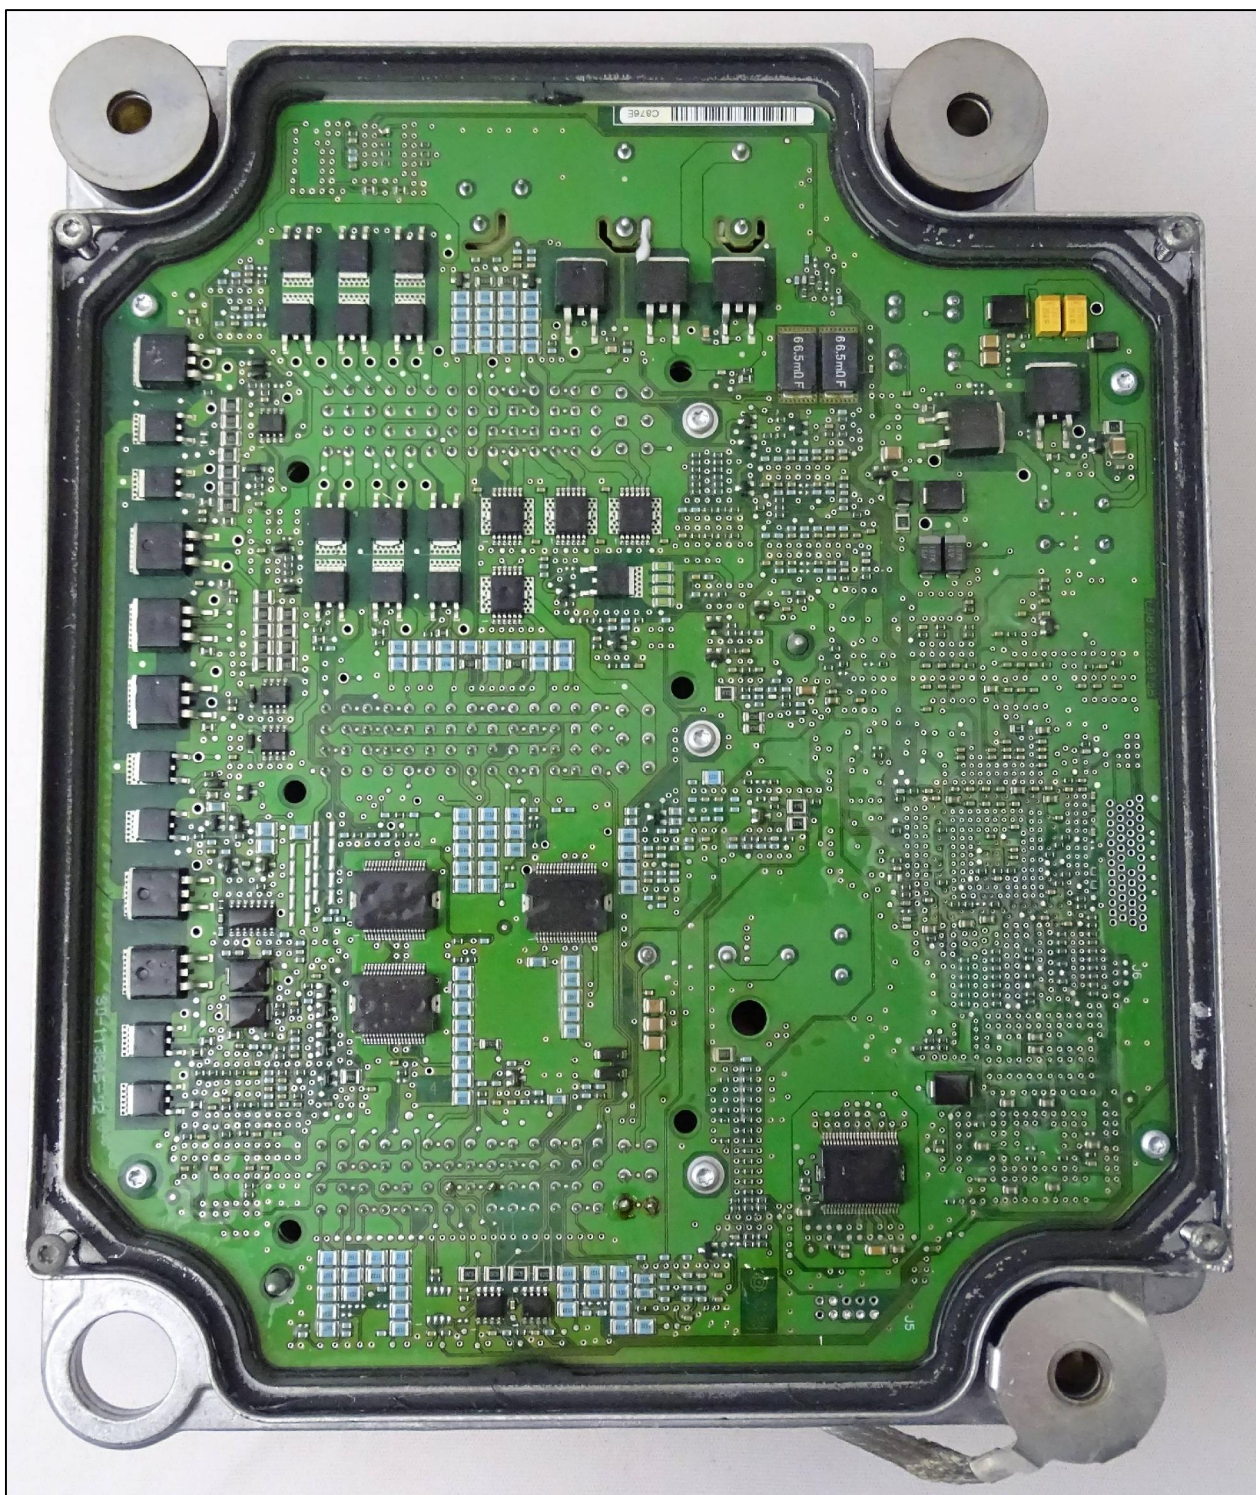


**ECU CONNECTOR**

In order to connect to the ECU use the CABLE F32GN037C.  
Make sure that the POWER led (red) on NEW TRASDATA is ON.

| COLORE FILO<br>WIRE COLOUR  | DESCRIZIONE<br>DESCRIPTION               |
|-----------------------------|------------------------------------------|
| ROSSO<br>RED                | POSITIVO DIRETTO<br>POWER BATTERY        |
| ARANCIO<br>ORANGE           | POSITIVO SOTTO QUADRO<br>POWER SWITCH ON |
| NERO<br>BLACK               | MASSA<br>GND                             |
| GIALLO<br>YELLOW            | KLINE                                    |
| VERDE<br>GREEN              | CAN LOW                                  |
| BIANCO<br>WHITE             | CAN HIGH                                 |
| GRIGIO<br>GREY              | POL4<br>BOOT                             |
| BLU<br>BLUE                 | POL5<br>CNF1                             |
| VIOLA/GRIGIO<br>PURPLE/GREY | TENSIONE PROG.<br>PROG. VOLTAGE          |
| MARRONE<br>BROWN            | RESET                                    |

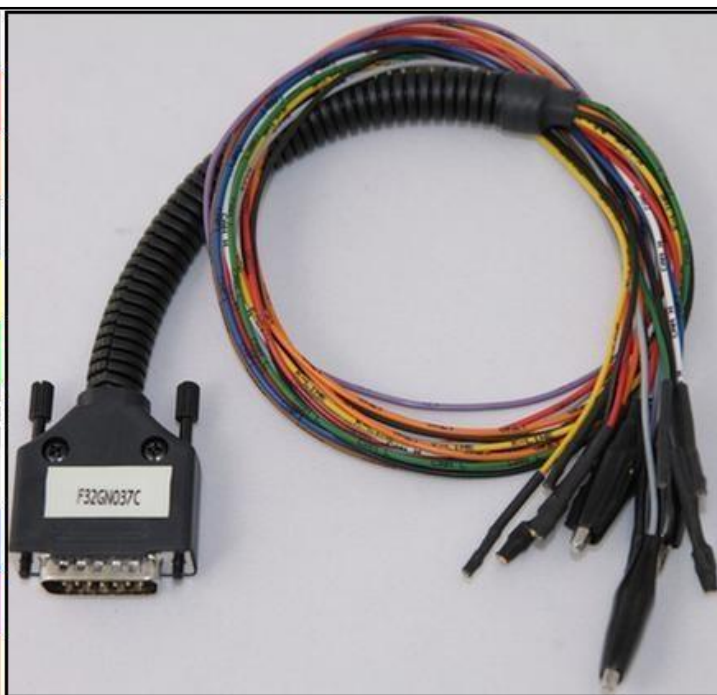



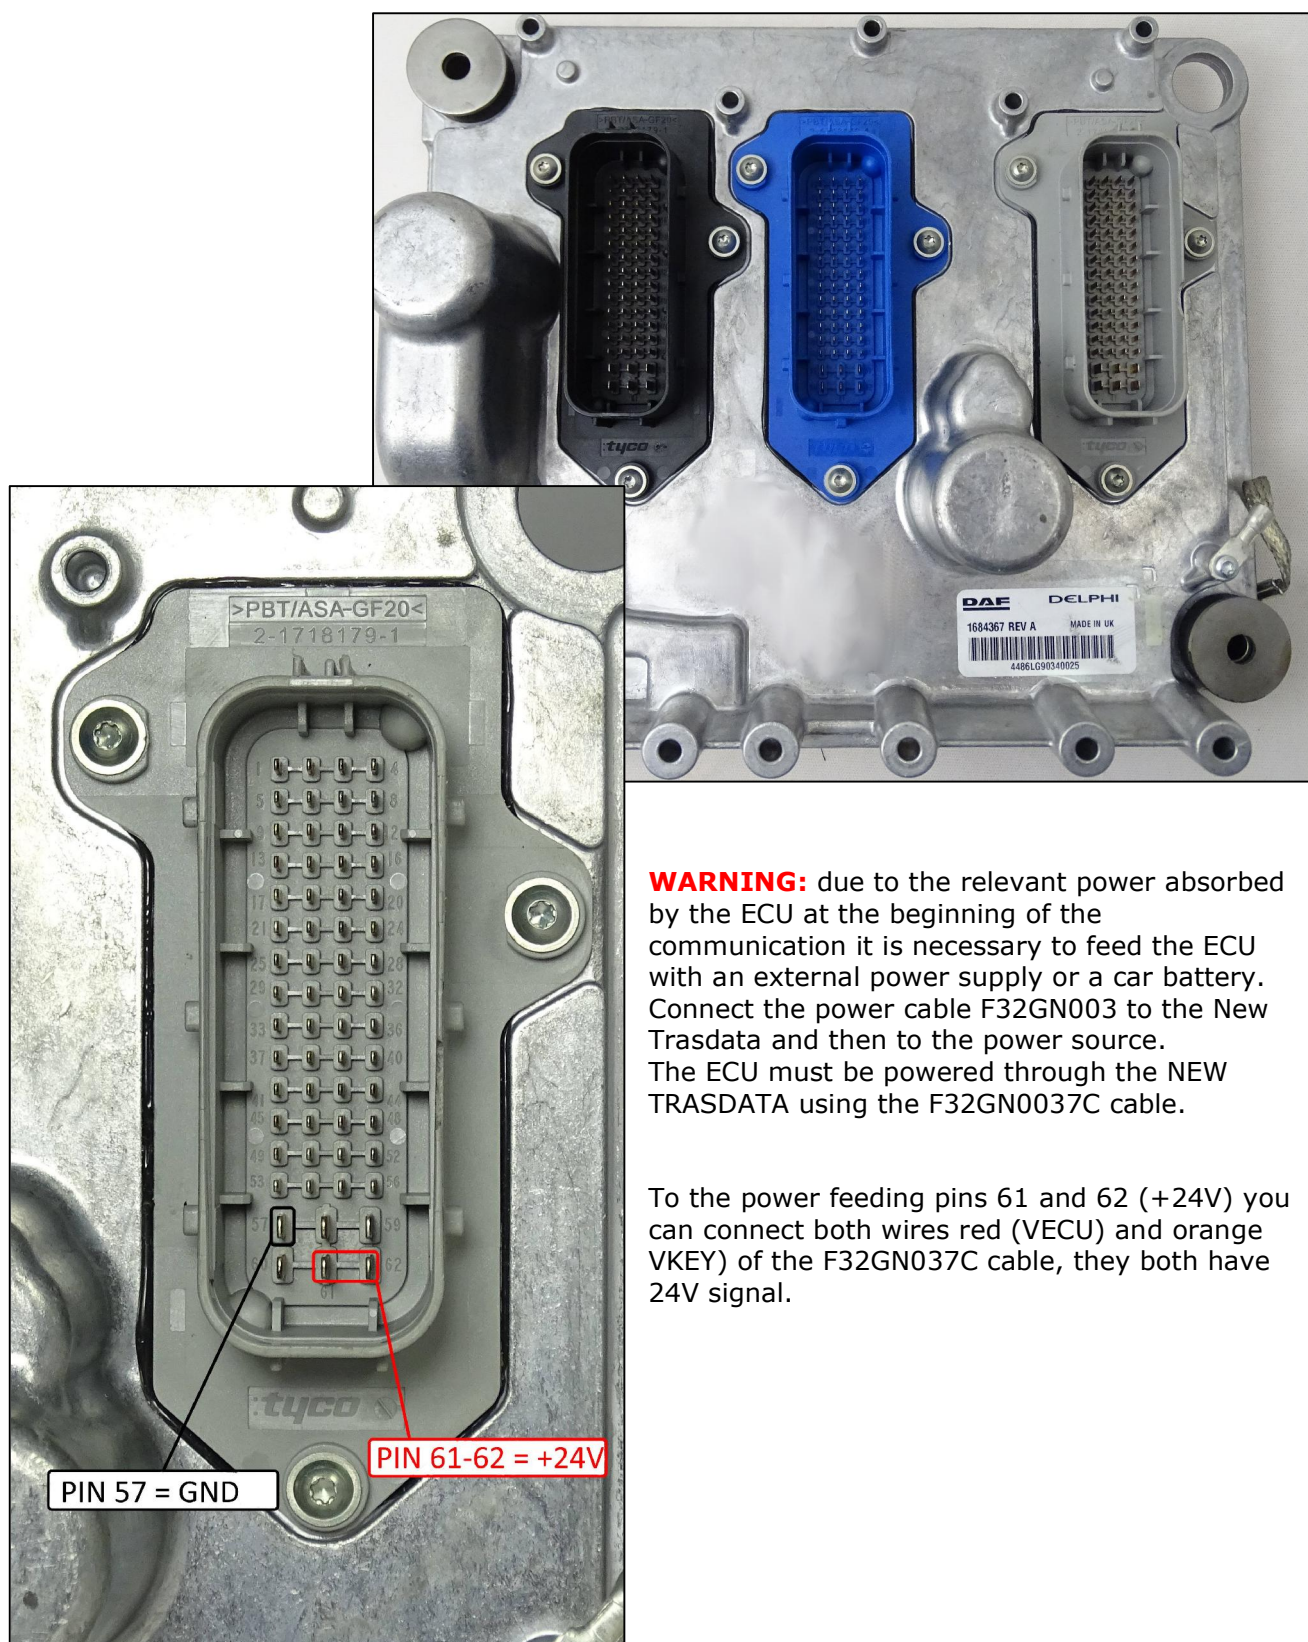

**WARNING:** due to the relevant power absorbed by the ECU at the beginning of the communication it is necessary to feed the ECU with an external power supply or a car battery. Connect the power cable F32GN003 to the New Trasdata and then to the power source. The ECU must be powered through the NEW TRASDATA using the F32GN0037C cable.

To the power feeding pins 61 and 62 (+24V) you can connect both wires red (VECU) and orange (VKEY) of the F32GN037C cable, they both have 24V signal.




**DIRECT CONNECTION**

For the direct connection it is required the adapter F34NTA03.

It is necessary to solder the guiding pin strips on the 10 pads shown in the picture, in which you will place the F34NTA03 adapter.

After placing the ECU with the lay-by pins and the adapter on the lower side connect the flat cable F34NTF01, the violet wire of the cable must be on your right.

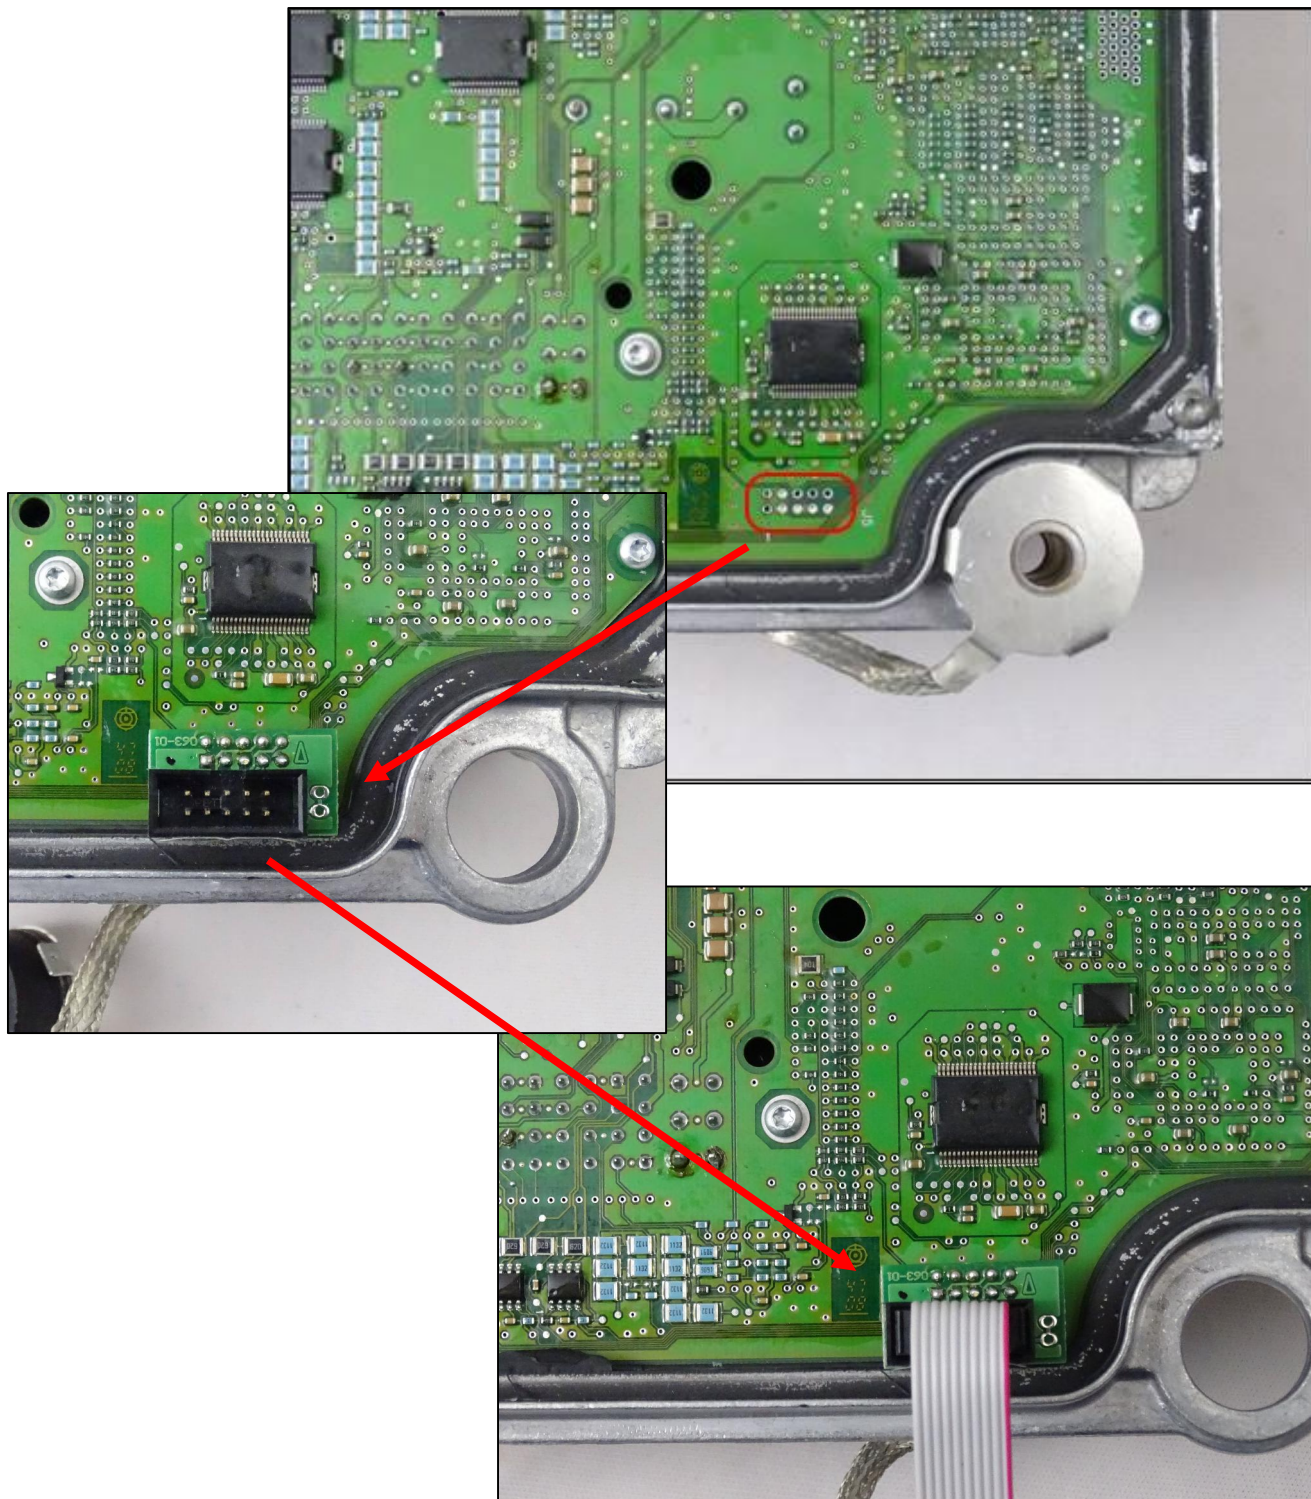



**METAL POSITIONINF FRAME CONNECTION**

For the metal positioning frame connection is required the F34DM001 adapter, place the ECU and the adapter as shown in the following picture.

