


RENAULT

CONTINENTAL SIEMENS SID306

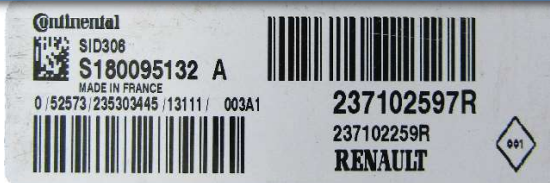


DRIVER: Tool Boot mode → Infineon Tricore Boot → Tricore Sak TC1766
MICRO: TC1766 Internal Flash

INFO

(EN) Connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.

(IT) Collegare il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L** | **WHITE** | **BROWN**

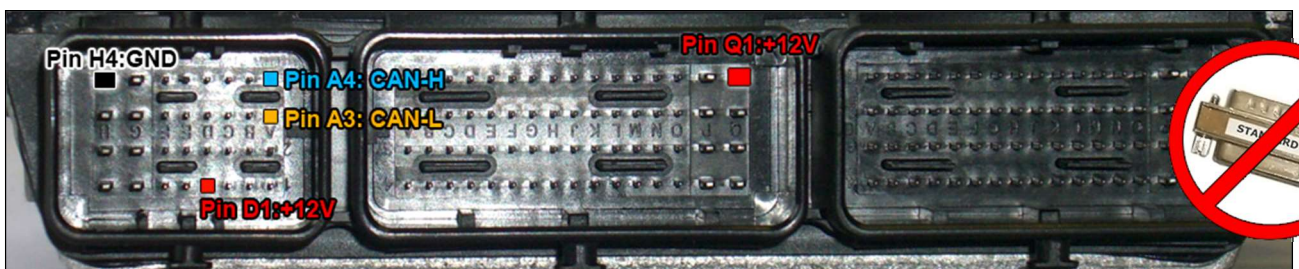

(EN) Connect the 1000 and 2700 Ohm resistors and wires on the Ecu card as pictured.

(IT) Collegare le resistenze da 1000 e 2700 Ohm e i fili sulla scheda della Ecu come in foto.

