

PCM 0308 MERCURY MARINE



DRIVER: Bdm/Jtag mode → Bdm MPC →
MPC55x/56x
MICRO: MPC55x/56x

INFO

(EN) Connect the following pinout with the Tricore Cable.


(IT) Collegare il seguente pinout con il cavo Tricore.



(EN) Material required:

(IT) Materiale necessario:

Color flat cable

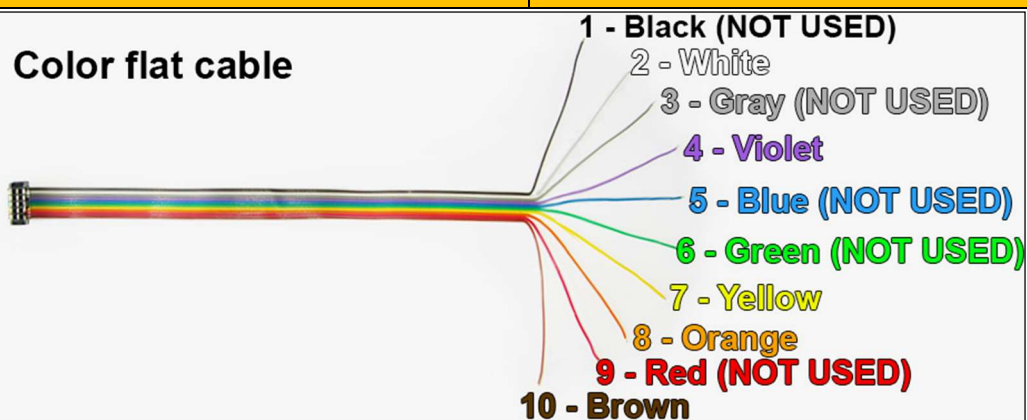


(EN) Follow on next page..

(IT) Segue a pagina successiva..

(EN) It needs to clean the card in the interested zone in a such way that it is deprived of any protective agent, after of that solder the pin strip and solder color flat cable like in figure:

(IT) Occorre pulire la scheda nella zona interessata in modo tale che sia priva di qualsiasi agente protettivo, successivamente saldare i pin strip e saldare il flat arcobaleno come in figura:

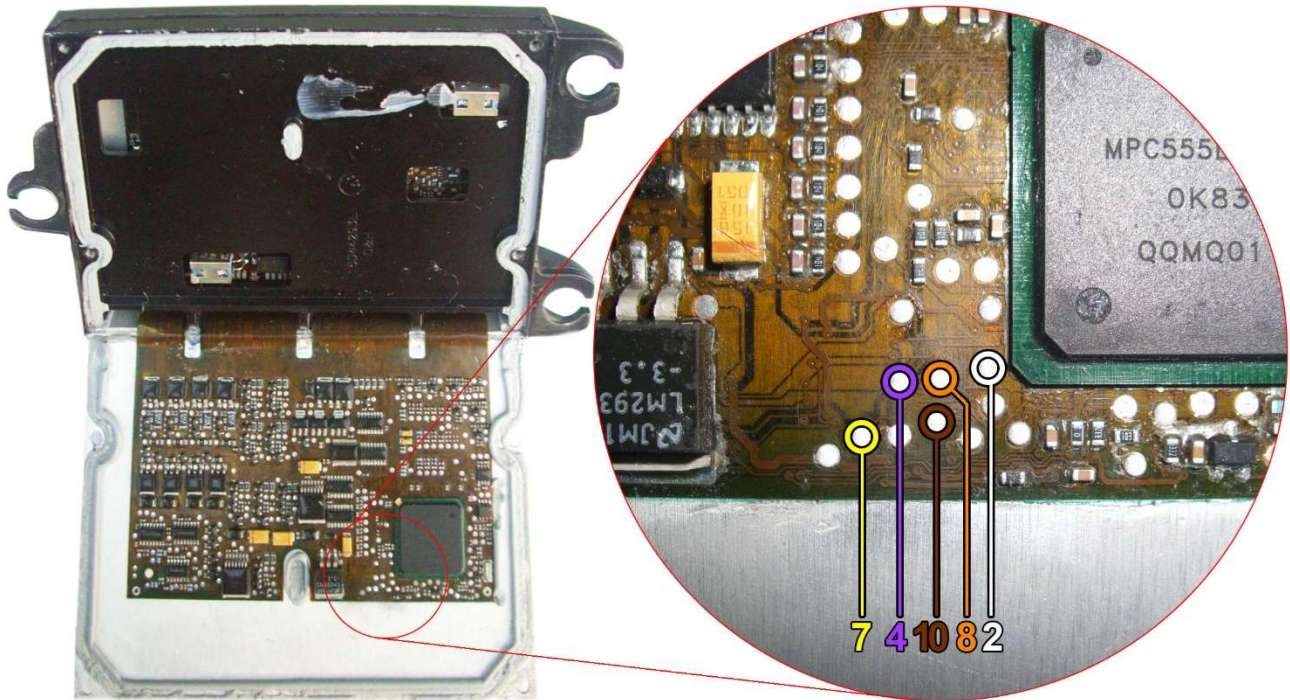

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.