



ECU Vag MED17.5 – TC1766 Internal Flash

FASE 1: (LETTURA/SCRITTURA IN BOOT MODE)



Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare il filo grigio nel punto di Boot indicato nella figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1766

STEP1: (READ/WRITE IN BOOT MODE)

Set in Boot Mode the ECU, so connect the following pinout and solder the gray wire in the boot pin shown in the figure. Use the driver:

BOOT MODE TRICORE SAK TC1766

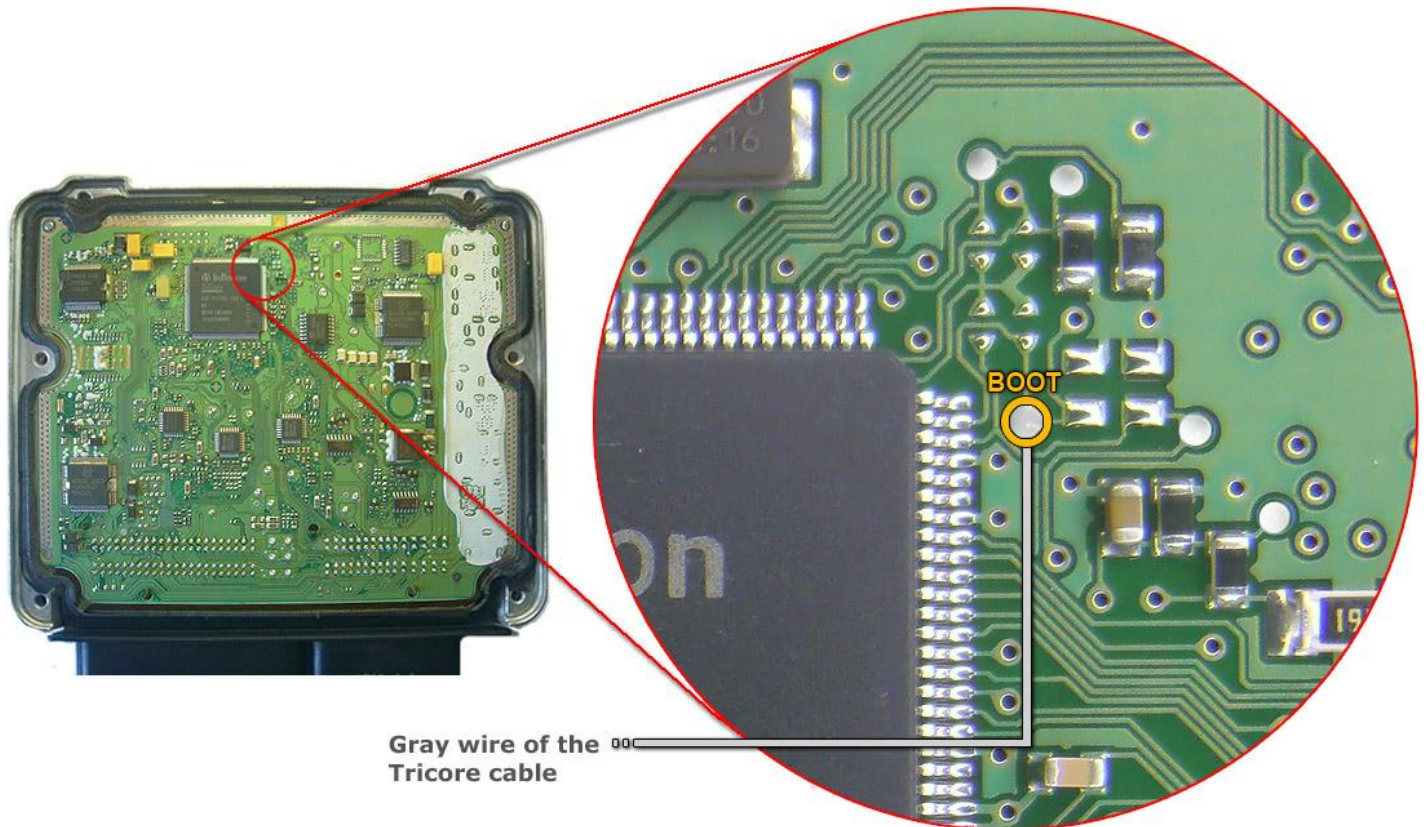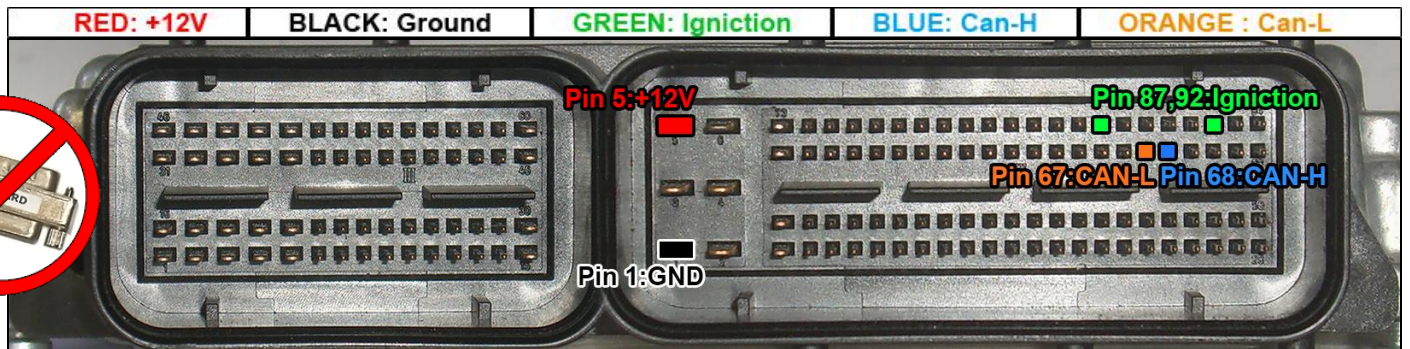

Se a inizio lettura esce il messaggio di errore :

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

seguire le istruzioni a pagina successiva alla fase 2..

When you start reading if appear the error message:

“ERROR UNLOCK READ - TRY TOOL TRICORE PASSWORD”

follow the instructions on next page to step 2...

FASE 2: (RICERCA PASSWORD)


Dissaldare il filo grigio per disabilitare il Boot Mode, sostituire sul pinout i fili verdi con dei fili rossi del cavo Tricore come in figura seguente, e utilizzare il driver:

OBD TOOL PASSWORD TPROT V08 VAG

STEP 2: (SEARCH PASSWORD)

Unsolder the gray wire to disable the Boot Mode, change on the pinout the green wires with red wires and use the driver:

OBD TOOL PASSWORD TPROT V08 VAG

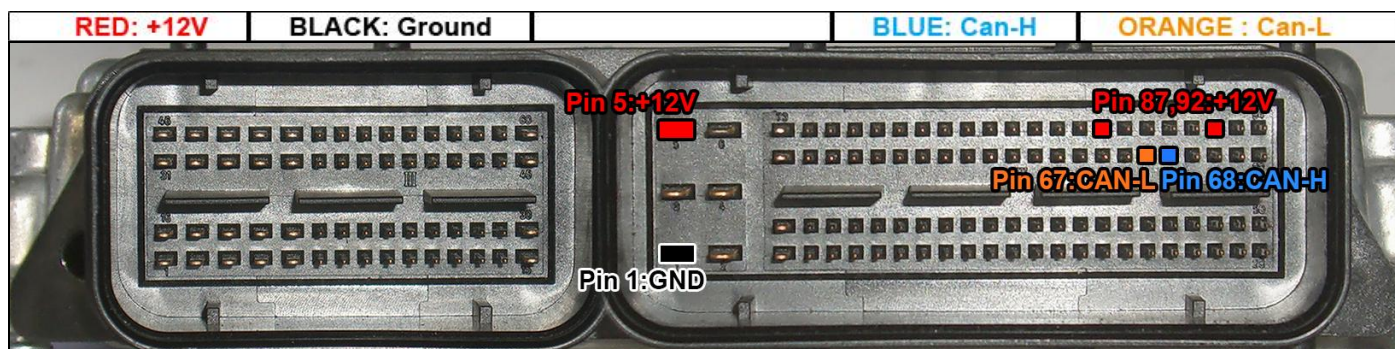

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1.

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described on step 1.