



ECU Vag MED 17.5.5 - TC1767 Internal Flash

FASE 1: (RICERCA PASSWORD)

Connettere il seguente pinout e saldare i fili bianco e viola sulla scheda come in figura. Utilizzare il driver:

TOOL PASSWORD SPECIAL *ALL*



(Attenzione: verifica di avere già l'ultima versione del cavo Tricore. [Clicca qui](#))

STEP 1: (SEARCH PASSWORD)

Connect the following pinout and solder in the circuit board the violet and white wires. Use the driver:

TOOL PASSWORD SPECIAL *ALL*

(Attention: check if you have last version of the Tricore cable. [Click here](#))

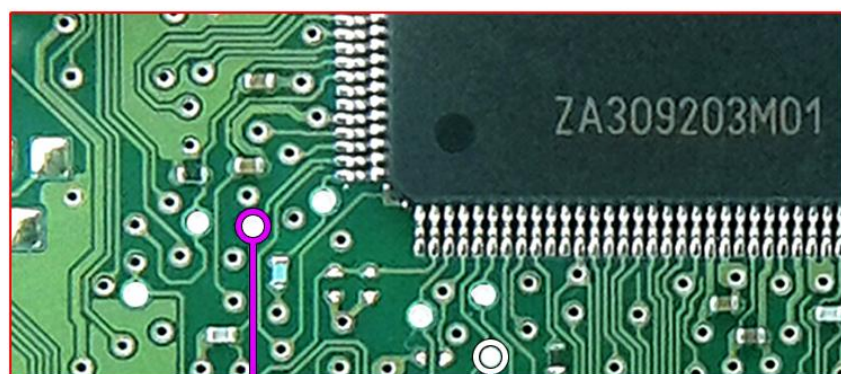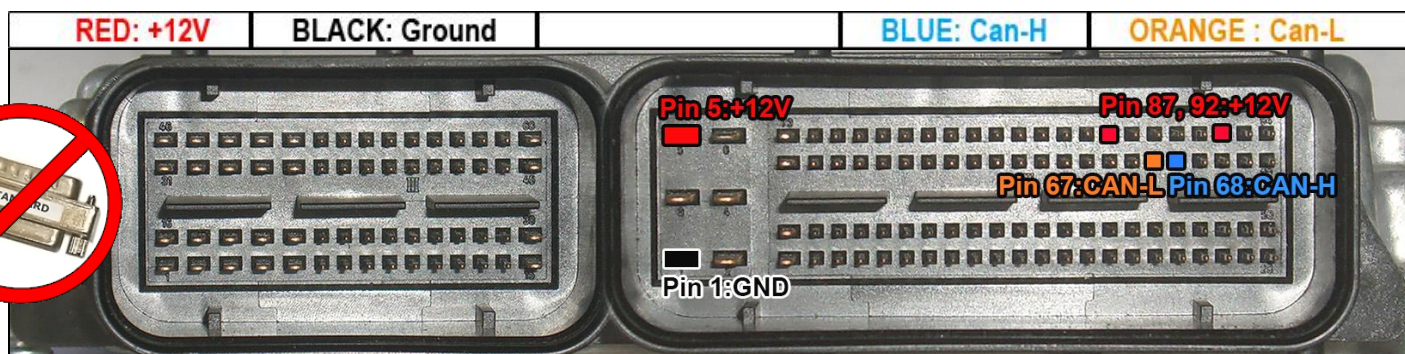

...Violet White wires of the Tricore cable

A questo punto, una volta trovate le password, sarà possibile leggere e scrivere la centralina. Quindi, porre la centralina in Boot Mode come descritto alla successiva Fase 2.

Now, once you have found the password, you can read and write the ECU. So, set in Boot Mode the ECU as described in next Step 2.

FASE 2: (LETTURA/SCRITTURA IN BOOT MODE)

Connettere il seguente pinout e porre la centralina in Boot Mode come in figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1767

STEP 2: (READ/WRITE IN BOOT MODE)

Connect the following pinout, and set the ECU in boot mode like in figure. Use the driver:

BOOT MODE TRICORE SAK TC1767

