



ME 17.8.xx HW02 / ME17.9.xx – TC1767 Internal Flash

Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nella figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1767

Set in Boot Mode the ECU, so connect the following pinout and solder the resistances like shown in the figure. Use the driver:

BOOT MODE TRICORE SAK TC1767


RED: +12V

BLACK: Ground

GREEN: Ignition

BLUE: Can-H

ORANGE : Can-L

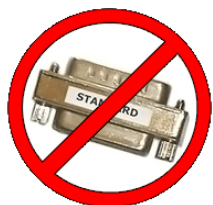

Pin 13: GND

Pin 56: +12V

Pin 48: Ignition

Pin 1: CAN-H
Pin 2: CAN-L
Pin 5: Ignition

