

VOLVO - FORD

BOSCH ME9.0 (Diesel)



DRIVER: Tool Boot mode → Motorola Freescale MPC5xx Benchmode → EDC16/ME9 - MPC56x
MICRO: MPC561 / MPC652


INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: +12V | **BLACK: GROUND** | **GREEN: K-LINE** | **WHITE** | **BROWN**

HARDWARE 1

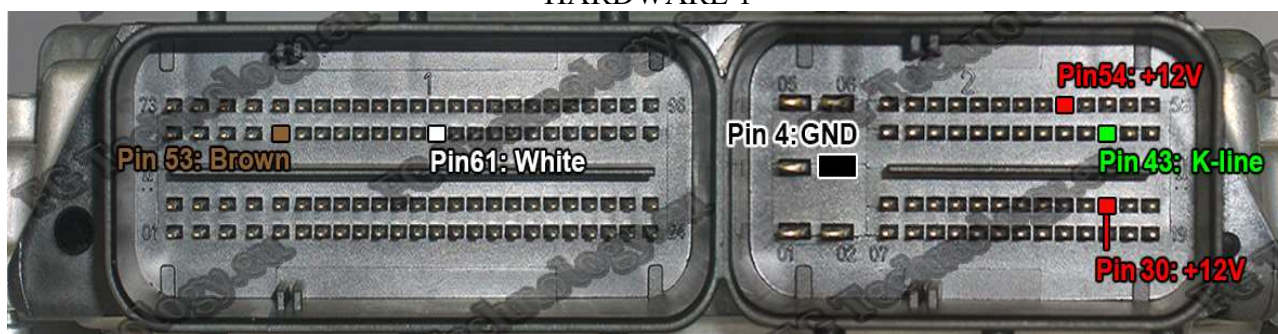

HARDWARE 2



(EN) Power the benchplus + with a **voltage from 9 to 10 Volts** for EDC16 / MED9 control units.

(IT) Alimentare il benchplus+ con una **tensione da 9 a 10 Volt** per centraline EDC16/MED9.