


Fiat Sedici Denso 079J2

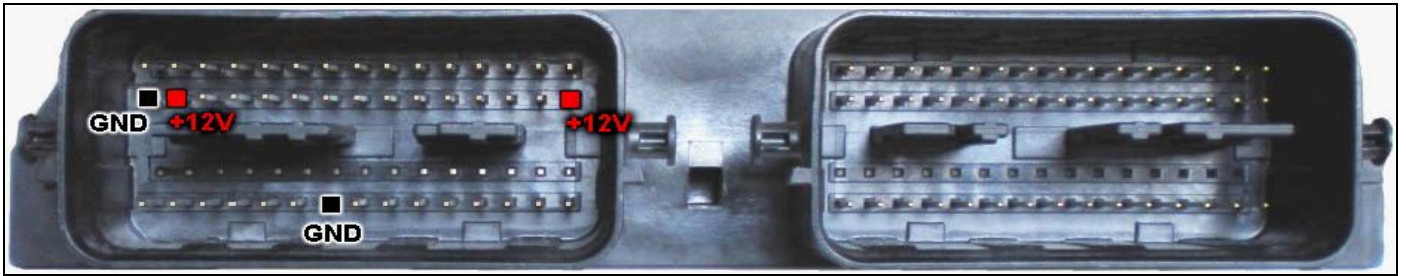


READ THE ECU

DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD

1 - REMOVE THE STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD



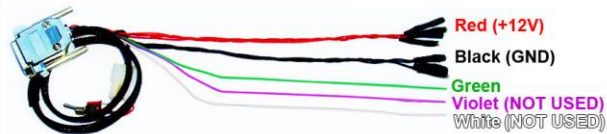


3 - USE THE COLOR FLAT CABLE



4 - DO A LINK

GREEN wire of the Renesas cable

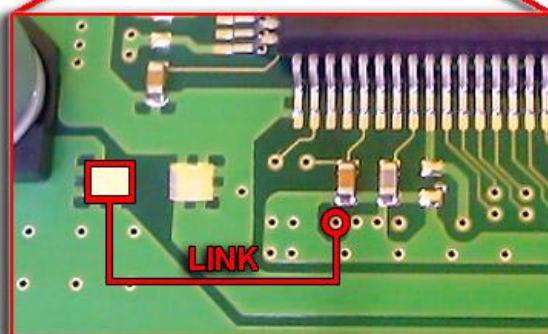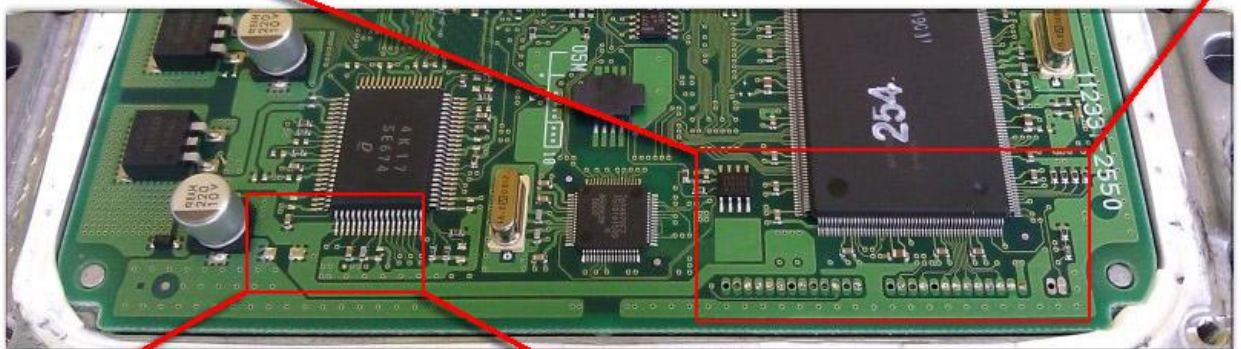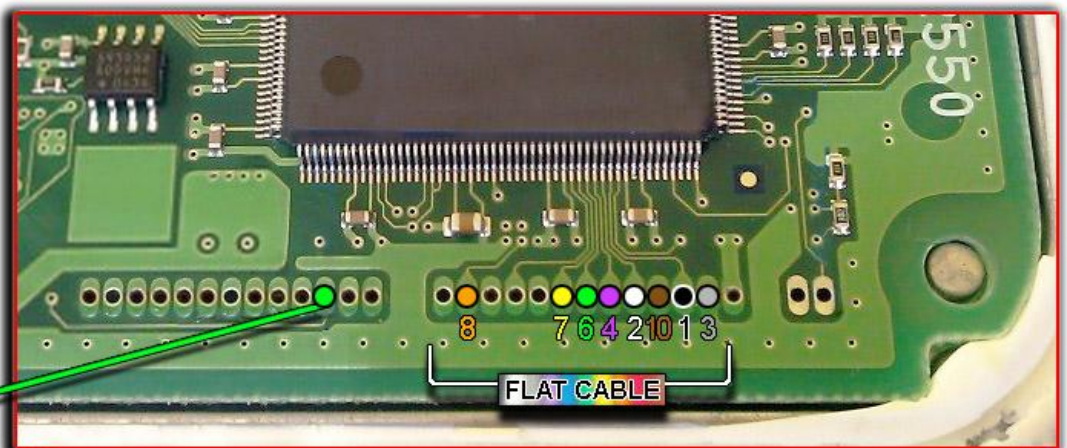

For writing follow the instructions on the next page.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

- 1 - REMOVE THE STANDARD ADAPTER



- 2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

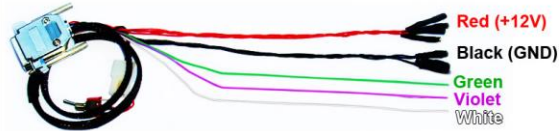

- 3 - DO TWO LINKS

wires of the Renesas cable
VIOLET **WHITE** **GREEN**

BLACK wire of the
Renesas cable

