

FORD

SIEMENS SIM22-24-28-210 (Gasoline)

USE RENESAS CABLE




DRIVER: Tool Boot mode → ST10Fxxx
 Driver K-line: SID802/804/805/806 BOOT
 29F200/400BB CRIPT *Rx Tx
 MICRO: C167

INFO

(EN) Connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.

(IT) Collegare il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: + 12V | BLACK: GROUND | BLUE: CAN-H | BLUE: CAN-L

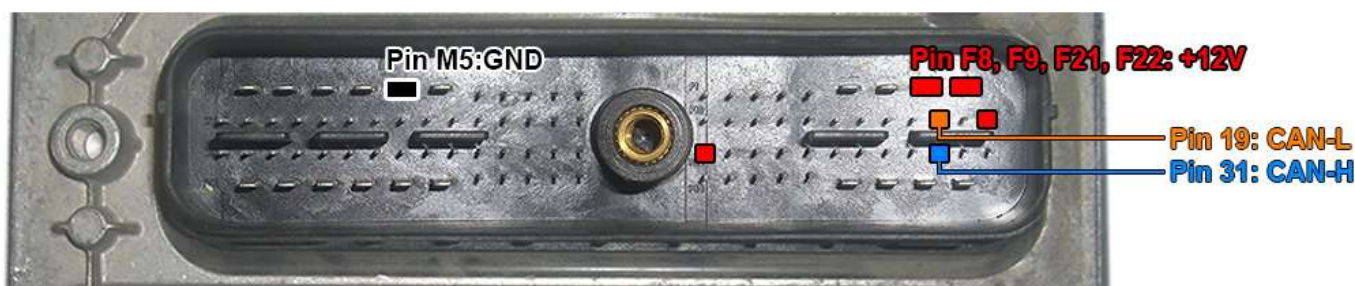

(EN) Boot modality using Rx and Tx - required firmware since version 2012.

(IT) Modalità di boot usando Rx e Tx - richiesto firmware da versione 2012.

