

ECU BOSCH MERCEDES ME9.7



DRIVER: Bdm/Jtag mode → Bdm MPC →
MPC55x/56x
MICRO: MPC55x/56x

INFO

(EN) Connect the following pinout with the Tricore Cable.

(IT) Collegare il seguente pinout con il cavo Tricore.



(EN) Material required:

(IT) Materiale necessario:

Siemens Marelli
BDM Adapter wide



Gray flat cable



Pin strip




(EN) Follow on next page..

(IT) Segue a pagina successiva..

(EN) Solder the connectors on the pcb:

(IT) Saldare i connettori sulla scheda:

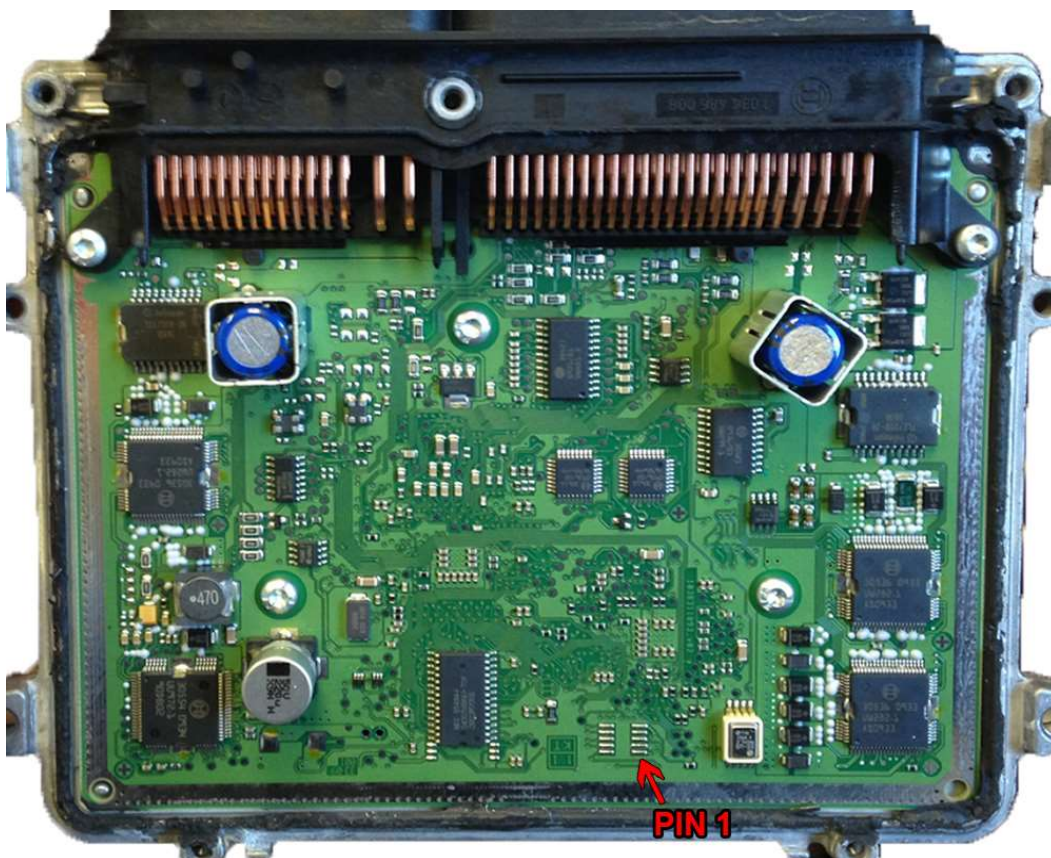

(EN) Now insert Siemens/Marelli adapter in the pin strip with the cable flat like in photo:

(IT) A questo punto inserire l'adattatore Siemens/Marelli nei pin strip con il cavo flat come in foto:

