

JAGUAR, LAND ROVER

BOSCH MEDC17.9 (Gasoline)



DRIVER: Tool Boot mode → Infineon Tricore
Benchmode → Tricore Sak TC1793
MICRO: TC1793


INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | BLACK: GROUND | BLUE: CAN-H | ORANGE : CAN-L | WHITE | BROWN

HARDWARE 1

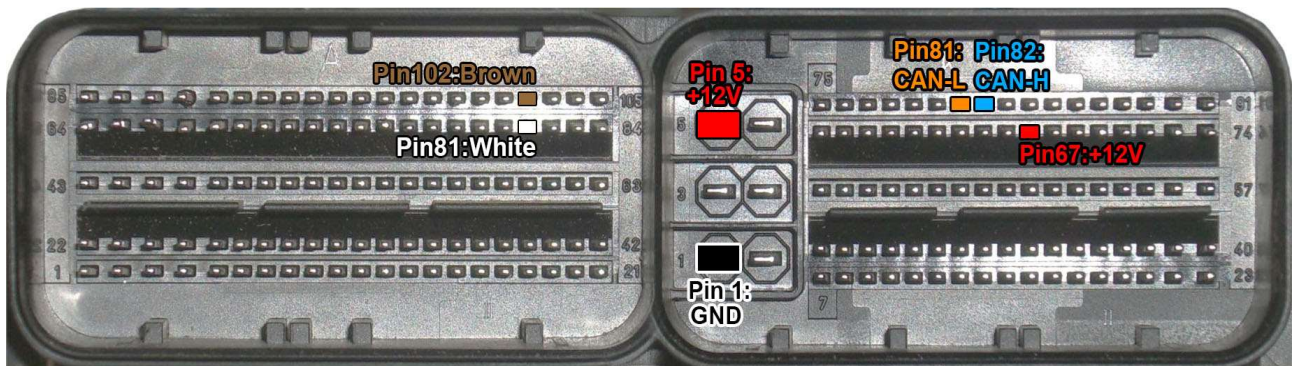

HARDWARE 2

