



ECU Siemens EMS2205 - TC1766 Internal Flash

Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nelle figure. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1766

Set in Boot Mode the ECU, so connect the following pinout and solder the resistances like shown in the figure. Use the driver:


BOOT MODE TRICORE SAK TC1766

RED: +12V


BLACK: Ground

BLUE: Can-H

ORANGE: Can-L

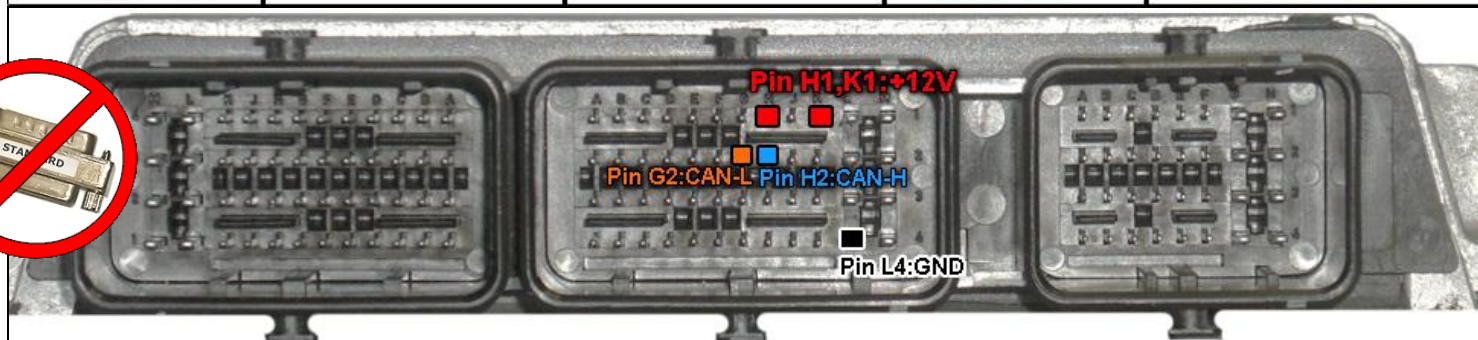

1/2 BACKSIDE:

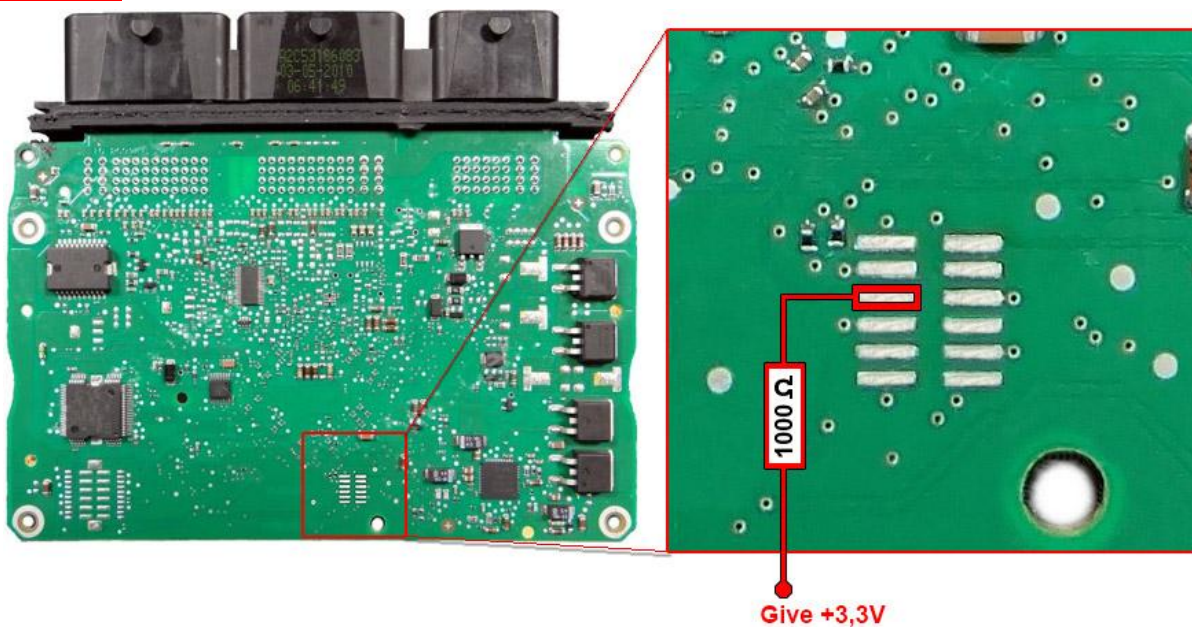

2/2 FRONTSIDE:

