
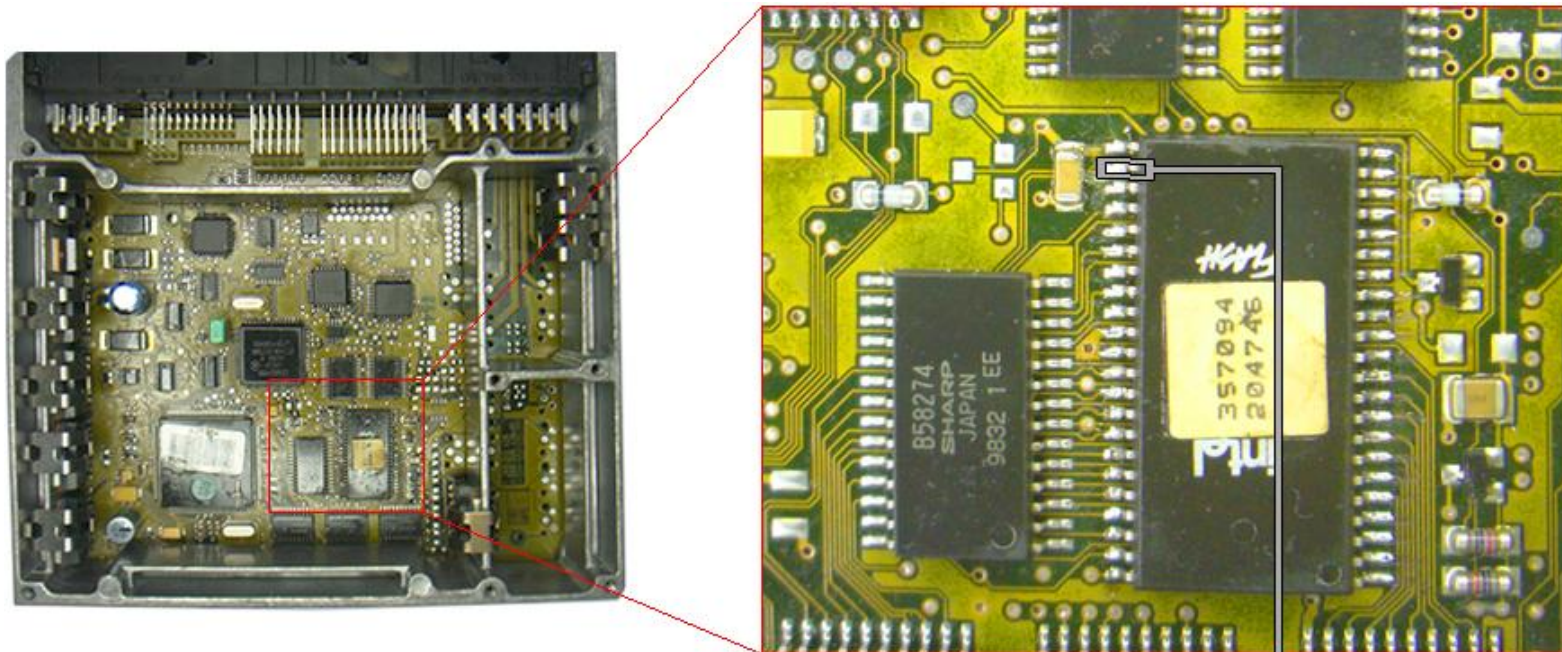


ALFA ROMEO – MERCEDES
BOSCH M2.1 (Gasoline)

Micro: C167

RED: + 12V | BLACK: GROUND | GREEN: K-LINE

USE TRICORE CABLE

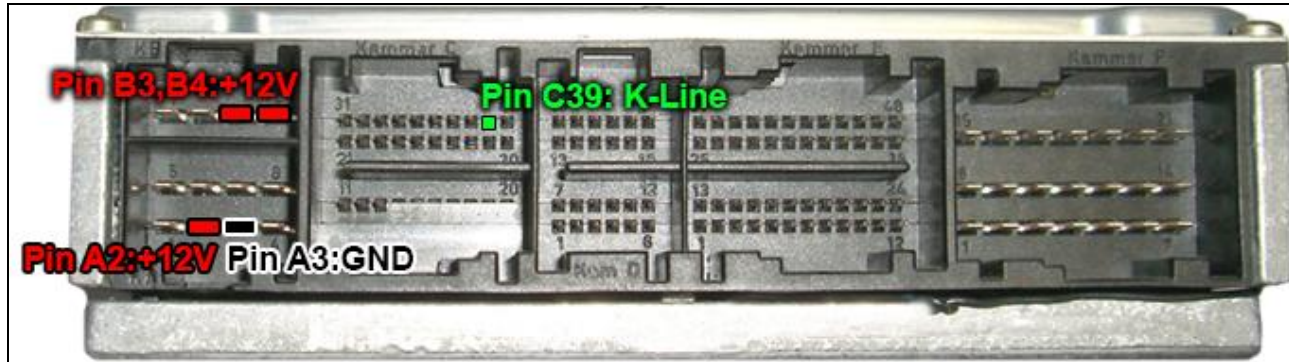

FOR ALFA ROMEO:
Use serial driver Alfa Romeo (the boot is in the reading)

Gray wire of
Tricore cable