


BOSCH MED17.1.1 [1797] – VW, Audi, Seat, Skoda [Gasoline]

Collegare il cavo multifunzione nel seguente modo:

Connect the multifunction cable as follows:

RED: + 12V	5, 50
BLACK: GROUND	1
BLUE: CAN-H	79
ORANGE: CAN-L	80
WHITE	36
BROWN	34

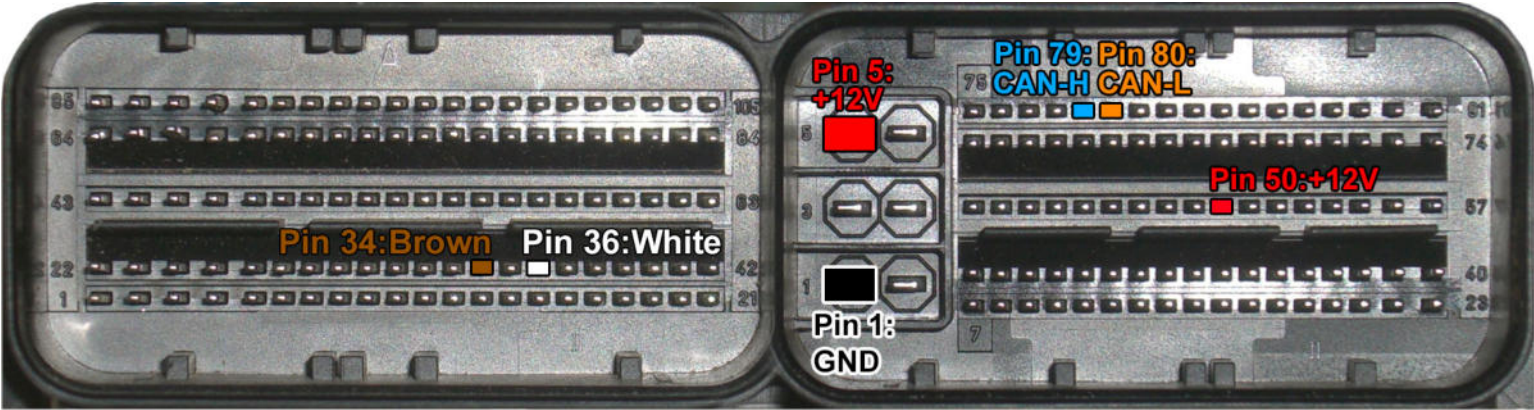

Per leggere e scrivere utilizzare il seguente driver:
→ BENCH TRICORE
→ VOLKSWAGEN / AUDI / SEAT / SKODA
→ TC1797 - VAG
→ **MED17.1.1**

To read and write use the following driver:
→ BENCH TRICORE
→ VOLKSWAGEN / AUDI / SEAT / SKODA
→ TC1797 - VAG
→ **MED17.1.1**

Attenzione:
Alcune MED17.1.1 entrano in bench mode con il filo marrone spostato sul Pin 18. Se con il precedente pinout non dovesse entrare in modalità bench tricore quindi, riprovare connettendolo come segue:

Attention:
Some MED17.1.1 enter in Bench mode with the brown wire on Pin 18. If with the previous pinout doesn't go in bench tricore mode, then try again by connecting it as follows:

