



ECU Siemens MSD87.2 - TC1796 Int - Ext. Flash

FASE 1: RICERCA PASSWORD

Per trovare la password bisogna connettere lo strumento alla macchina tramite la presa OBD e lanciare il driver:

OBD TOOL PASSWORD MSD80/81/85/87 BMW

Successivamente sarà possibile smontare la centralina dalla macchina e porla in Boot mode come alla seguente fase 2.

(Attenzione: Se non viene trovata la password sulla macchina bisogna provare a banco connettendo il pinout con il filo rosso +12V al posto del verde di ignition)

STEP 1: SEARCH PASSWORD

To find the password you must connect the tool by OBD plug to the car and use the driver:

OBD TOOL PASSWORD MSD80/81/85/87 BMW

After that, you will disassemble the car's control unit and set it in Boot mode like in next step 2.

(Attention: if it don't find password on the car you must try on the table connecting the pinout with red wire +12V where there is the green wire of ignition)

FASE 2: LETTURA/SCRITTURA IN BOOT MODE

Porre la centralina in Boot mode, quindi connettere il seguente pinout e saldare le resistenze come nella figura sottostante. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1796

STEP 2: READ/WRITE IN BOOT MODE

Set in Boot mode the ECU, so connect the following pinout and solder the resistances like shown in the figure below.

Use the driver:

BOOT MODE TRICORE SAK TC1796


RED: +12V

BLACK: Ground

GREEN: Ignition

BLUE: Can-H

ORANGE : Can-L

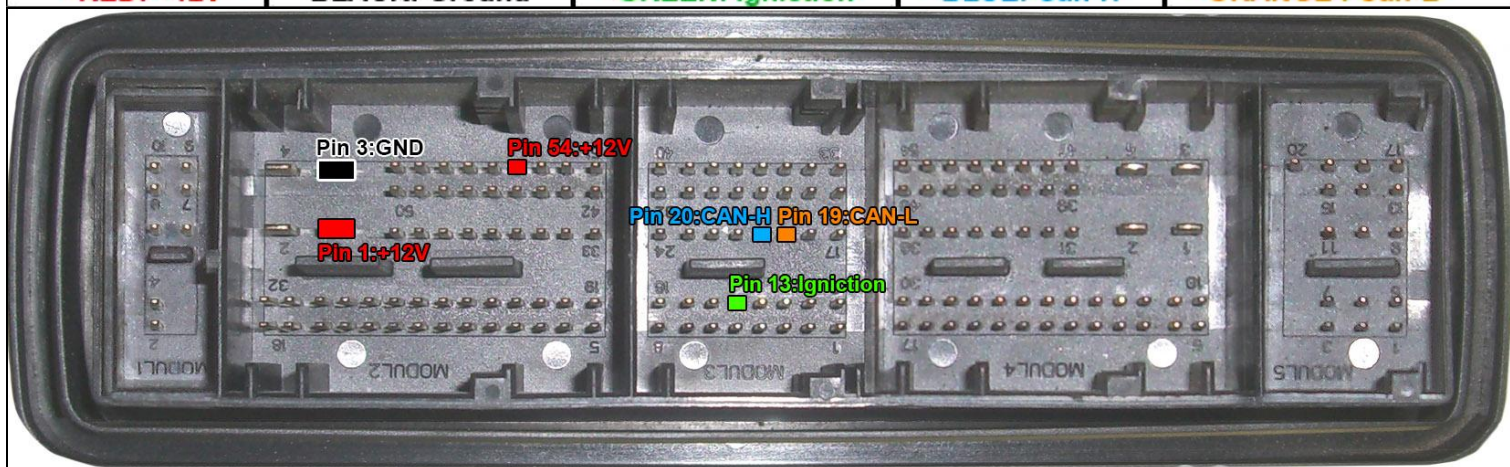

BOOTMODE:

