



ECU Vag EDC17 CP20 - TC1796 Internal - External Flash

FASE 1:



Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare il filo grigio nel punto di Boot indicato nella figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1796

STEP1:

Set in Boot Mode the ECU, so connect the following pinout and solder the gray wire in the boot pin shown in the figure. Use the driver:

BOOT MODE TRICORE SAK TC1796

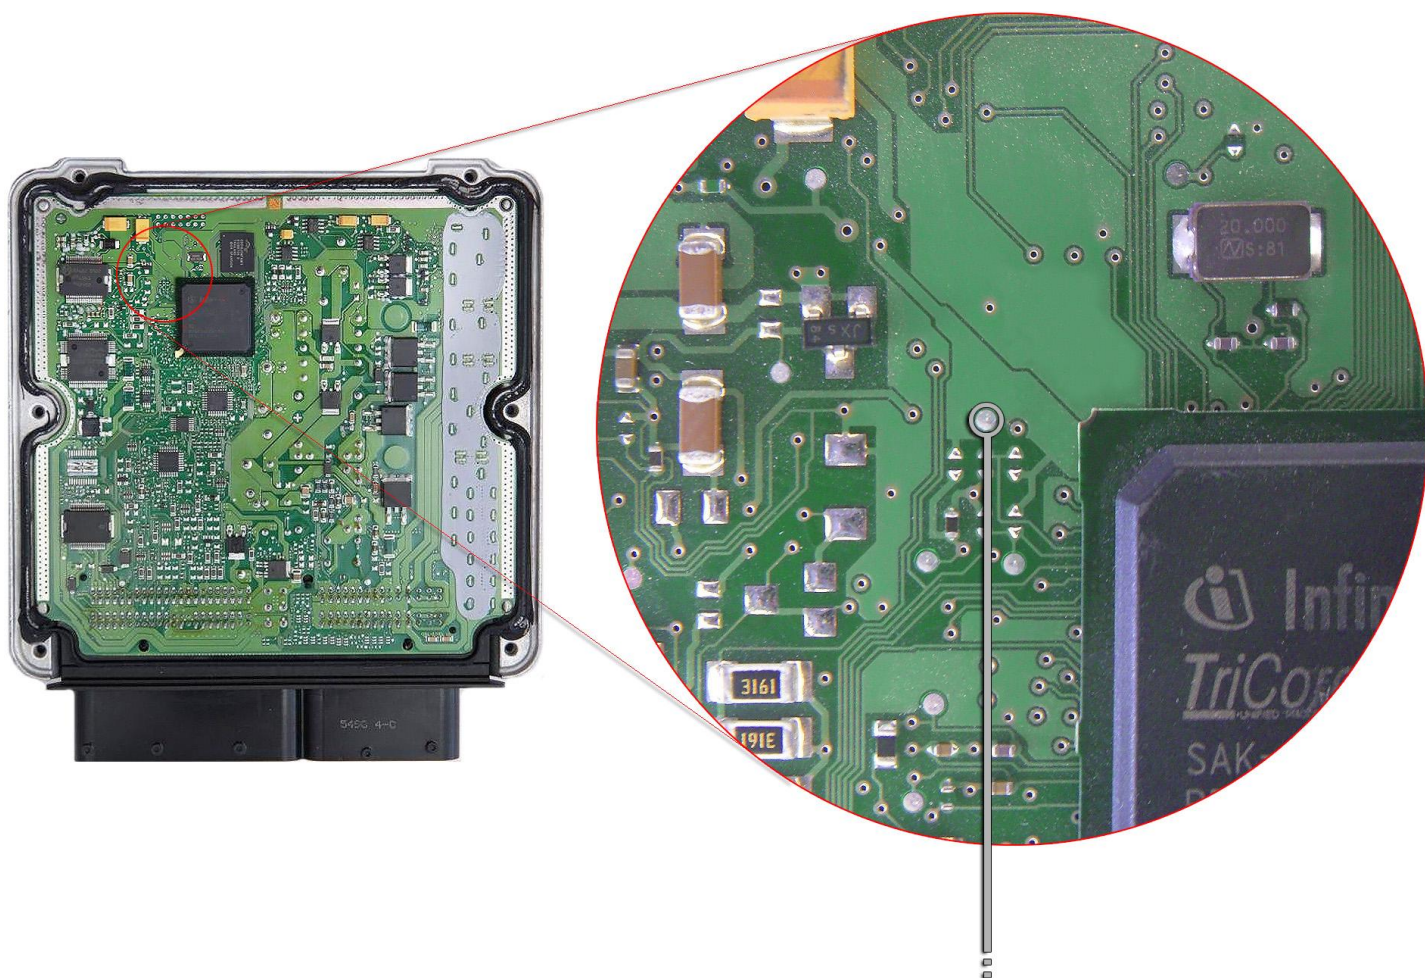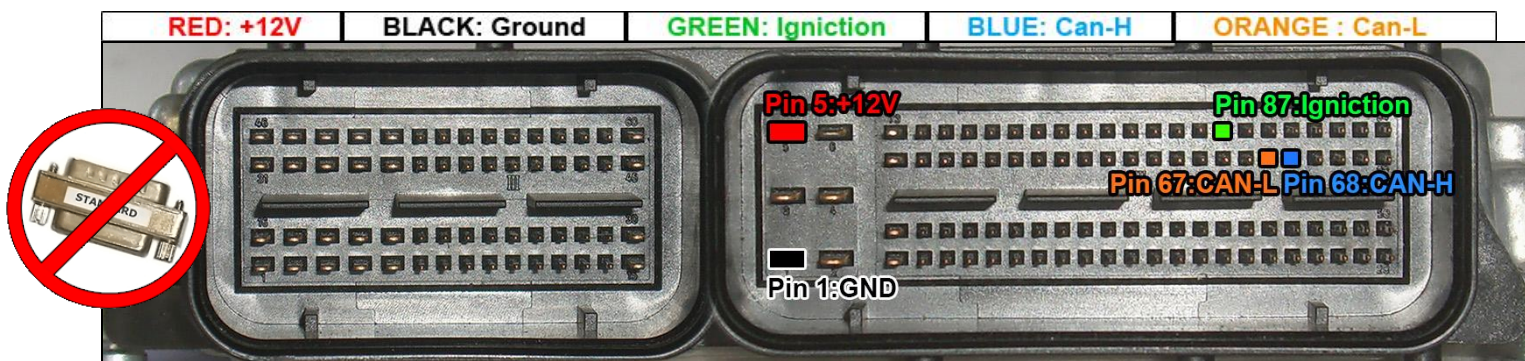

Gray wire of the Tricore cable

Se a inizio lettura esce il messaggio di errore :
**“ERROR UNLOCK READ - TRY TOOL TRICORE
 PASSWORD”**
 seguire le istruzioni a pagina successiva alla fase 2..

When you start reading if appear the error message:
**“ERROR UNLOCK READ - TRY TOOL TRICORE
 PASSWORD”**
 follow the instructions on next page to step 2...

FASE 2:


Dissaldare il filo grigio per disabilitare il Boot Mode, sostituire sul pinout il filo verde con un filo rosso del cavo Tricore come in figura seguente, e utilizzare il driver:

OBD TOOL PASSWORD TPROT V08 VAG

STEP 2:

Unsolder the gray wire to disable the Boot Mode, change on the pinout the green wire with a red wire and use the driver:

OBD TOOL PASSWORD TPROT V08 VAG

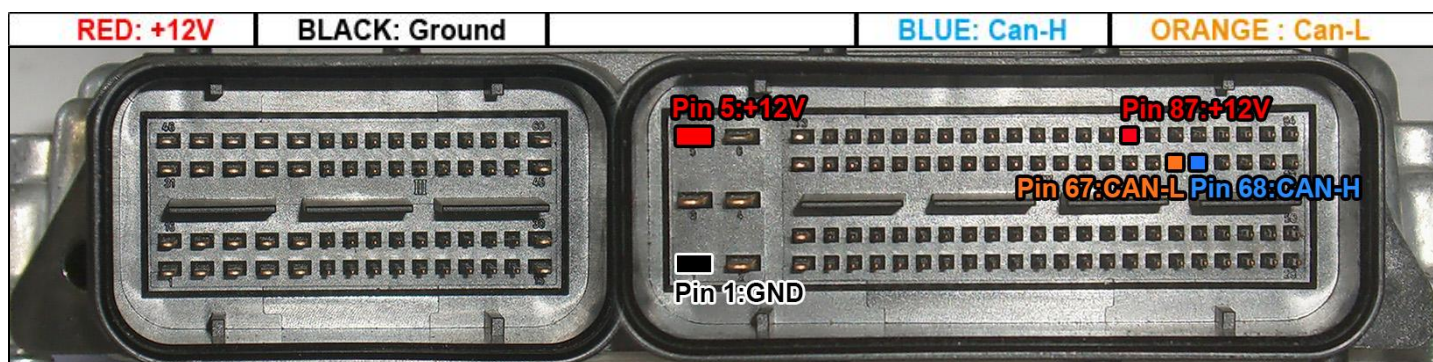

A questo punto, una volta trovate le password, sarà possibile leggere/scrivere la centralina. Quindi, porre nuovamente la centralina in Boot Mode come descritto alla Fase 1. [Clicca qui](#).

Now, once you have found the password, you can read/write the ECU. So, set in Boot Mode the ECU as described in step 1. [Click here](#).