


**PEUGEOT / CITROEN – FORD
SIEMENS SID802–804–805–806 (Diesel)**

Micro: C167

Driver: SID801/802/804/805/806 BOOT 29F200/400BB CRIPT

RED: + 12V | BLACK: GROUND | GREEN: K-LINE

USE TRICORE CABLE

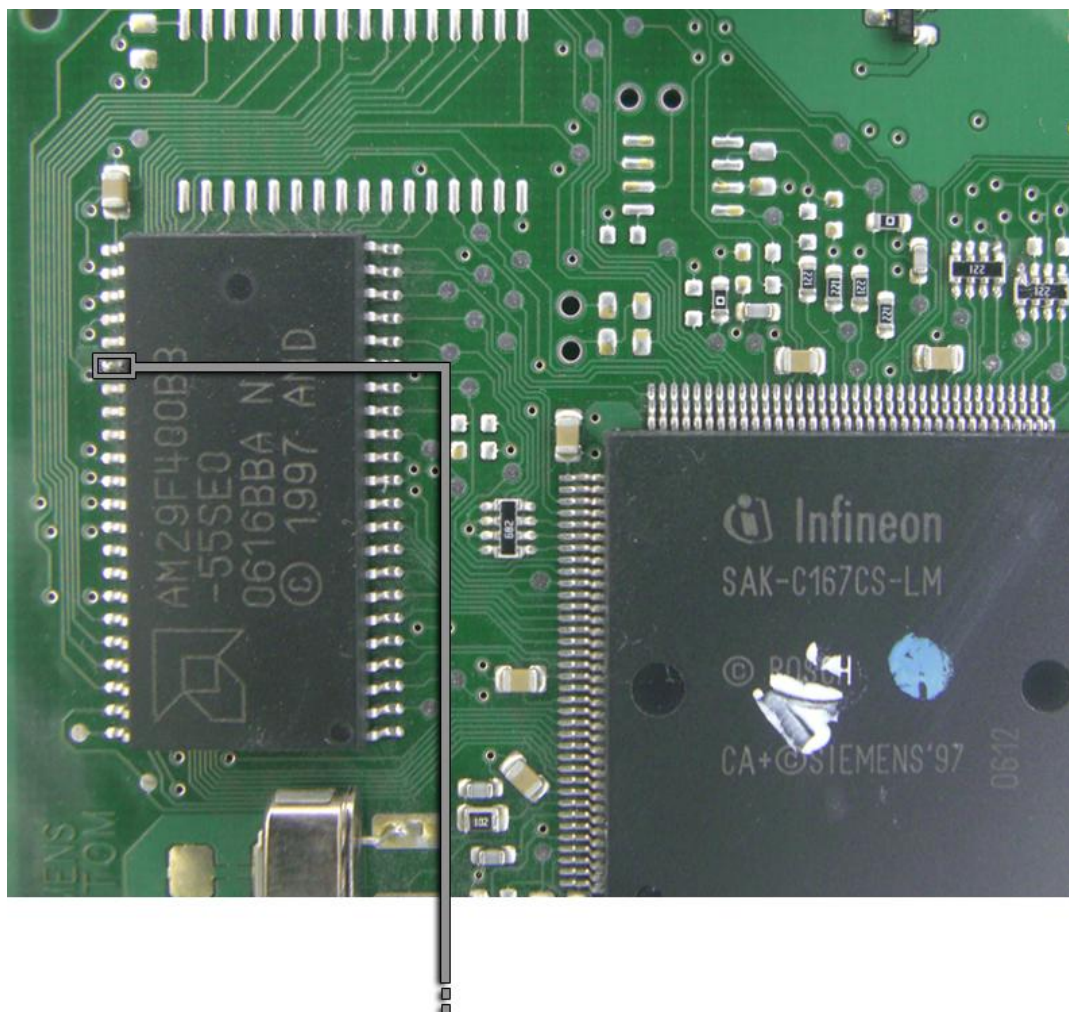

Gray wire of Tricore cable

ATTENZIONE:


**SE NON FUNZIONA IL BOOT, BISOGNA PROCEDERE CON IL SECONDO METODO
DI BOOT RX TX A PAGINA SUCCESSIVA..**

ATTENTION:


**IF THE BOOT DOES NOT WORK, YOU MUST PROCEED WITH THE SECOND METHOD
OF BOOT RX TX TO NEXT PAGE..**

Micro: C167
Driver: SID802/804/805/806 BOOT 29F200/400BB CRIPT *Rx Tx

USE RENESAS CABLE

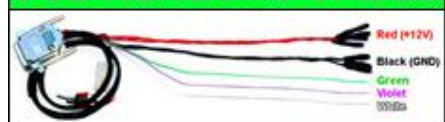

WIRES OF RENESAS CABLE
TX RX GND
VIOLET WHITE BLACK

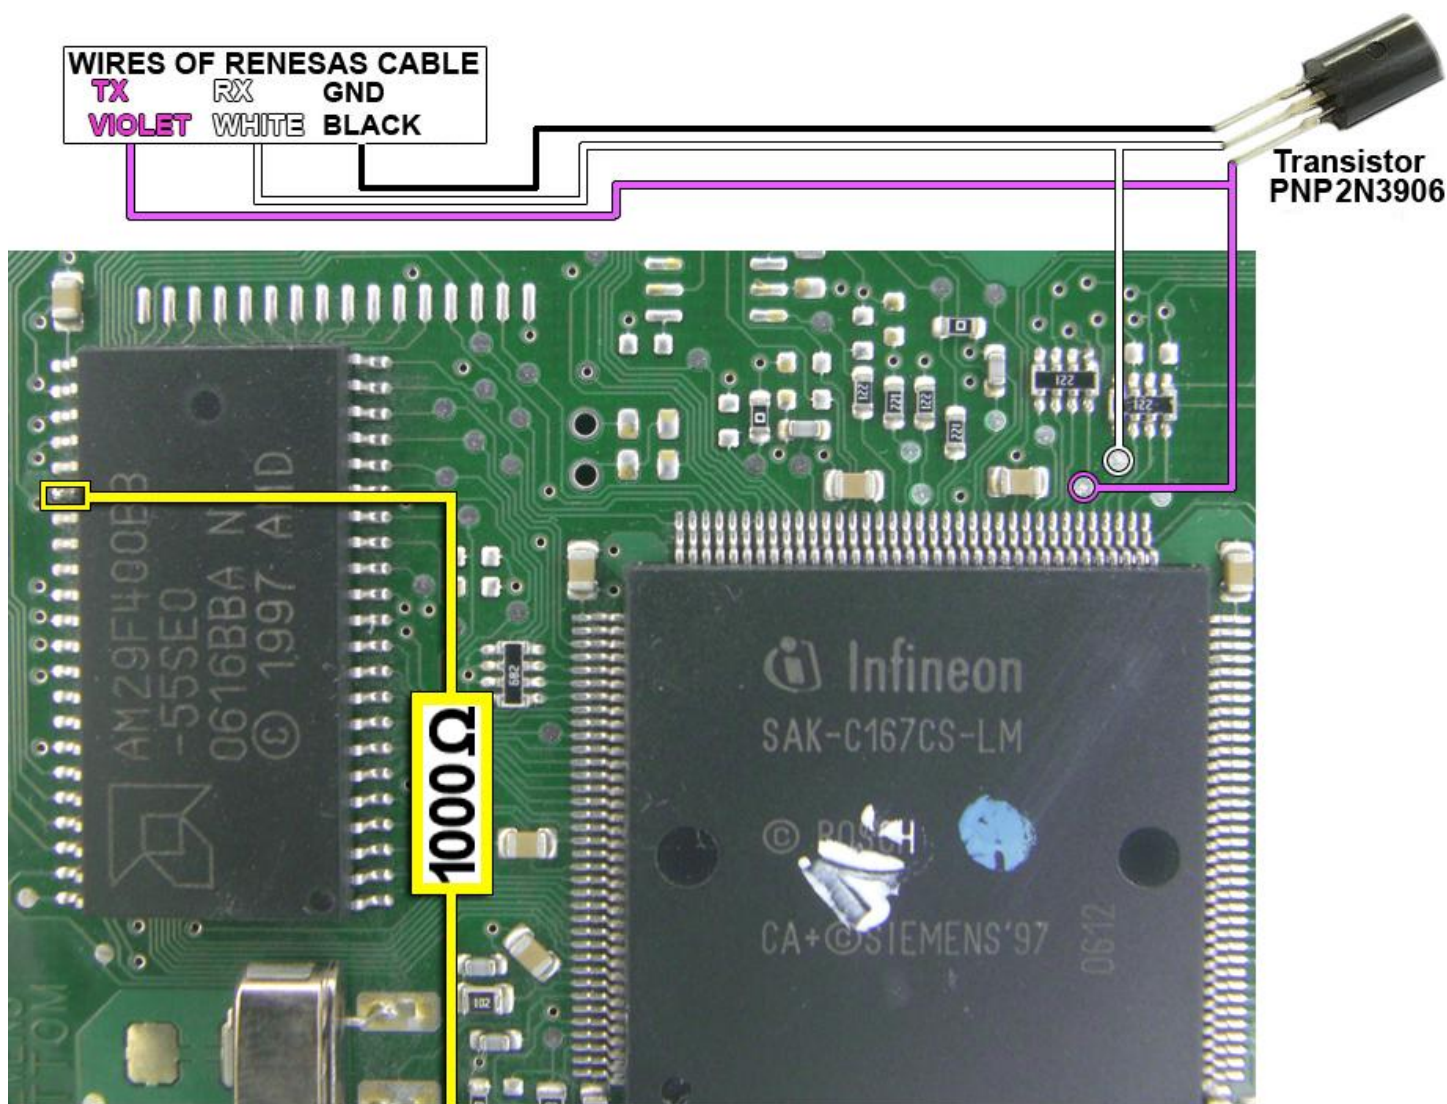

GND (Black wire of Renesas cable)