



**FORD – TROLLER
SIEMENS SID901 (Diesel)**

Micro: C167

Driver: SIEMENS VDO BOOT 29F200/400BB CRIPT

RED: + 12V | **BLACK: GROUND** | **GREEN: K-LINE**

USE TRICORE CABLE

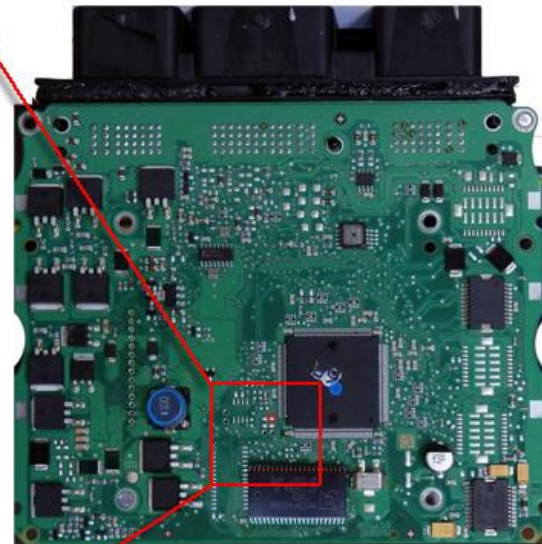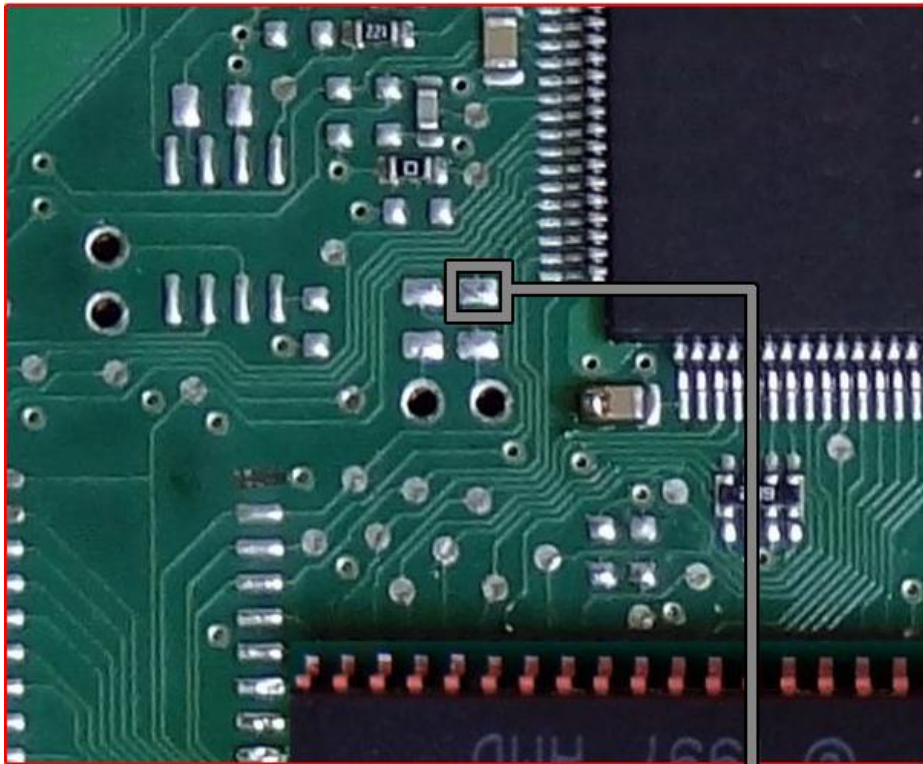

Gray wire of Tricore cable