

PORSCHE CONTINENTAL SDI6 (Gasoline)




DRIVER: Tool Boot mode → Infineon Tricore Boot → Tricore Sak TC1796 Continental ems SDI8
MICRO: TC1796 Internal Flash

INFO

(EN) Connect the following pinout with the Tricore Cable and put the Ecu in Bootmode. (Use the Bench+)


(IT) Collegare il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode. (Usare il Bench+)

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L**

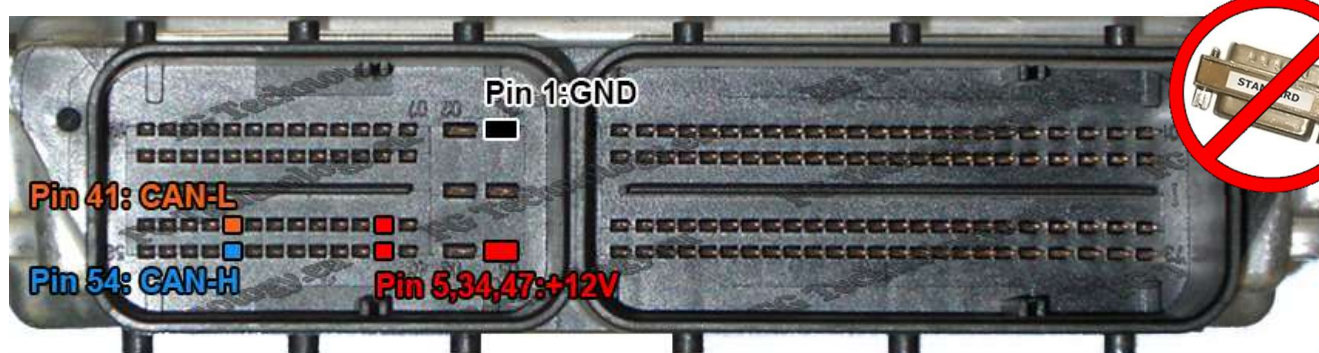


(EN) Similar connection example.

(IT) Esempio di connessione simile.

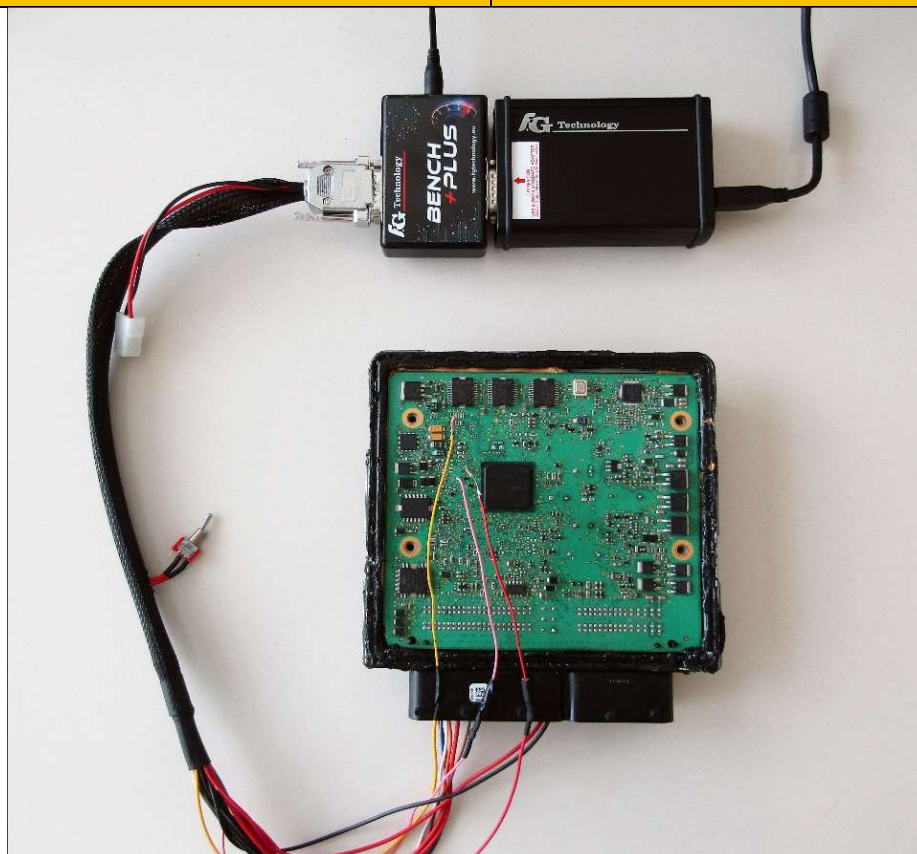

(EN) Connect the 1000 and 560 Ohm resistors, links and wires on the Ecu card as pictured.
(Power the instrument from the benchplus adapter with a battery or bench power supply)

(IT) Collegare le resistenze da 1000 e 560 Ohm, i link e i fili sulla scheda della Ecu come in foto.
(Alimentare lo strumento dall'adattatore benchplus con una batteria o un alimentatore da banco)

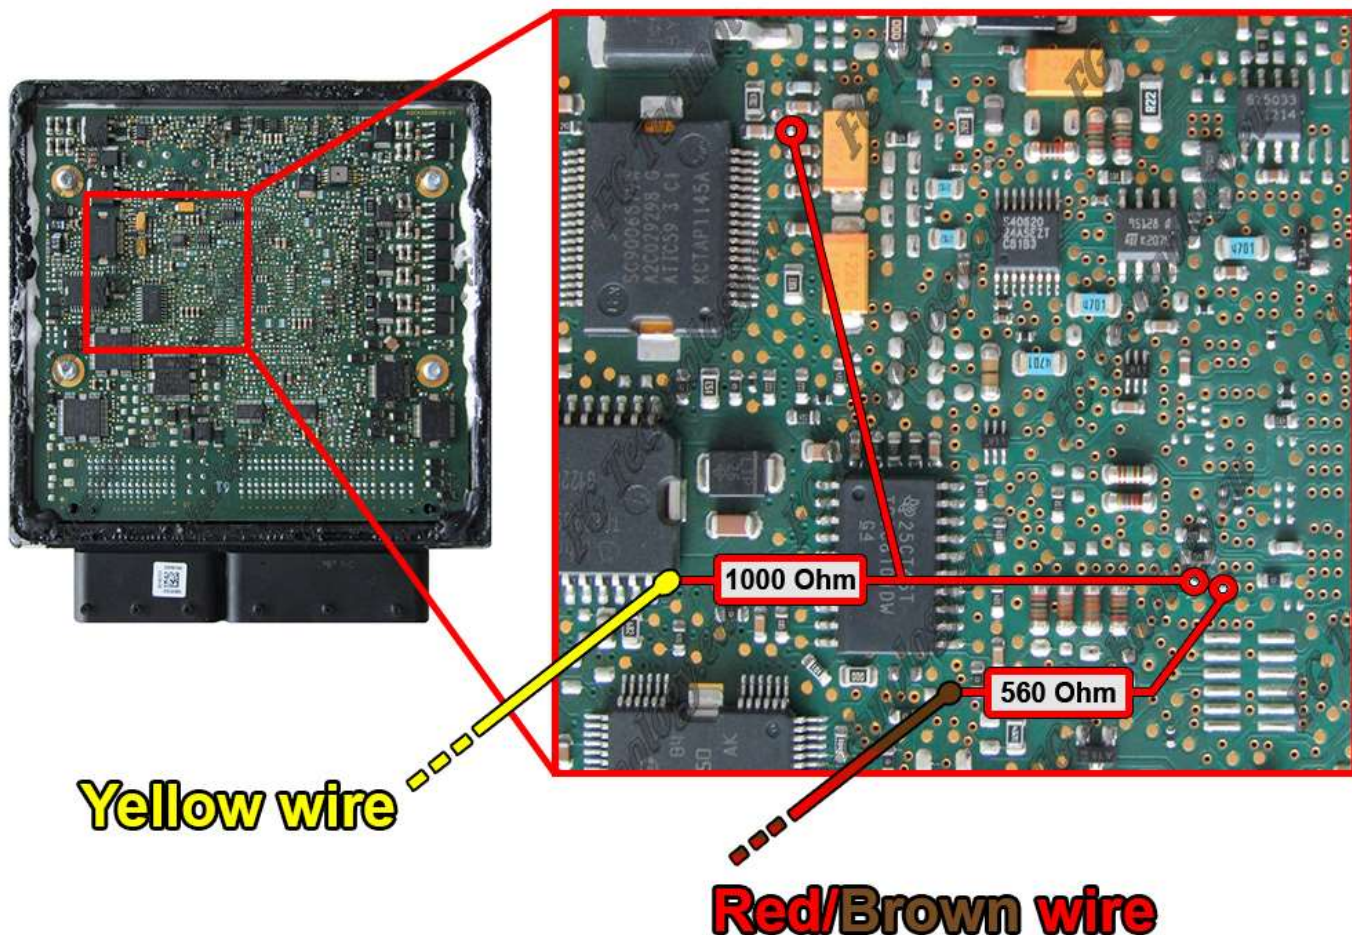

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.