

ECU DELPHI MERCEDES BENZ

DCM3.2 - CRD11




DRIVER: Bdm/Jtag mode → Bdm MPC → MPC55x/56x
MICRO: MPC55x/56x

INFO

(EN) Connect the following pinout with the Tricore Cable.


(IT) Collegare il seguente pinout con il cavo Tricore.

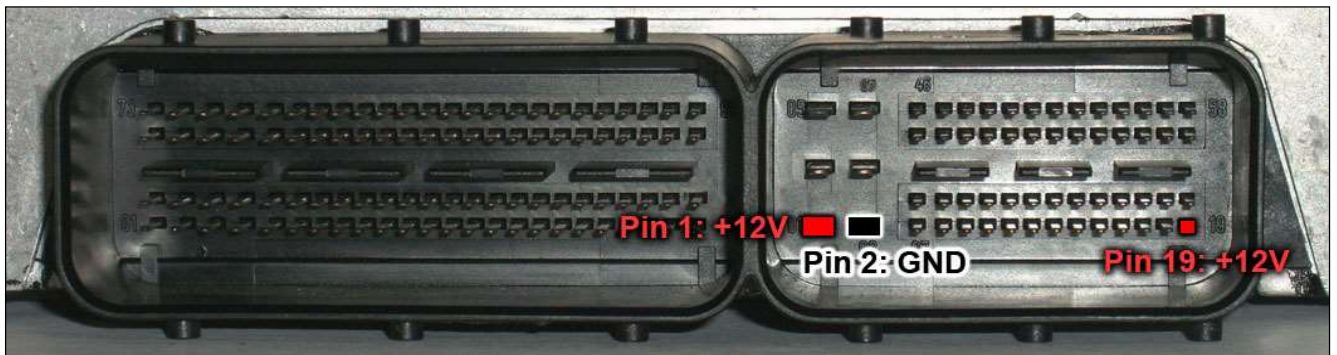

(EN) Material required:

(IT) Materiale necessario:

Delphi BDM Adapter

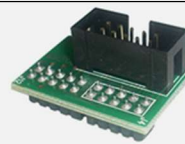

Gray flat cable




Pin strip




(EN) It needs to clean the card in the interested zone in a such way that it is deprived of any protective agent and after of that solder the pin strip.

(IT) Occorre pulire la scheda nella zona interessata in modo tale che sia priva di qualsiasi agente protettivo e successivamente saldare i pin strip.

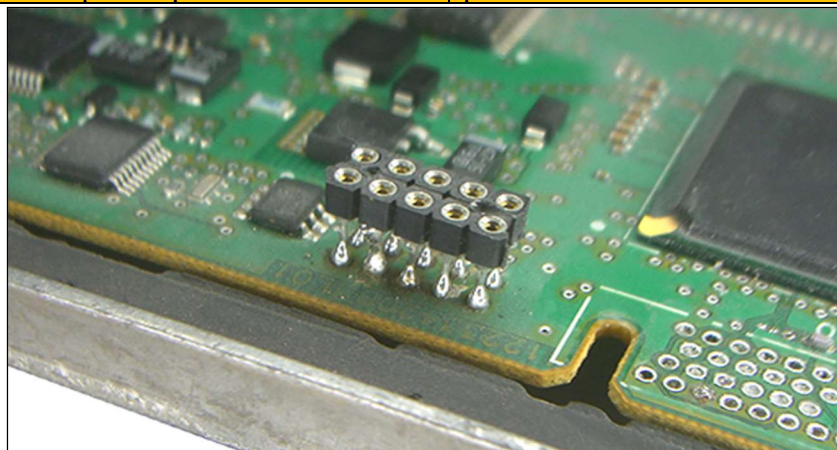


(EN) Do a link like in figure:

(IT) Effettuare un link come in figura:

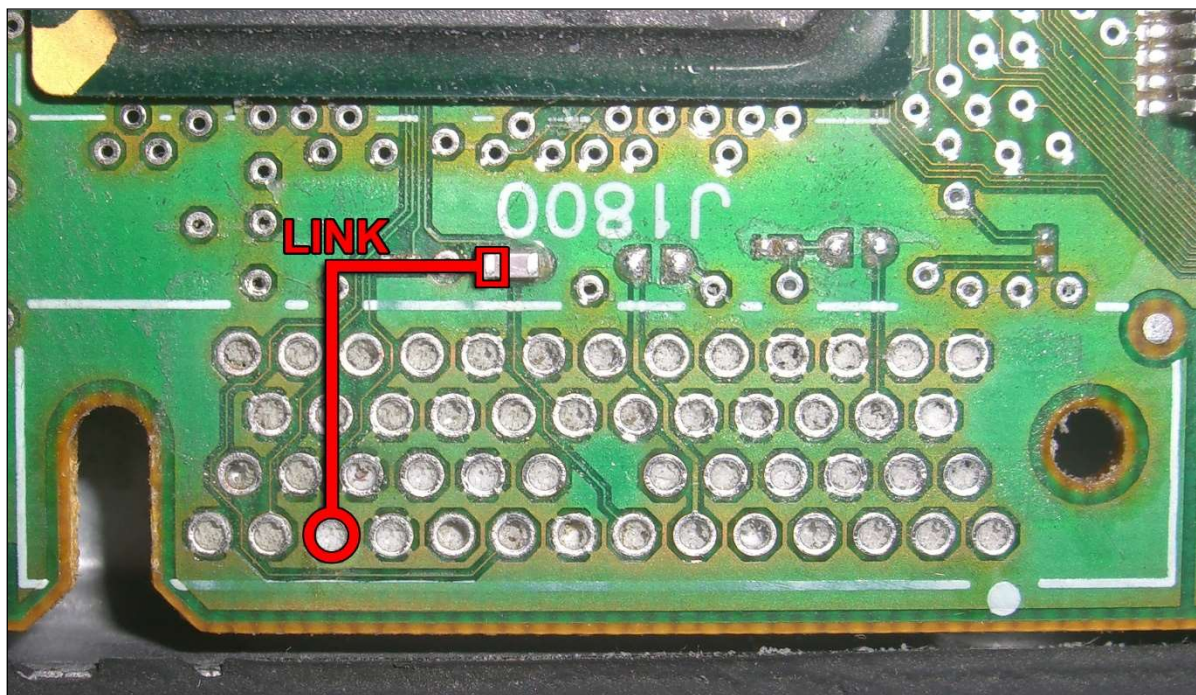

(EN) Now insert Delphi adapter in the pin strip with the cable flat in MIRROR position like in photo:

(IT) A questo punto inserire l'adattatore Delphi nei pin strip con il cavo flat nella posizione MIRROR come in foto:

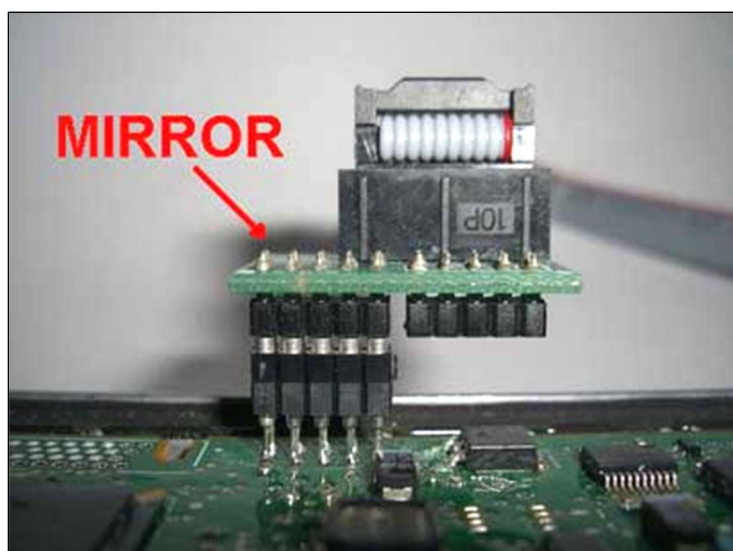

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.