

VAG GROUP

CONTINENTAL SIMOS PCR2.1 (≥Firmware 71)




DRIVER: Tool Boot mode → Infineon Tricore Boot → Tricore Sak TC1796 Continental simos PCR2.1
MICRO: TC1796 Internal Flash

INFO

(EN) Set the tool as shown in the photo, connect the following pinout with the Tricore Cable and put the Ecu in Bootmode.


(IT) Impostate lo strumento come mostrato nella foto, collegate il seguente pinout con il cavo Tricore e mettere l'ecu in Bootmode.

RED: + 12V | **BLACK: GROUND** | **BLUE: CAN-H** | **ORANGE : CAN-L** | **WHITE** | **BROWN**

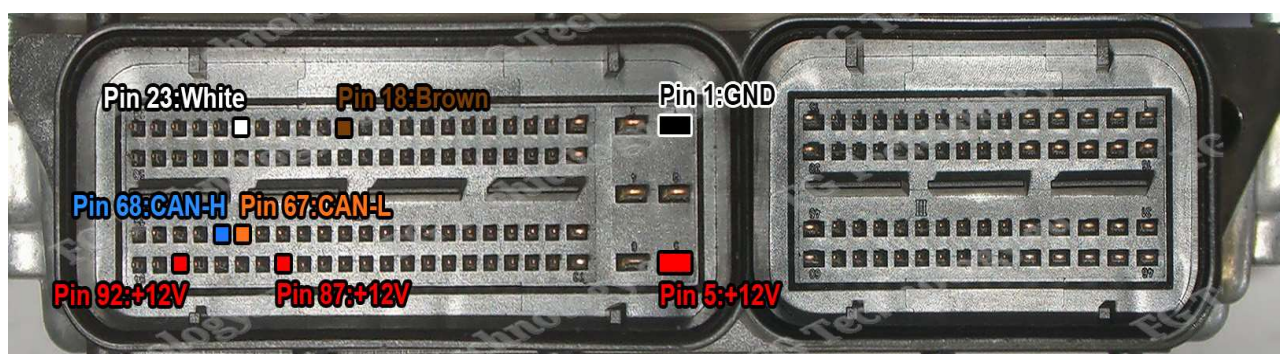

(EN) Connection example.

(IT) Esempio di connessione.

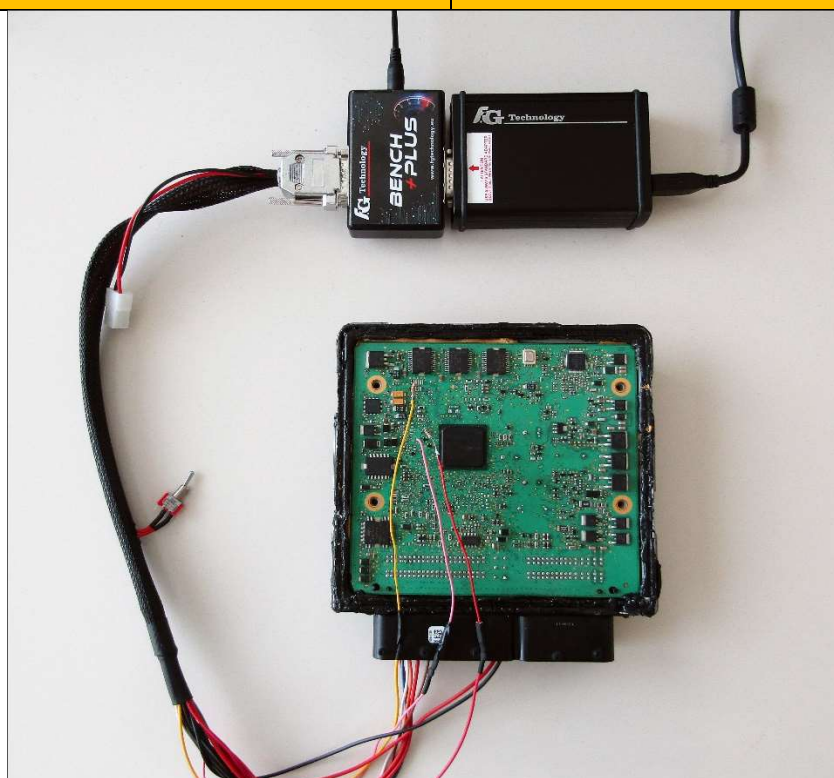

(EN) Connect the 1000 and 560 Ohm resistors, link and wires on the Ecu card as pictured.
(Power the instrument from the benchplus adapter with a battery or bench power supply)

(IT) Collegare le resistenze da 1000 e 560 Ohm, il link e i fili sulla scheda della Ecu come in foto.
(Alimentare lo strumento dall'adattatore benchplus con una batteria o un alimentatore da banco)

