

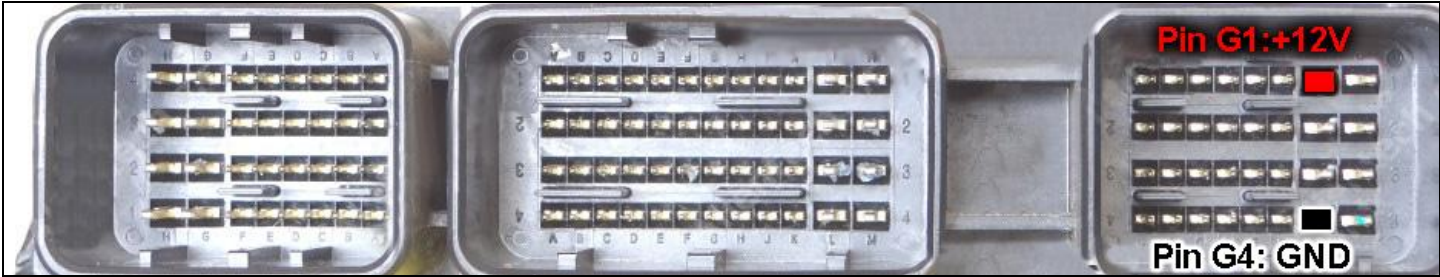


Renault - Hitachi MEC800

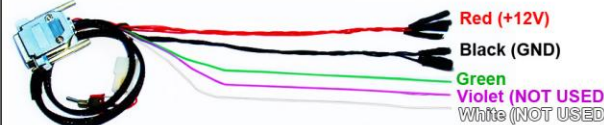

READ THE ECU		DRIVER TO USE: BDM/JTAG > BDM/JTAG MODE > BDM RENESAS > RENESAS AUD	
1 - REMOVE THE STANDARD ADAPTER 	2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD 	3 - USE THE COLOR FLAT CABLE 	4 - DO FOUR LINKS

STEP 1/2 (FRONTSIDE):

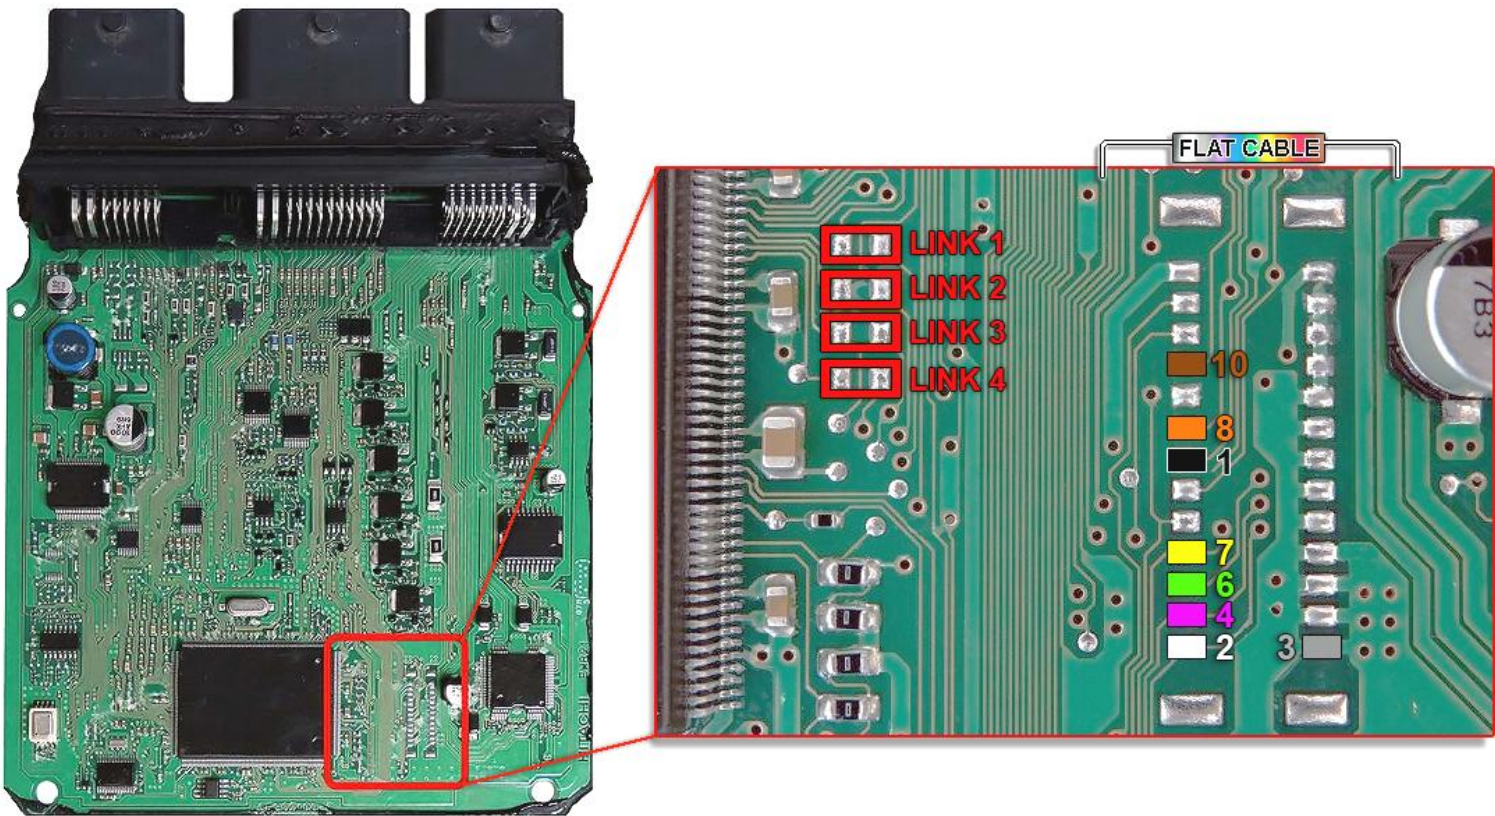

STEP 2/2 (BACKSIDE):



For writing follow the instructions on the next page.


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE


1 - REMOVE THE
STANDARD ADAPTER



2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT
AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL
BOARD

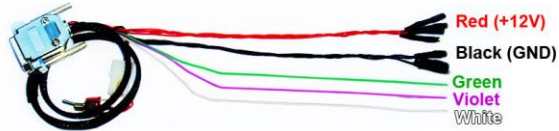

3 - DO A LINK

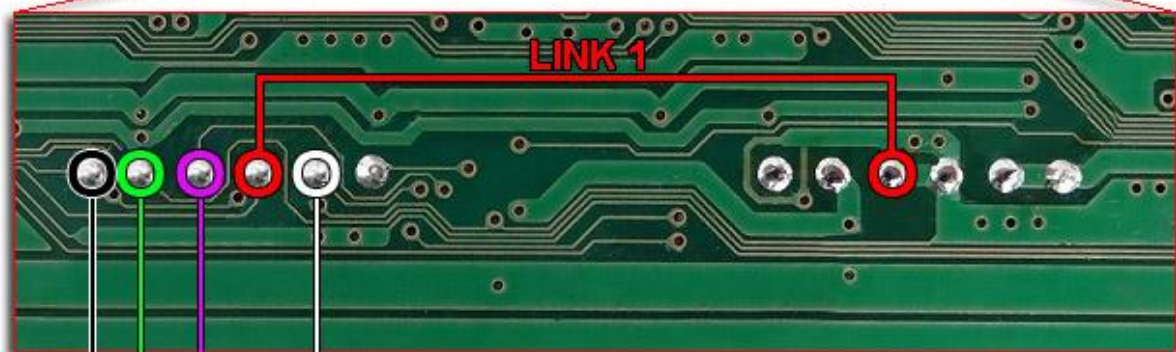

BLACK GREEN VIOLET WHITE
wired of the Renesas cable