



ECU Siemens MSD80 - TC1796 Internal Flash

FASE 1: RICERCA PASSWORD

Per trovare la password bisogna connettere lo strumento alla macchina tramite la presa OBD e lanciare il driver:
OBD TOOL PASSWORD MSD80/81/85/87 BMW.
Successivamente sarà possibile smontare la centralina dalla macchina e porla in Boot mode come alla seguente fase 2.

(**Attenzione:** Se non viene trovata la password sulla macchina si può provare a banco connettendo solo il pinout con il filo rosso +12V al posto del filo verde di ignition)

STEP 1: SEARCH PASSWORD

To find the password you must to connect the tool by OBD plug to the car and use the driver:
OBD TOOL PASSWORD MSD80/81/85/87 BMW.
After that, you will disassemble the car's control unit and set it in Boot mode like in next step 2.

(**Attention:** if it don't find password on the car you can try on the table connecting only the pinout with red wire +12V where there is the green wire of ignition)

FASE 2: LETTURA/SCRITTURA IN BOOT MODE

Porre la centralina in Boot mode, quindi connettere il seguente pinout e saldare le resistenze come nella figura sottostante. Utilizzare il driver:


BOOT MODE TRICORE SAK TC1796

STEP 2: READ/WRITE IN BOOT MODE

Set in Boot mode the ECU, so connect the following pinout and solder the resistances like shown in the figure below.

Use the driver:

BOOT MODE TRICORE SAK TC1796

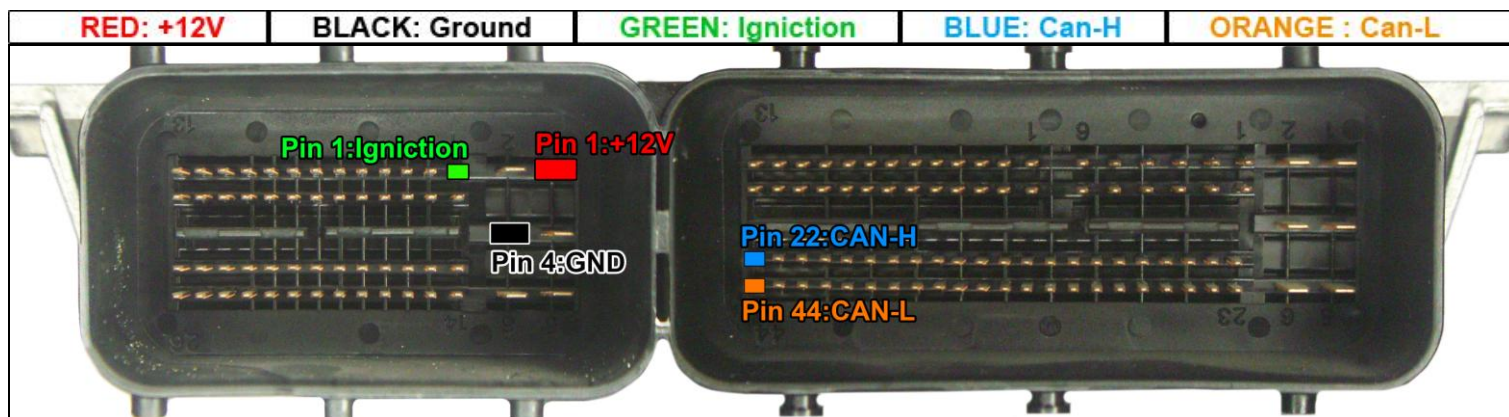

BOOTMODE:

