


**GEELY
BOSCH M7.9.7 (Gasoline)**

Micro: ST10F275

Driver: ST10F273/5/6 BOOT MODE

RED: + 12V | **BLACK: GROUND** | **GREEN: K-LINE**

USE TRICORE CABLE

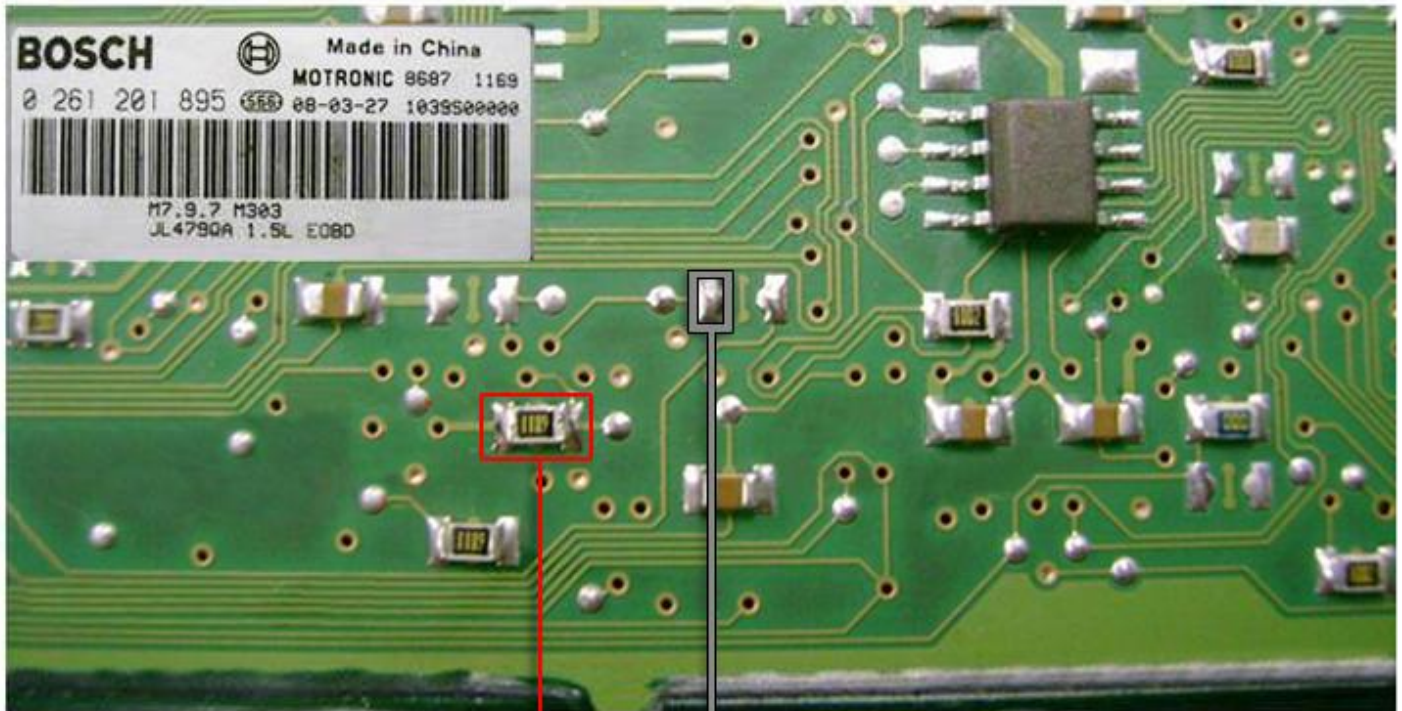

**Remove this resistance
before read and write.
Solder it before climb
on the Ecu on the car.**

Gray wire of Tricore cable