



ECU Siemens Continental SID310 - TC1791 Internal Flash



FASE 1:

Per trovare la password bisogna connettere lo strumento sulla macchina tramite la presa OBD e lanciare il driver:

OBD TOOL PASSWORD SID310

RENAULT – NISSAN – MERCEDES

Successivamente sarà possibile smontare la centralina dalla macchina e porla in Boot mode come alla seguente fase 2.

(Attenzione: Se non viene trovata la password sulla macchina bisogna provare a banco connettendo il pinout.)

STEP 1:

To find the password you must to connect the tool by OBD plug on the car and use the driver:

OBD TOOL PASSWORD SID310

RENAULT – NISSAN – MERCEDES

After that, you will disassemble the car's control unit and set it in Boot mode like in next step 2.

(Attention: if it don't find password on the car you must try on the table connecting the pinout.)

FASE 2:

Porre la centralina in Boot mode, quindi connettere il seguente pinout e saldare le resistenze/link come nella figura.

Utilizzare il driver:


BOOT MODE TRICORE SAK TC1791

STEP 2:

Set in Boot mode the ECU, so connect the following pinout and solder the resistances/link like shown in the figure below.

Use the driver:

BOOT MODE TRICORE SAK TC1791

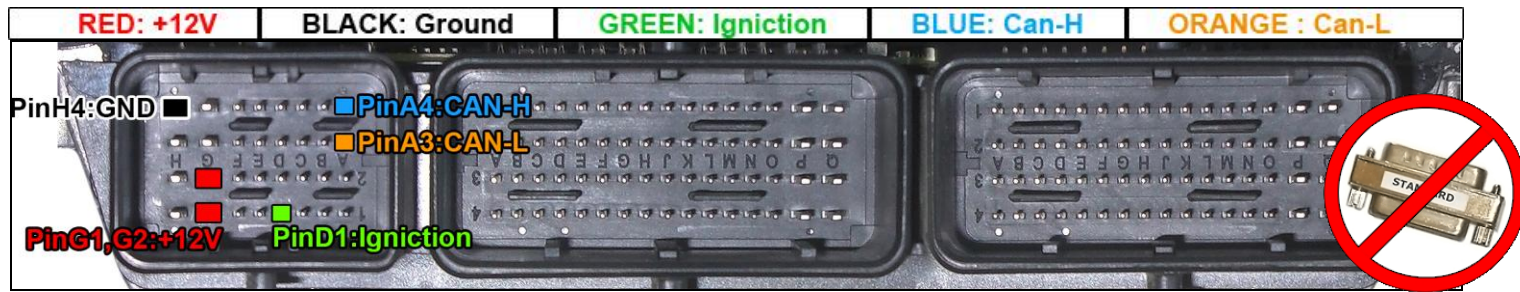

BOOTMODE:

