



DAEWOO

ECU DELPHI MT60 - TC1766 Internal Flash

Porre la centralina in Boot Mode, quindi connettere il seguente pinout, sollevare il pin del micro indicato in foto e saldare la resistenza e il filo grigio come illustrato. Utilizzare il driver: **BOOT MODE TRICORE SAK TC1766**



Set in Boot Mode the ECU, so connect the following pinout, lift the pin of the micro and the resistance and the gray wire like shown in the figure. Use the driver: **BOOT MODE TRICORE SAK TC1766**

RED: +12V

BLACK: Ground

BLUE: Can-H

ORANGE : Can-L

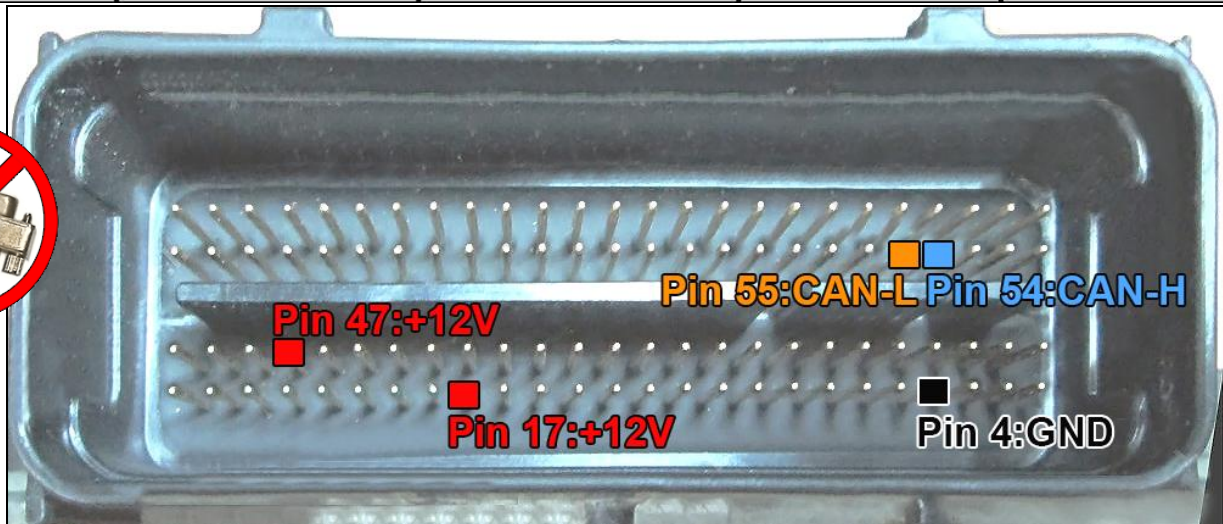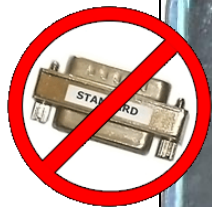

1000 Ω

Give
+3,3V

Gray wire of the
Tricore cable