


ECU CONTINENTAL HYUNDAI-KIA EMS2000

DRIVER: Bdm/Jtag mode → Bdm MPC →
MPC55x/56x
MICRO: MPC55x/56x

INFO

(EN) Connect the following pinout with the Tricore Cable.


(IT) Collegare il seguente pinout con il cavo Tricore.

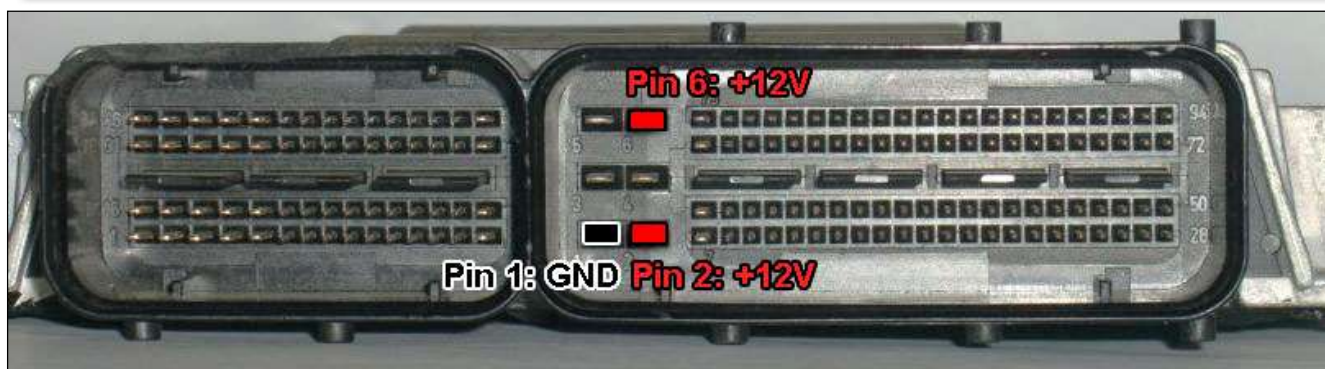

(EN) Material required:

(IT) Materiale necessario:

Siemens Marelli
BDM Adapter tight

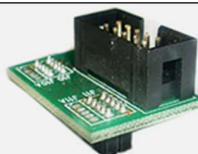

Gray flat cable



Pin strip




(EN) Follow on next page..

(IT) Segue a pagina successiva..


(EN) It needs to clean the card in the interested zone in a such way that it is deprived of any protective agent and after of that solder the pin strip.

(IT) Occorre pulire la scheda nella zona interessata in modo tale che sia priva di qualsiasi agente protettivo e successivamente saldare i pin strip.

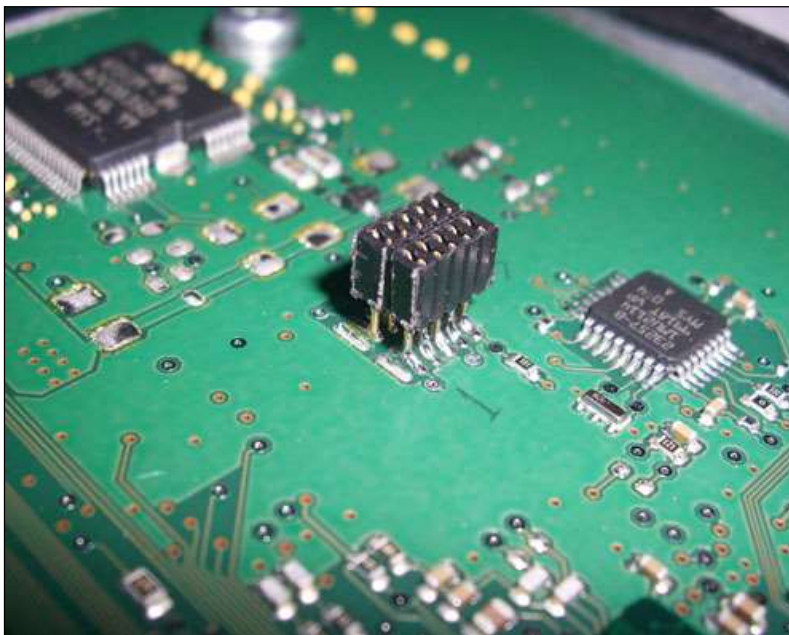

(EN) Now insert Siemens adapter in the pin strip with the cable flat like in photo:

(IT) A questo punto inserire l'adattatore Siemens nei pin strip con il cavo flat come in foto:

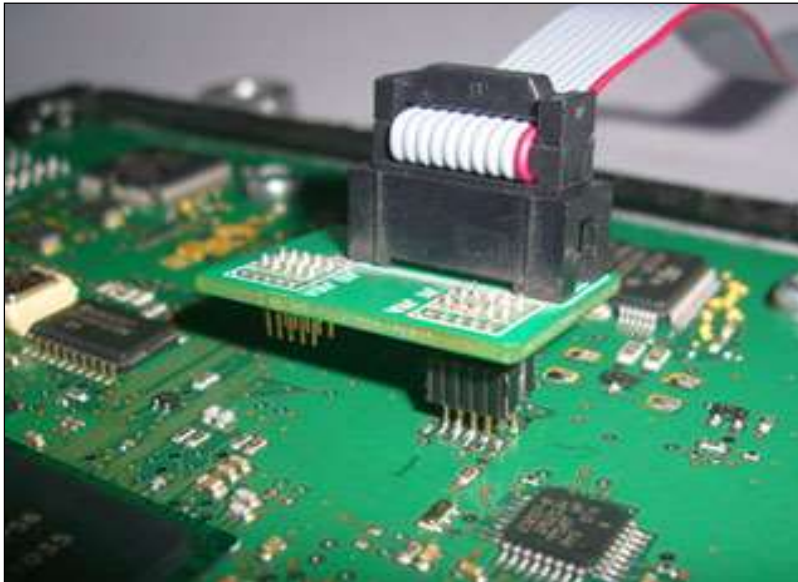

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.