


STEP 2/2 (BACKSIDE):

Nella parte inferiore saldare la resistenza da 1 K Ω / Backside join a resistance of 1K Ω

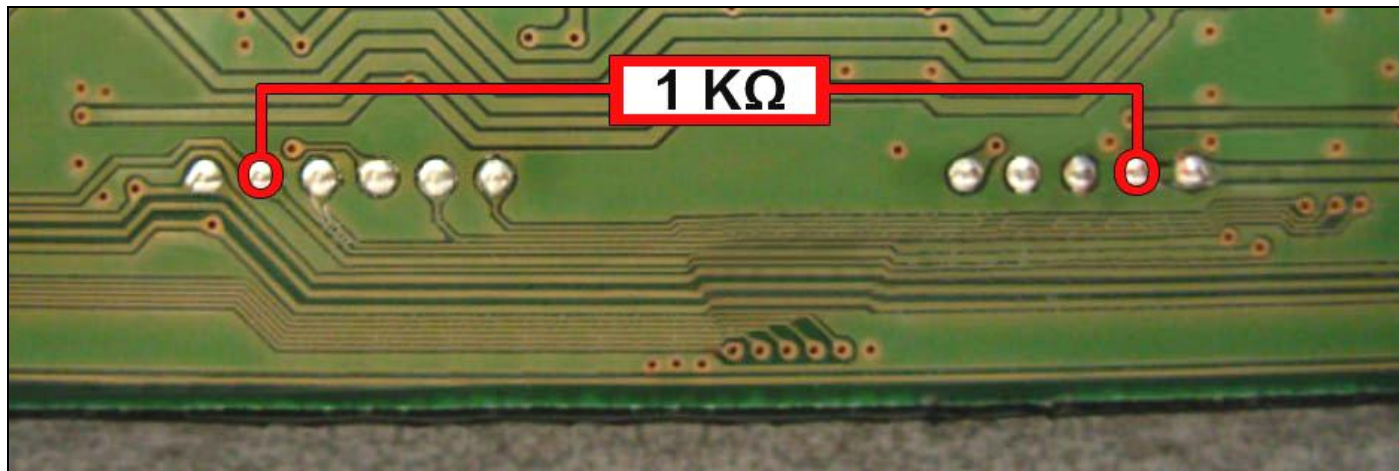


WRITE THE ECU

DRIVER TO USE: TOOL BOOT > TOOL BOOT MODE > RENESAS > RENESAS SH705x MODE

- 1 - REMOVE THE STANDARD ADAPTER




- 2 - USE THE RENESAS CABLE TO GIVE POWER THROUGH THE PINOUT AND, IF DESCRIBED, THE WIRES SOLDERED TO THE ELECTRICAL BOARD

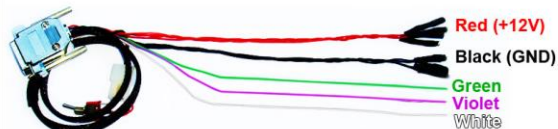

- 3 - DO A LINK

- 4 - USE A RESISTANCE OF 1 Kohm

STEP 1/2 (BACKSIDE):

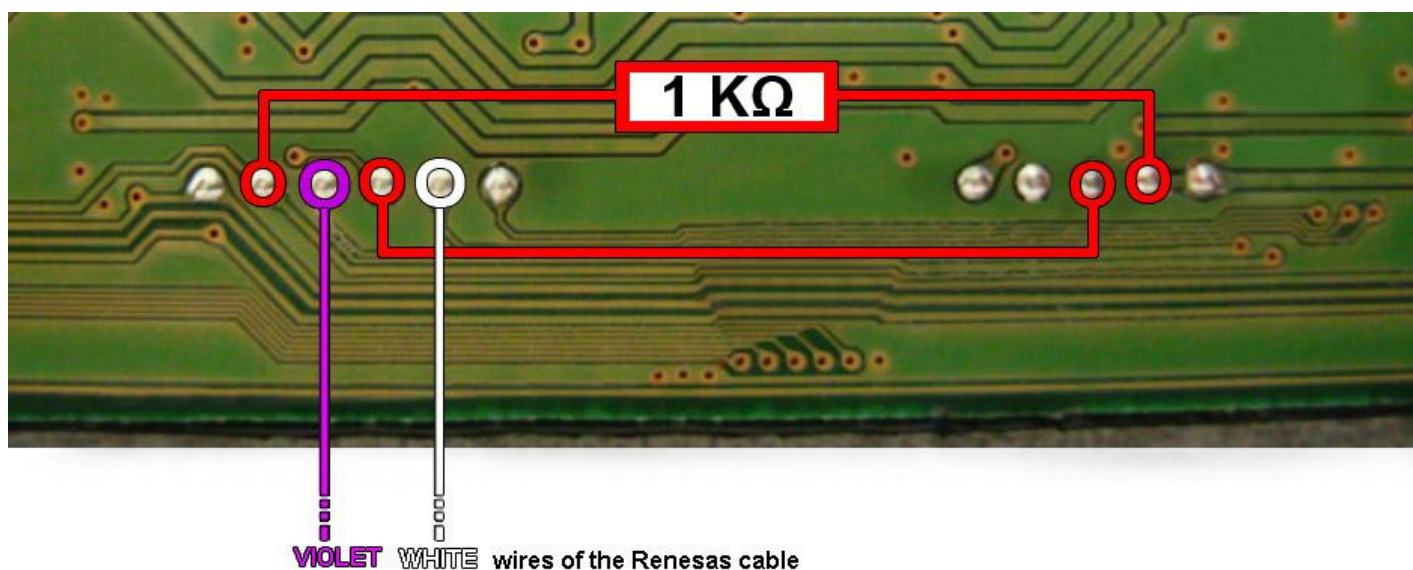

STEP 2/2 (BACKSIDE):

Saldare anche i fili verde e nero del cavo Renesas:

Join also the green and black wires of the Renesas cable:

