

RENAULT - NISSAN

BOSCH EDC16C41(Diesel)




DRIVER: Tool Boot mode → Motorola Freescale
MPC5xx Benchmode → EDC16/ME9 - MPC56x
MICRO: MPC561 / MPC562

INFO

(EN) Set the tool as shown in the photo and connect the following pinout with the Tricore Cable.

(IT) Impostare lo strumento come indicato in foto e collegare il seguente pinout con il cavo Tricore.

RED: + 12V | BLACK: GROUND | GREEN: K-LINE | WHITE | BROWN

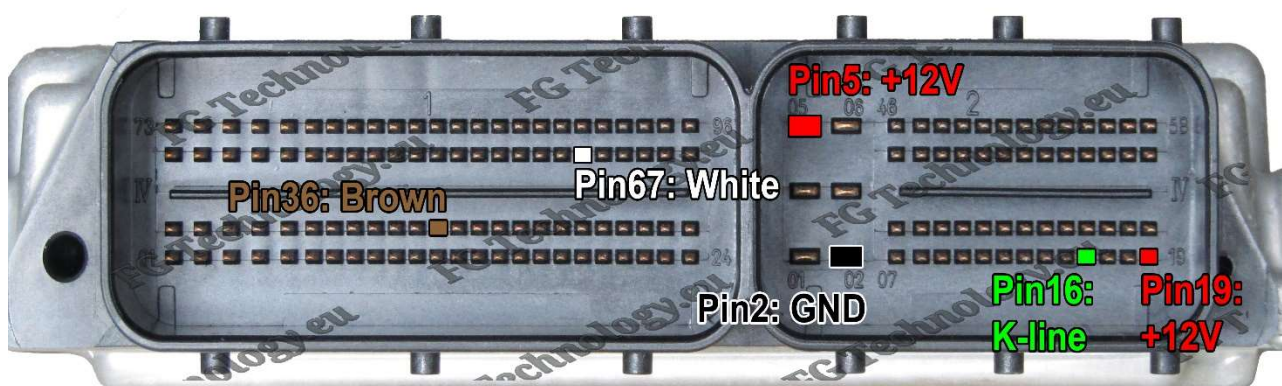

(EN) Power the benchplus + with a **voltage from 9 to 10 Volts** for EDC16 / MED9 control units.

(IT) Alimentare il benchplus+ con una **tensione da 9 a 10 Volt** per centraline EDC16/MED9.