



ECU Siemens Continental SID807 / SID807EVO - TC1797 Int. Flash



Porre la centralina in Boot Mode, quindi connettere il seguente pinout e saldare le resistenze come indicato nella figura. Utilizzare il driver:

BOOT MODE TRICORE SAK TC1797

Set in Boot Mode the ECU, so connect the following pinout and solder the resistances like shown in the figure.

Use the driver:

BOOT MODE TRICORE SAK TC1797

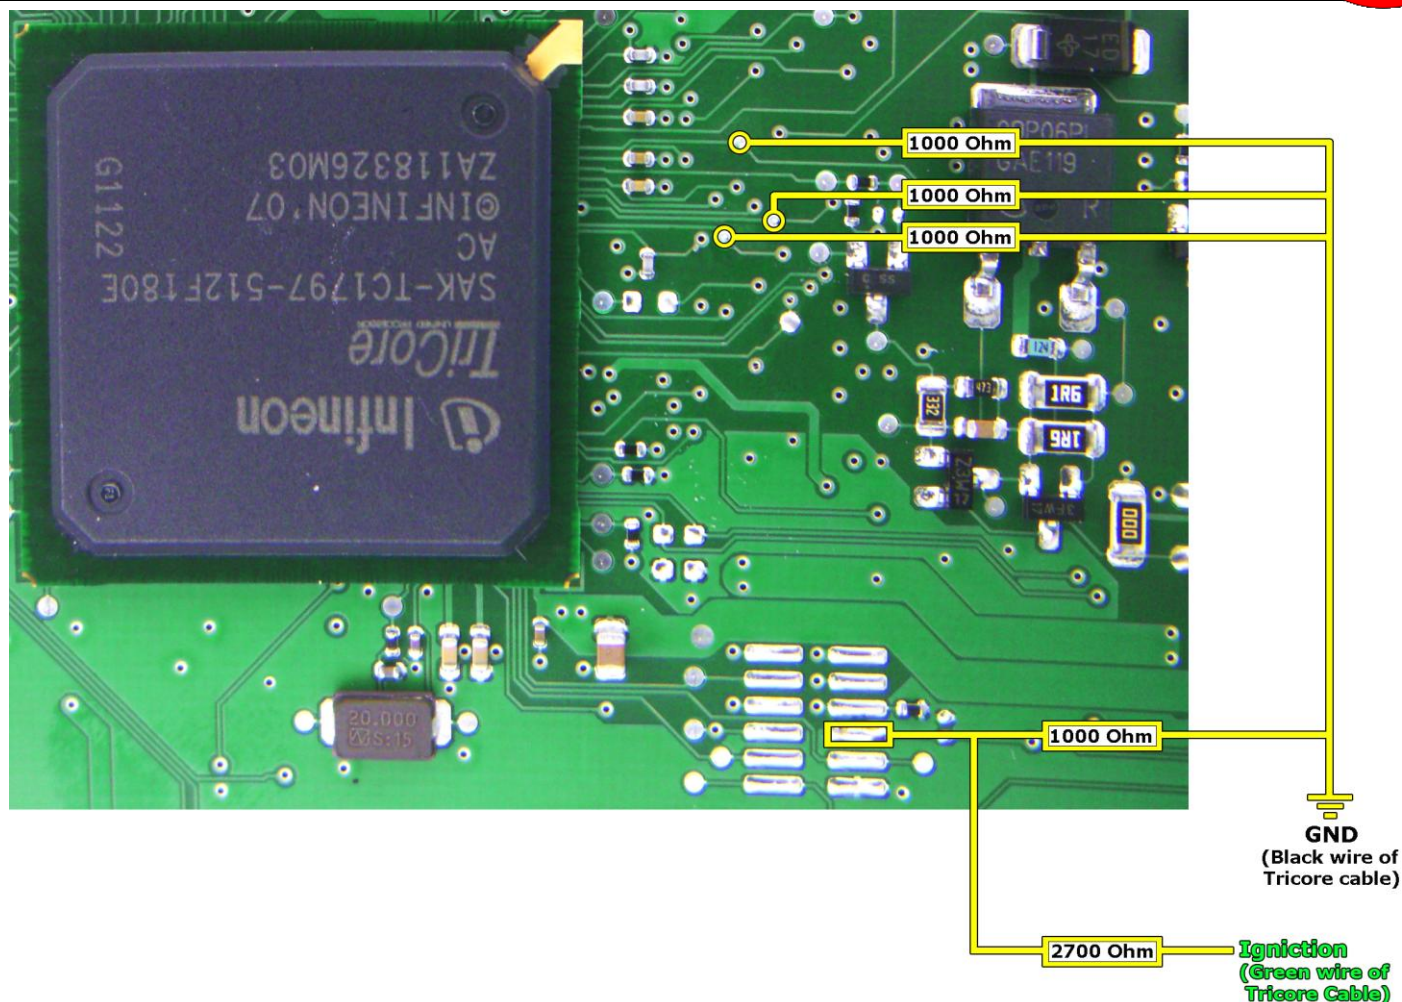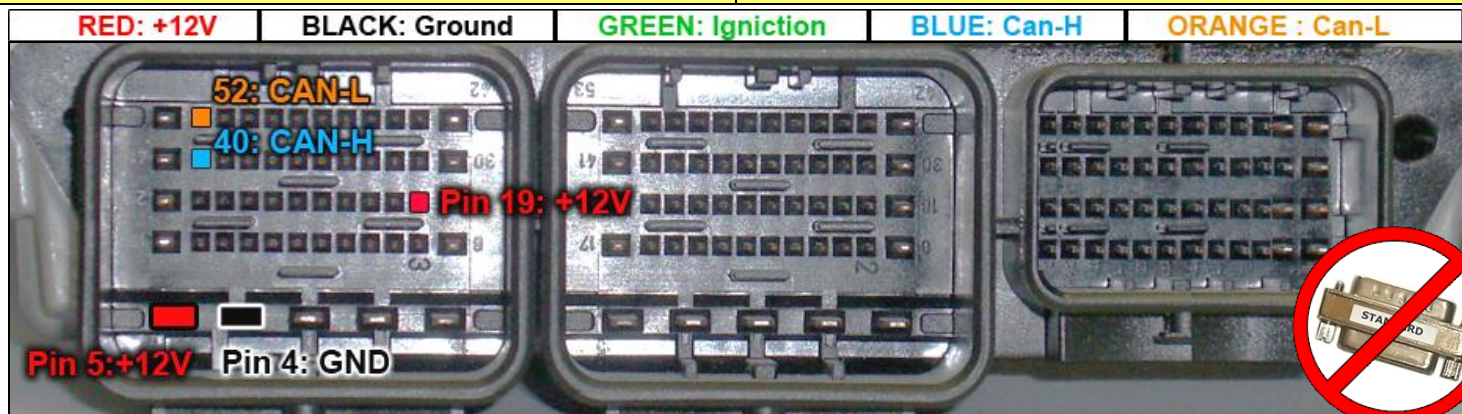

Se a inizio lettura esce il messaggio di errore :

**“ERROR UNLOCK READ
TRY TOOL TRICORE PASSWORD”**

bisogna rimuovere tutte le connessioni/resistenze sulla scheda e mantenere lo stesso pinout. Utilizzare il driver:

OBD TOOL PASSWORD SID807 FORD - VOLVO.

Una volta trovata la password riporre la centralina in bootmode per poterla leggere e scrivere.

When you start reading if appear the error message:

**“ERROR UNLOCK READ
TRY TOOL TRICORE PASSSSWORD”**

remove all the connections/resistors on the electric card and use the same pinout. Use the driver:

OBD TOOL PASSWORD SID807 FORD - VOLVO.

When it find the password, reconnect the Ecu in bootmode to read and write.