

Kit da utilizzare:


- Cavo multifunzione
- Cavo OBD (per ricerca password via obd)
- 1 resistenza da 560 Ω

Kit to use:

- Multifunction cable
- OBD cable (for search password via OBD)
- 1 resistance 560 Ω

<u>RICERCA DELLA PASSWORD</u>	<u>STEP 1</u>	<u>PASSWORD SEARCH</u>
Connettere il pinout sottostante. Utilizzare il seguente driver: → TOOLS BOOT MODE → INFINEON TRICORE Tool Password → OBD PASSWORD EMS2204 FORD → Cliccare “Find Password” e seguire i messaggi del software.		Connect the pinout below. Use the driver: → TOOLS BOOT MODE → INFINEON TRICORE Tool Password → OBD PASSWORD EMS2204 FORD → Click on “Find Password” and follow the software messages.

RED: + 12V	H1, K1
BLACK: GROUND	L4
BLUE: CAN-H	H2
ORANGE: CAN-L	G2

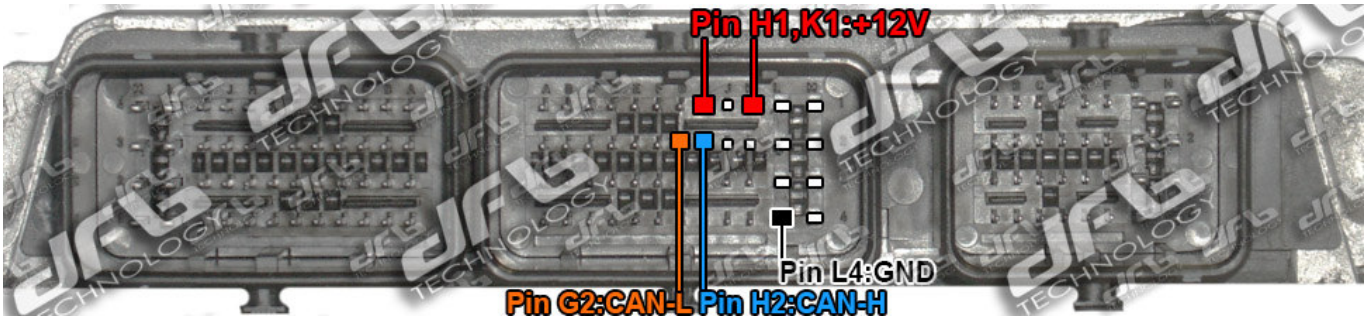

Attenzione: Per queste ECU potrebbe essere necessario effettuare il recupero password via OBD. Quindi, SE non viene trovata via pinout rilanciare il driver sull’auto in OBD.		Attention: For these ECUs it may be necessary to find the password via OBD. So, IF it is not found via pinout, re-run the driver on the car via OBD.
---	--	--


Ora che è stata trovata la password è possibile leggere e scrivere la centralina. Vedere fase seguente.		Now that the password has been found it’s possible to read and write the control unit. See next step.
---	---	---

<u>LETTURA E SCRITTURA ECU</u>	<u>STEP2</u>	<u>READ AND WRITE ECU</u>
Con il cavo multifunzione collegare il seguente pinout e il boot indicato nelle foto a pagina seguente. Utilizzare il seguente driver: → TOOLS BOOT MODE → INFINEON TRICORE Boot → SAK TC1738		Connect with the multifunction cable the following pinout and the boot shown on next page Use the driver: → TOOLS BOOT MODE → INFINEON TRICORE Boot → SAK TC1738

Connettere il seguente pinout:



Connect the following pinout:

RED: + 12V	K1
BLACK: GROUND	L4
GREEN: IGNITION	H1
BLUE: CAN-H	H2
ORANGE: CAN-L	G2
GREY: BOOT	On the pcb

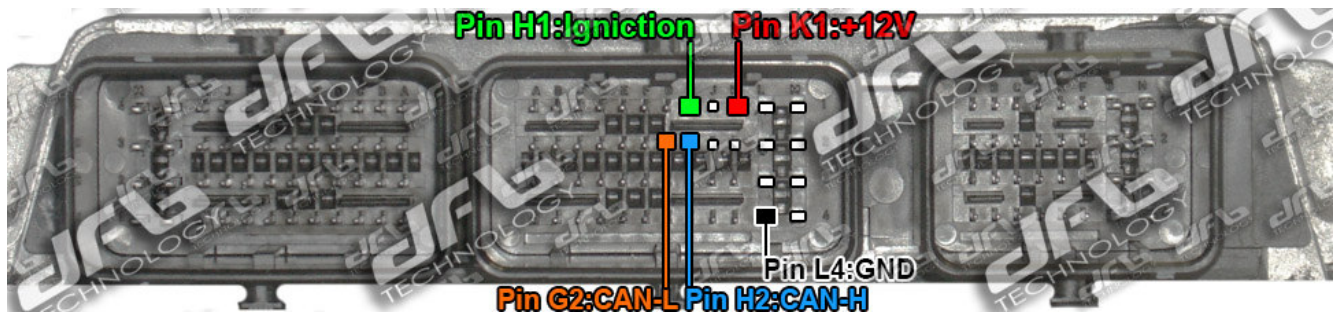


Saldare una resistenza da 560 Ω sulla parte inferiore:

Solder a 560 Ω resistor to the bottom:

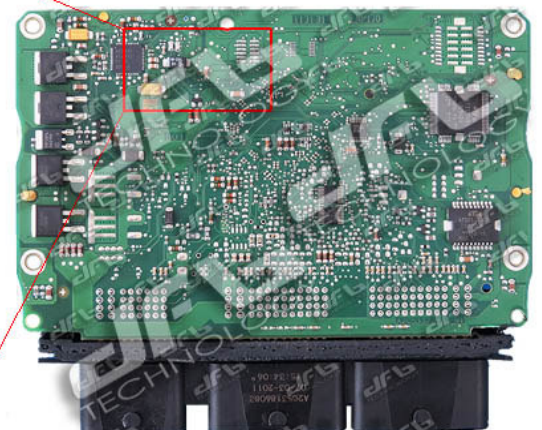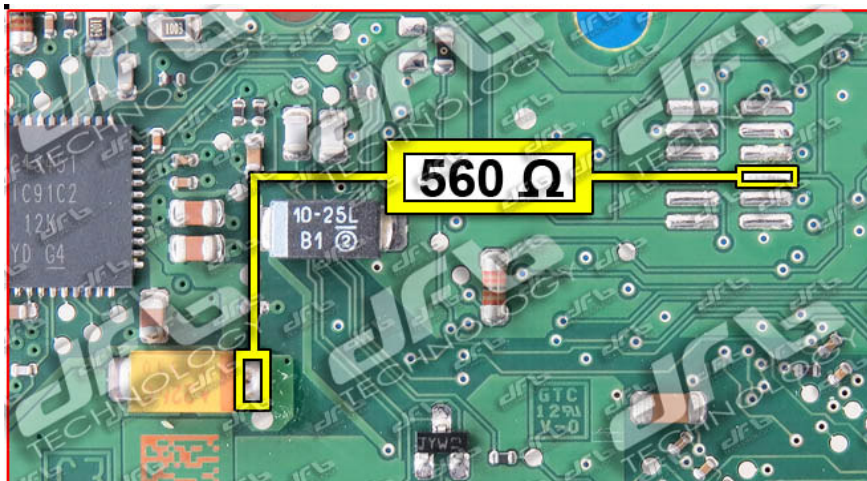

Connettere il filo grigio ai due punti indicati:

Connect the grey wire to the two points indicated:

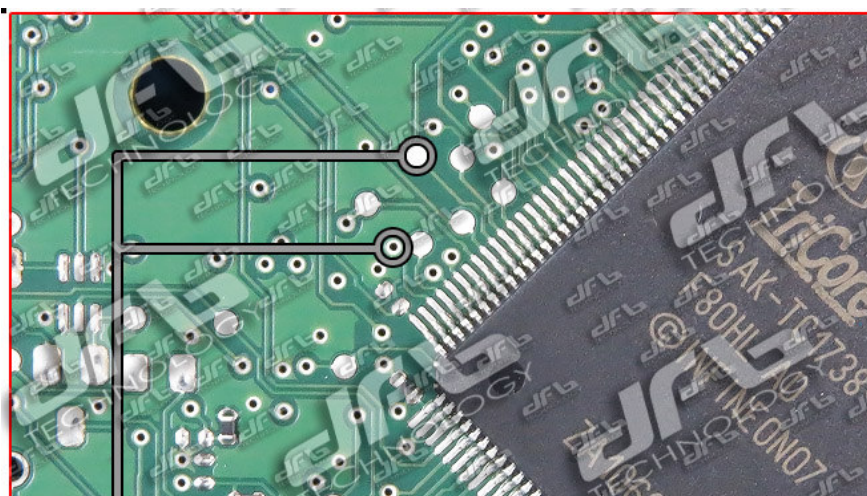

Grey wire

