


BOSCH MED17.5.20 [1766] – VW, Audi, Seat, Skoda [Gasoline]

Collegare il cavo multifunzione nel seguente modo:

Connect the multifunction cable as follows:

RED: + 12V	5, 87
BLACK: GROUND	1
BLUE: CAN-H	68
ORANGE: CAN-L	67
WHITE	54
BROWN	39

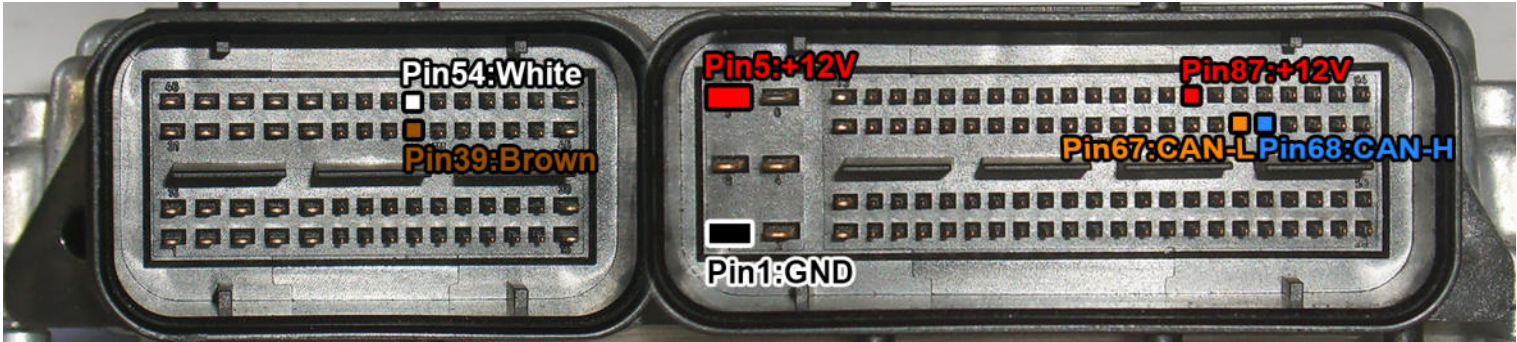

Per leggere e scrivere utilizzare il seguente driver:
→ BENCH TRICORE
→ VW / AUDI / SEAT / SKODA
→ TC1766 – VAG
→ **MED17.5.20**

To read and write use the following driver:
→ BENCH TRICORE
→ VW / AUDI / SEAT / SKODA
→ TC1766 – VAG
→ **MED17.5.20**