


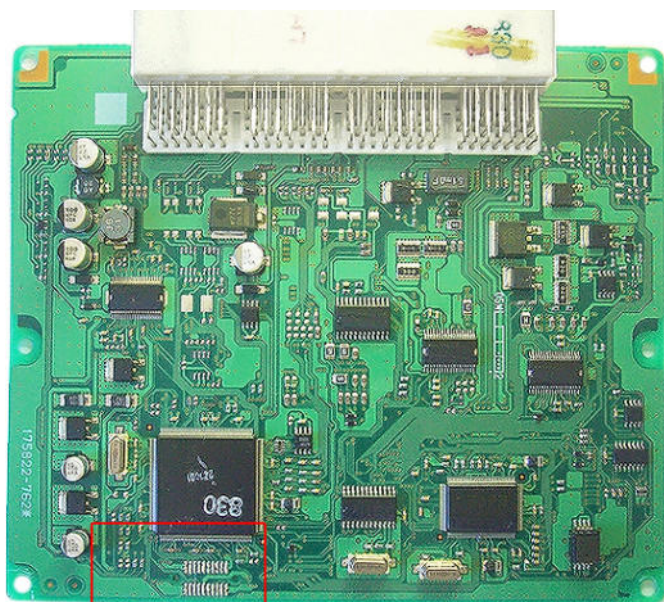

Kit da utilizzare:


- Cavo multifunzione
- Flat arcobaleno corto (con spina bianca)
- 1 Resistenza da 1000  $\Omega$
- 1 Diodo 1N4148

Kit to use:

- Multifunction cable
- Rainbow short flat cable (with white plug)
- 1 Resistance of 1000  $\Omega$
- 1 Diode 1N4148

Collegare il pinout con il cavo multifunzione:

Connect the pinout using multifunction cable as follows:

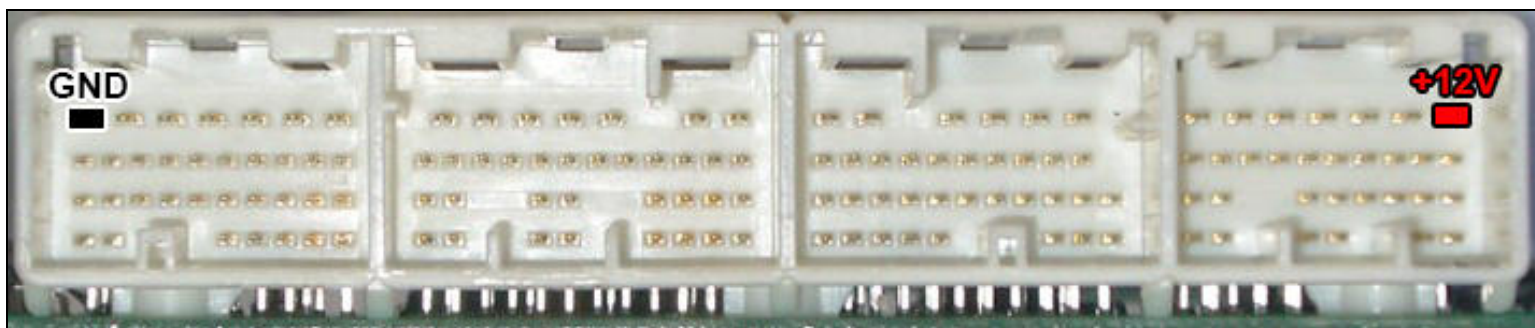


Effettuare i collegamenti come a pagina seguente.

Make the connections as in the following page.

Saldare sulla porta JTAG la resistenza da 1000  $\Omega$ , il link, il diodo 1N4148, il flat arcobaleno e connettere i fili bianco e nero del cavo multifunzione:

Solder on the JTAG port the resistance of 1000  $\Omega$ , a link, the diode 1N4148, the rainbow flat cable and connect the white and black wires of the multifunction cable:

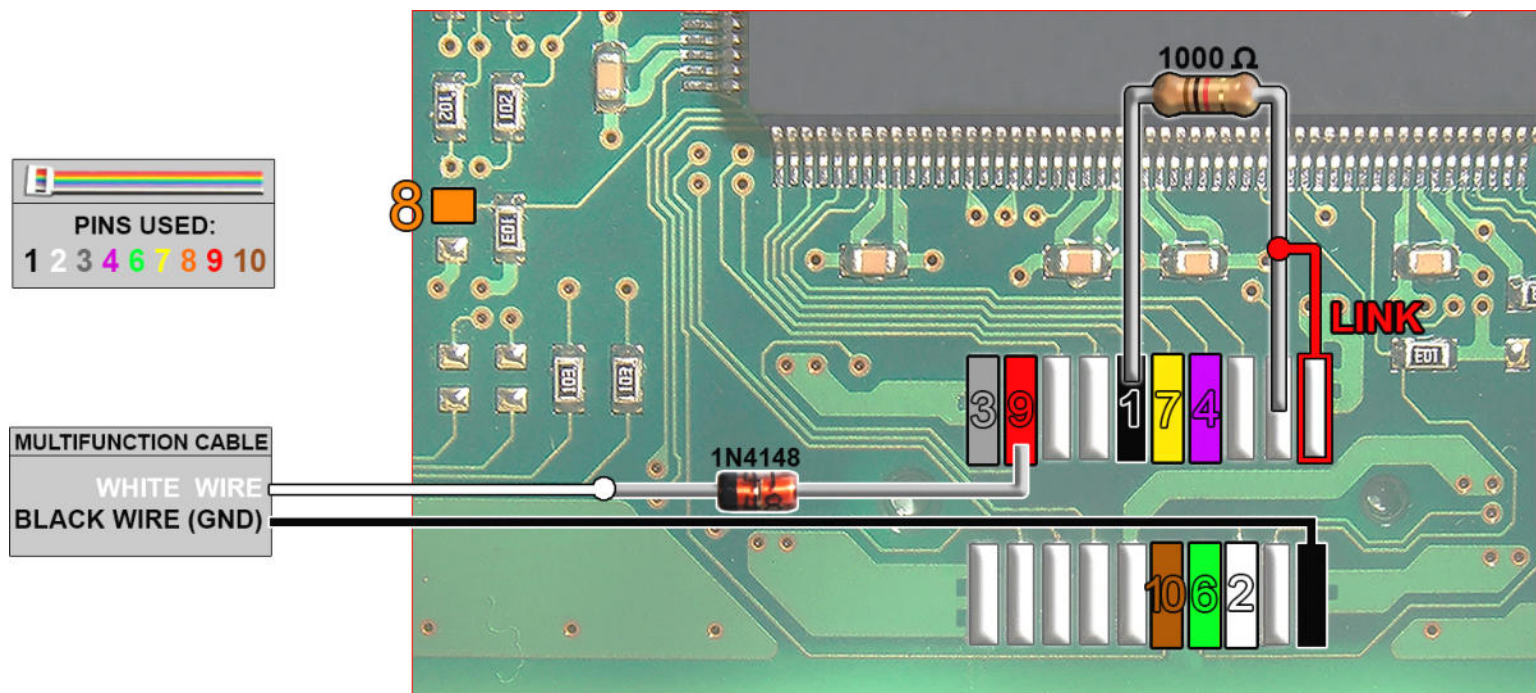

Per leggere e scrivere utilizzare il seguente driver:

→ BDM / JTAG MODE  
→ JTAG NEC 76F00xx  
→ **NEC 76F00** - - - - -  
(scegliere il driver in base al micro montato sulla ECU)

To read and write use the following driver:

→ BDM / JTAG MODE  
→ JTAG NEC 76F00xx  
→ **NEC 76F00** - - - - -  
(choose the driver based on the ECU microprocessor)