




Mercedes TEMIC CRV 2.0 (Diesel)

Micro: C167

Driver: BOSCH - 1 micro - Flash 400 BOOT MODE

RED: + 12V | BLACK: GROUND | GREEN: K-LINE

USE TRICORE CABLE

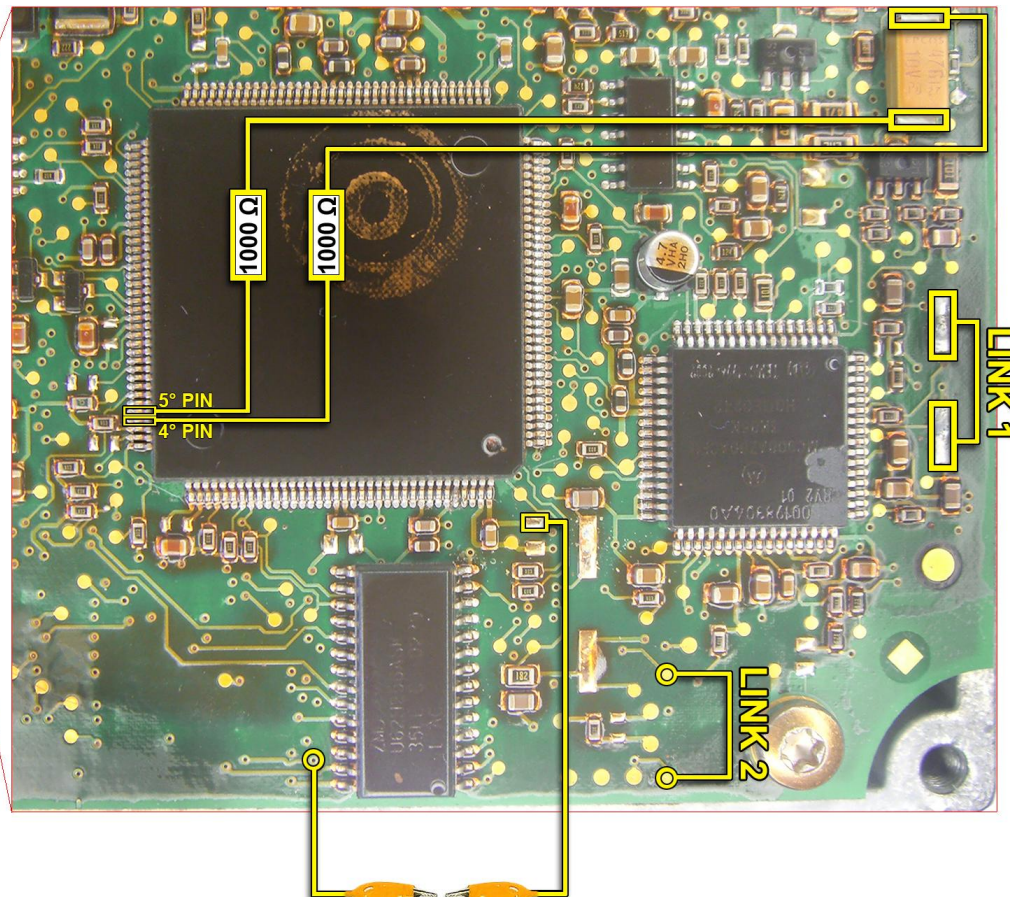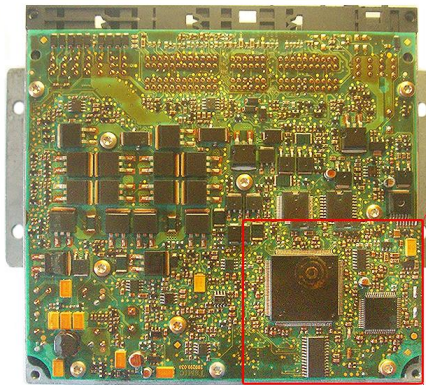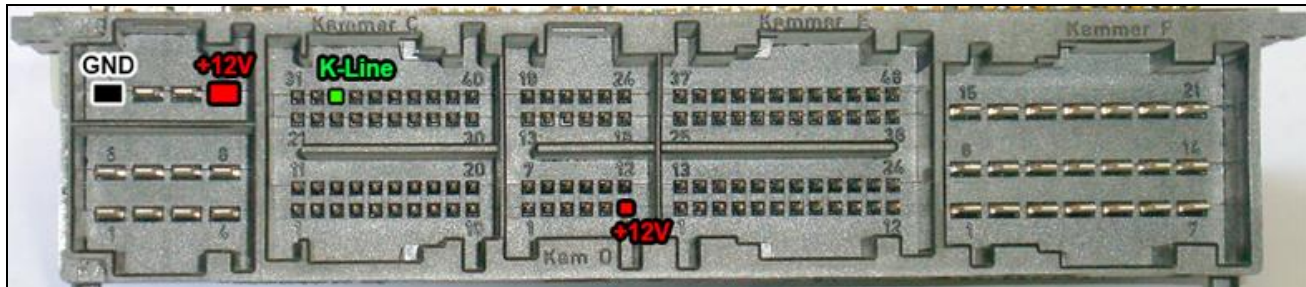

PROCEDURE:

- 1 - CONNECT PINOUT WITH THE TRICORE CABLE
- 2 - CONNECT RESISTANCES OF 1000 OHM TO THE PINS 4-5 OF THE MICRO
- 3 - CONNECT LINK 1 AND LINK 2
- 4 - POWER ON TO THE ECU
- 5 - WAIT MIN. 5 SECONDS
- 6 - CONNECT LINK 3 USING CROCODILE CLIP
- 7 - START DRIVER:
BOSCH - 1 MICRO - FLASH 400 BOOT MODE

PROCEDURA:

- 1 - CONNETTERE IL PINOUT CON IL CAVO TRICORE
- 2 - CONNETTERE LE RESISTENZE DA 1000 OHM AI PIN 4-5 DEL MICRO
- 3 - CONNETTERE I LINK 1 E 2
- 4 - ALIMENTARE LA ECU
- 5 - ATTENDERE MINIMO 5 SECONDI
- 6 - CONNETTERE IL LINK 3 USANDO UNA PINZA A COCCODRILO
- 7 - LANCIARE IL DRIVER:
BOSCH - 1 MICRO - FLASH 400 BOOT MODE

LINK3
(connect after with crocodile clip)