

TRW EMS2.2 E5

VOLVO - RENAULT TRUCK




DRIVER: Bdm/Jtag mode → Jtag Nexus MPC/SPC
→ MPC55xx

MICRO: MPC5554

INFO

(EN) Connect the following pinout with the Tricore Cable.


(IT) Collegare il seguente pinout con il cavo Tricore.

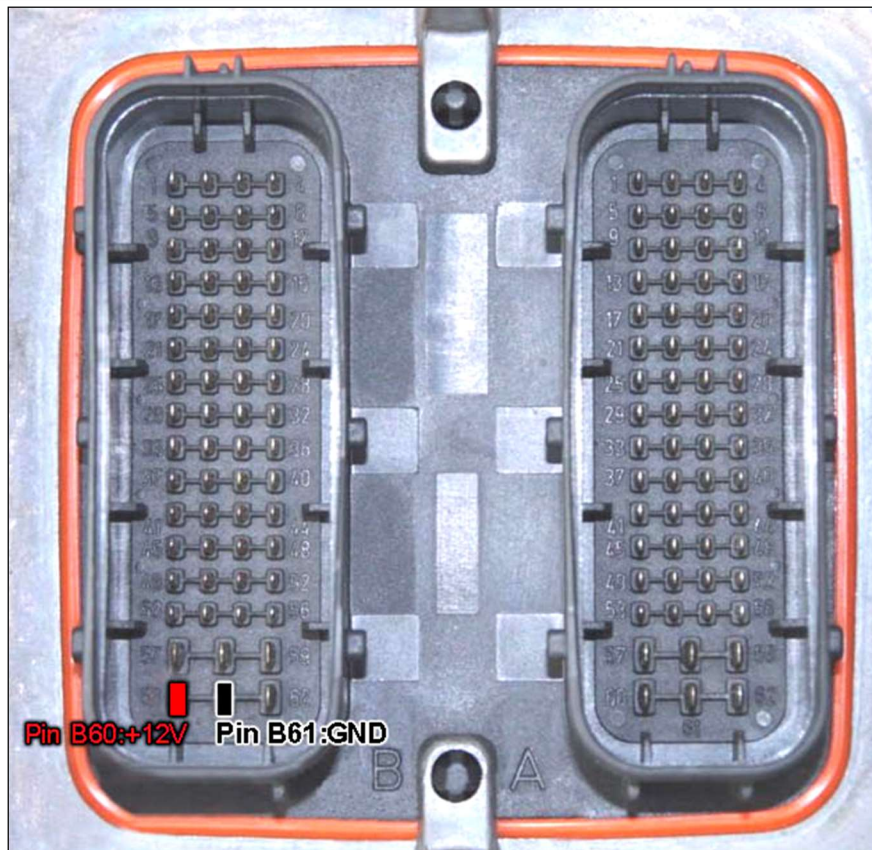

(EN) Material required:

(IT) Materiale necessario:

Color flat cable

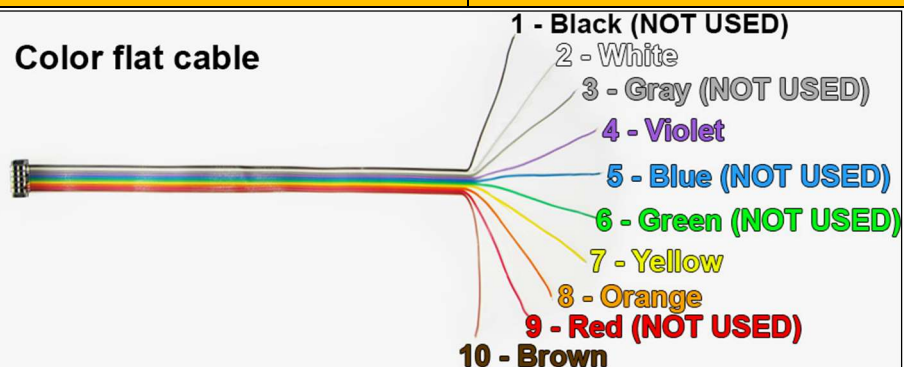


(EN) Follow on next page..

(IT) Segue a pagina successiva..


(EN) It needs to clean the card in the interested zone in a such way that it is deprived of any protective agent, after of that solder color flat cable like in figure:

(IT) Occorre pulire la scheda nella zona interessata in modo tale che sia priva di qualsiasi agente protettivo, successivamente saldare il flat arcobaleno come in figura:


HARDWARE 1

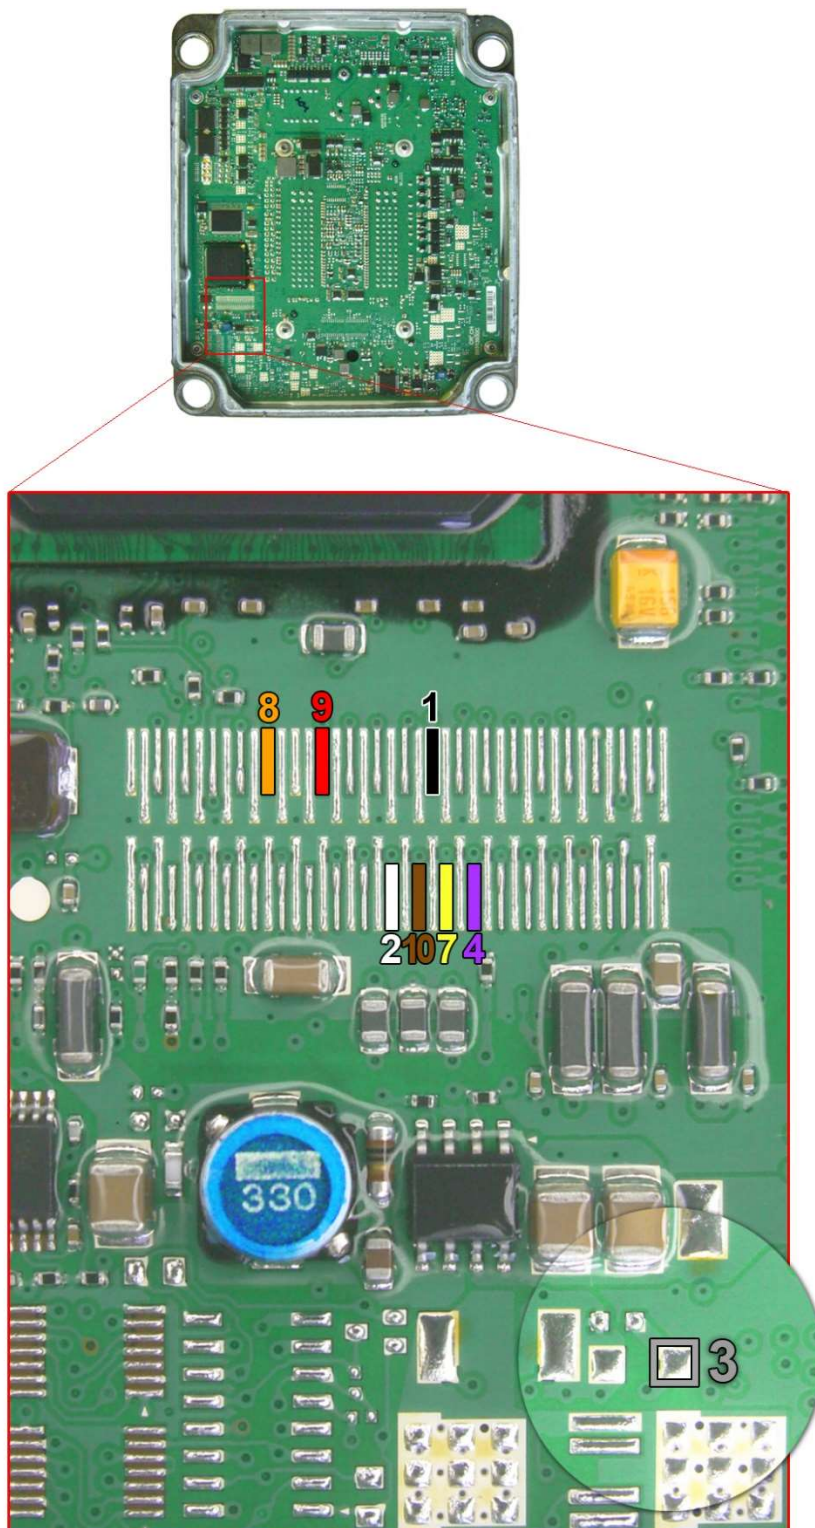

HARDWARE 2

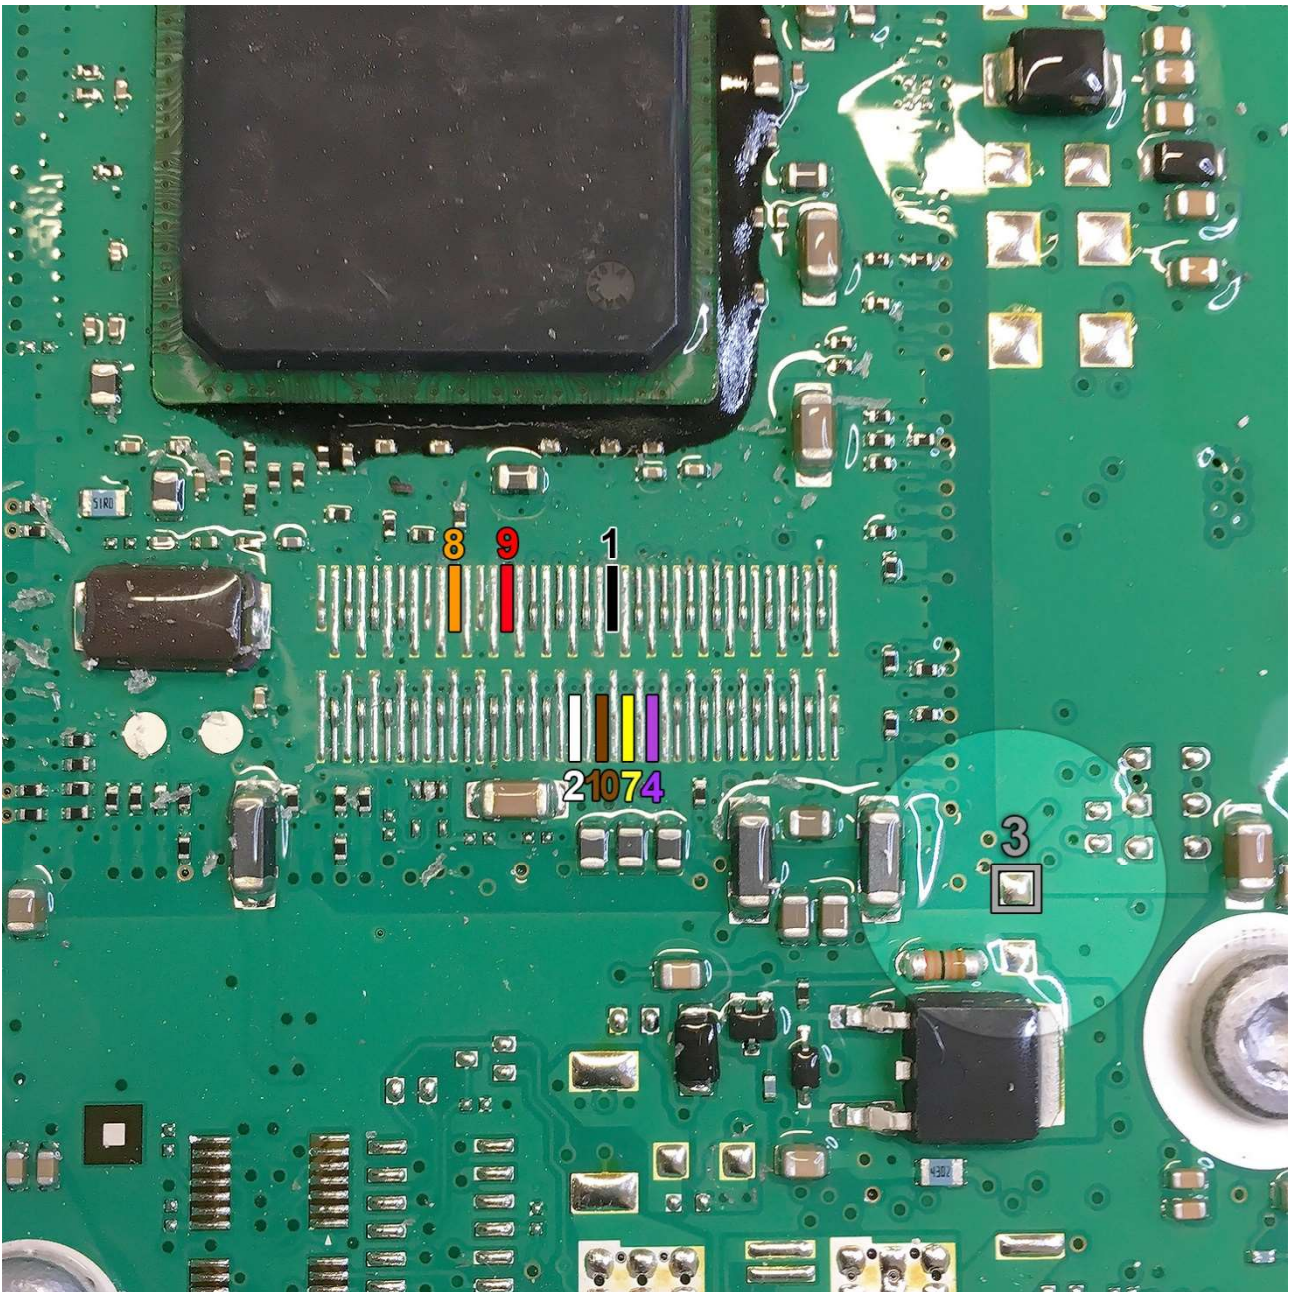

HARDWARE 3

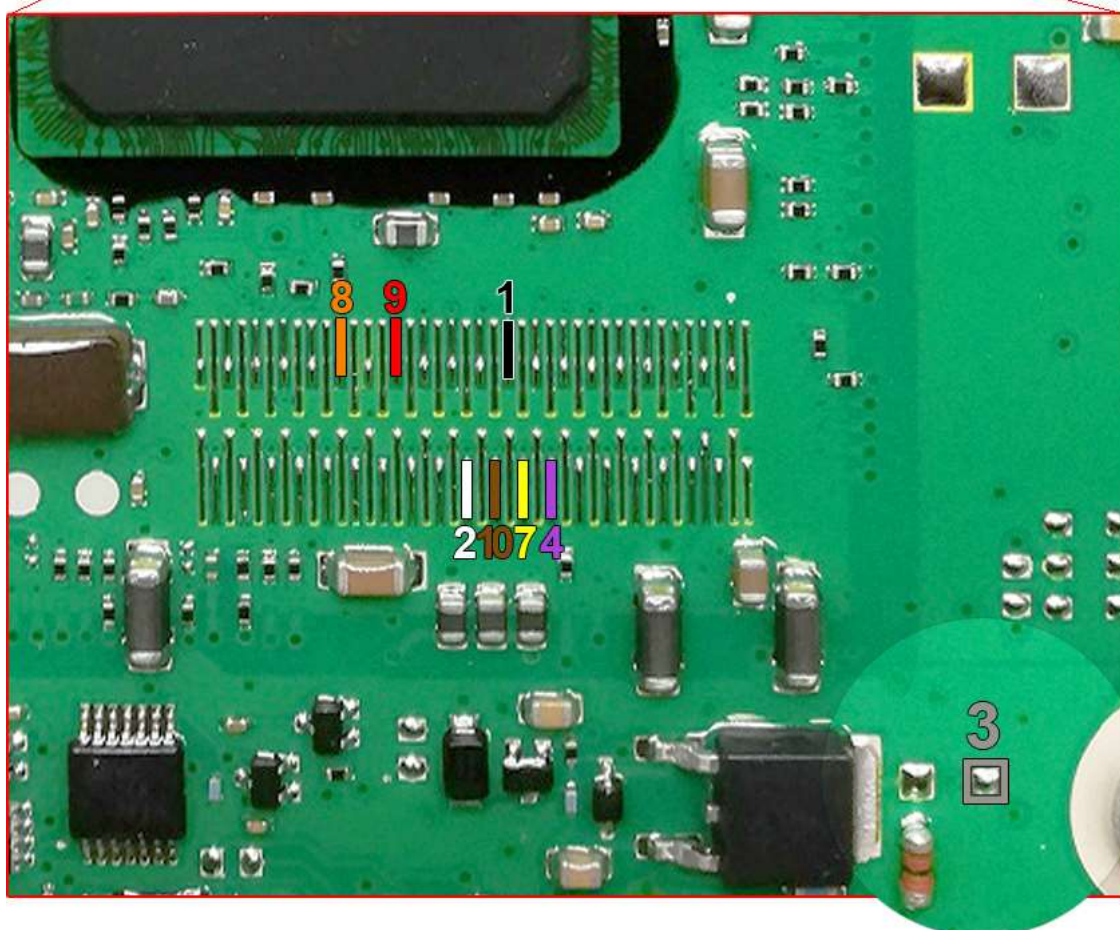

(EN) It will now be possible to read and write the ECU.

(IT) Ora sarà possibile leggere e scrivere la ECU.