


BOSCH MED17.1.21 [1793] – VW, Audi, Seat, Skoda [Gasoline]

Collegare il cavo multifunzione nel seguente modo:

Connect the multifunction cable as follows:

RED: + 12V	5, 87
BLACK: GROUND	1
BLUE: CAN-H	68
ORANGE: CAN-L	67
WHITE	6
BROWN	51

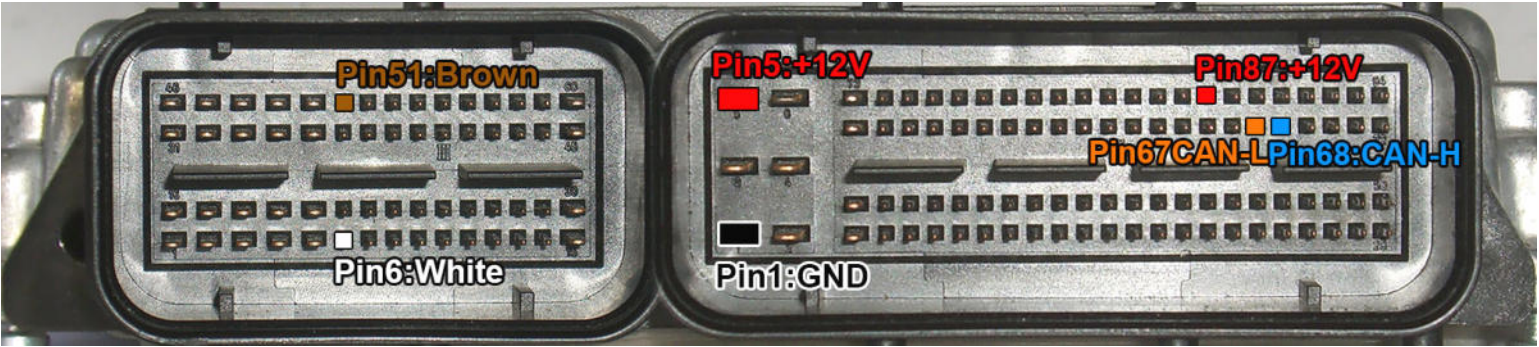

Per leggere e scrivere utilizzare il seguente driver:
→ BENCH TRICORE
→ VOLKSWAGEN / AUDI / SEAT / SKODA
→ TC1793 - VAG
→ MED17.1.21

To read and write use the following driver:
→ BENCH TRICORE
→ VOLKSWAGEN / AUDI / SEAT / SKODA
→ TC1793 - VAG
→ MED17.1.21