



PLUGIN 1056:NEW TRASDATA

PROCESSOR SIDE

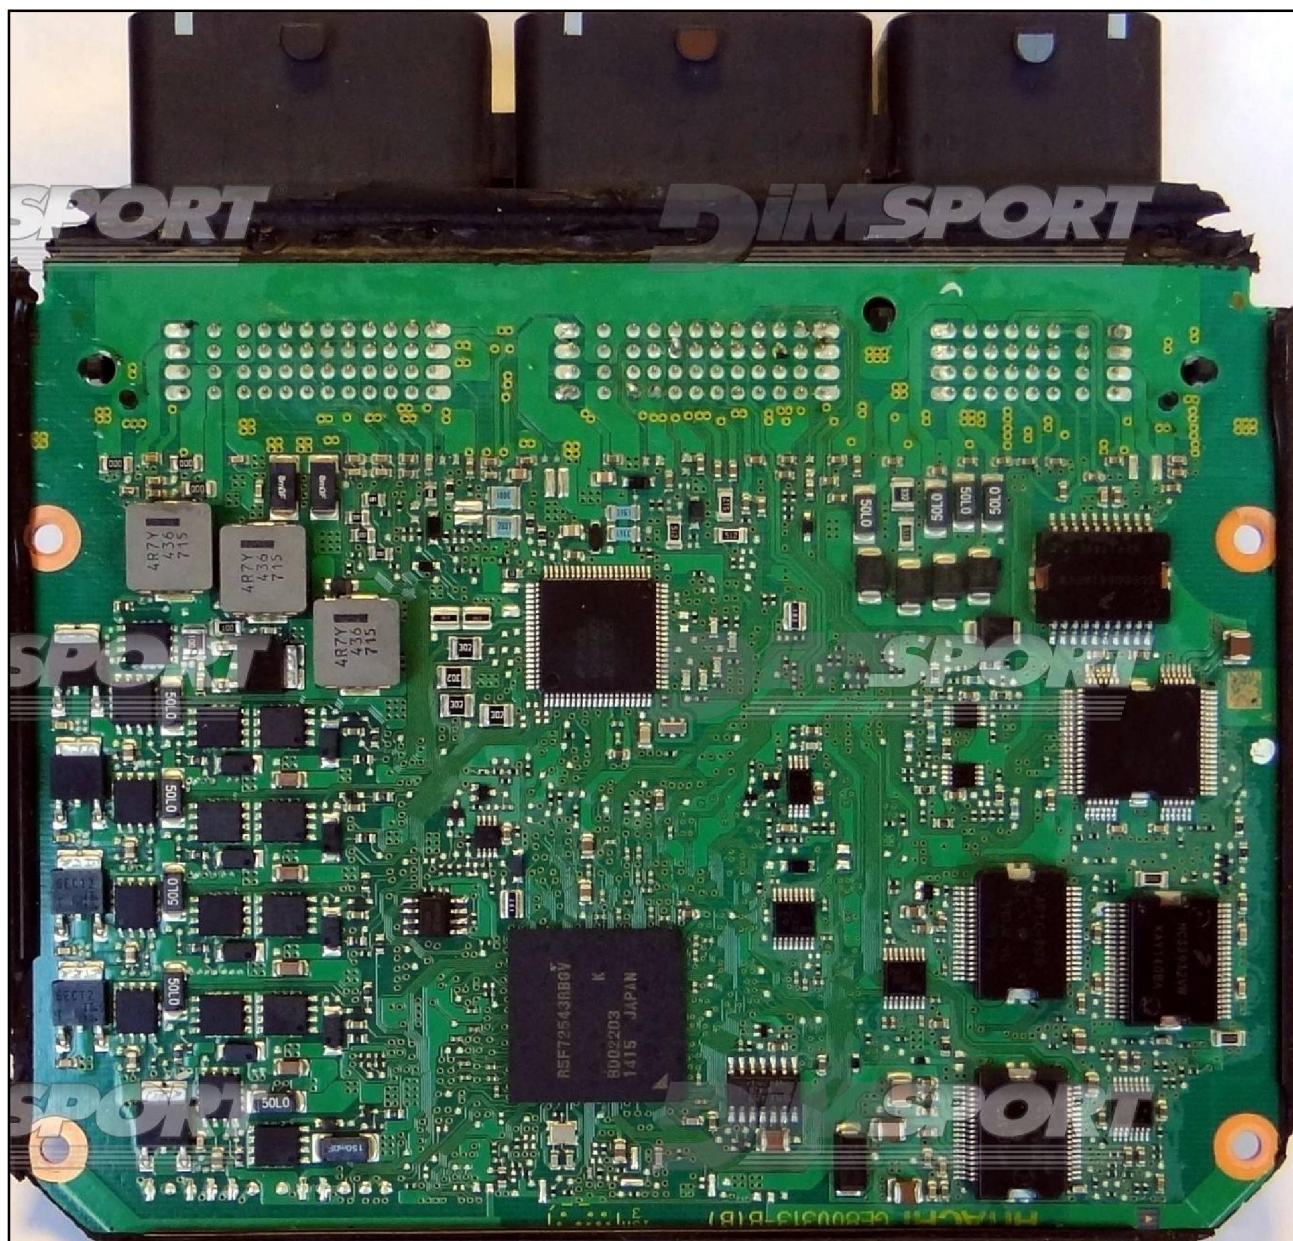



CONDENSERS' SIDE

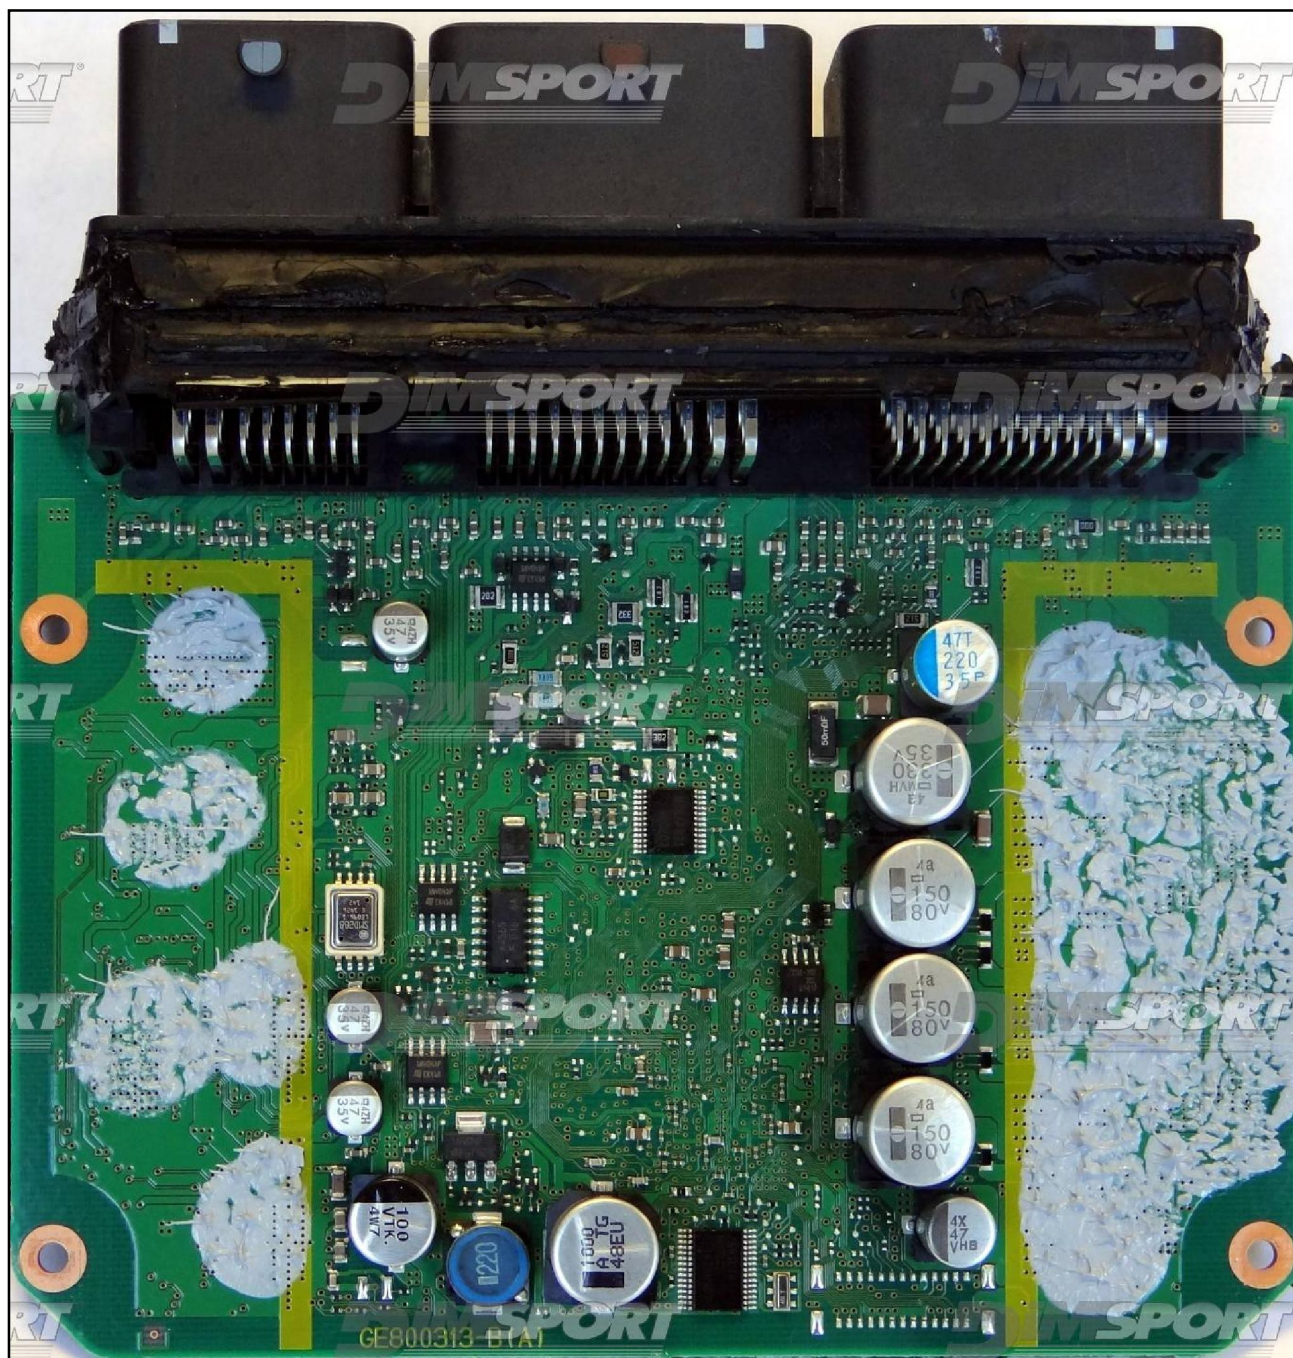

ECU CONNECTOR


For the connection use the cable F32GN037C connected to the ECU.
Make sure that the POWER led (red) on NEW TRASDATA is ON.

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
ROSSO RED		POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE		POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK		MASSA GND
GIALLO YELLOW		KLINE
VERDE GREEN		CAN LOW
BIANCO WHITE		CAN HIGH
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY		TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN		RESET

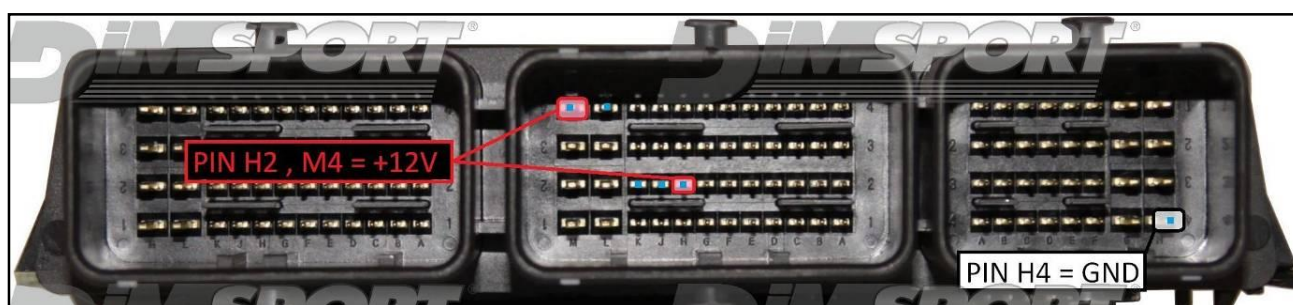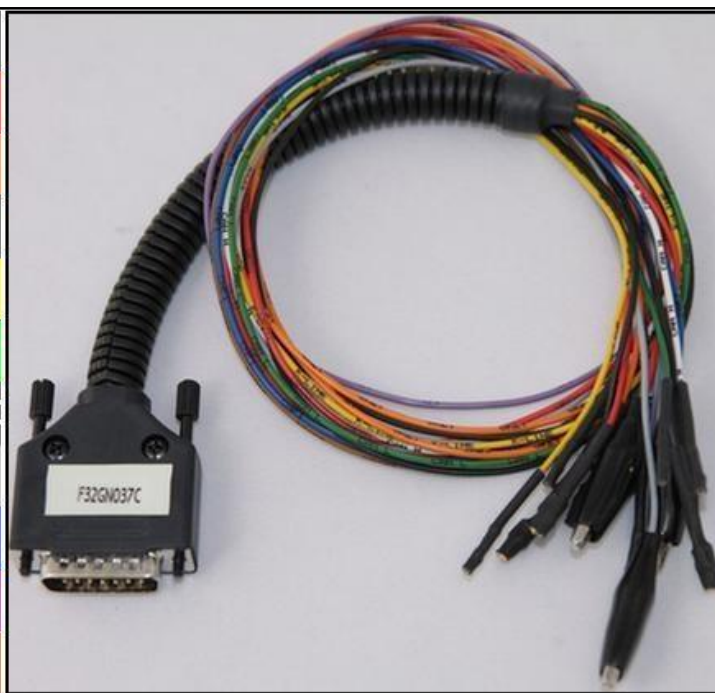

J-TAG LOOSE WIRES CONNECTION

For the reading & writing procedures use the FLAT cable F34NTF53

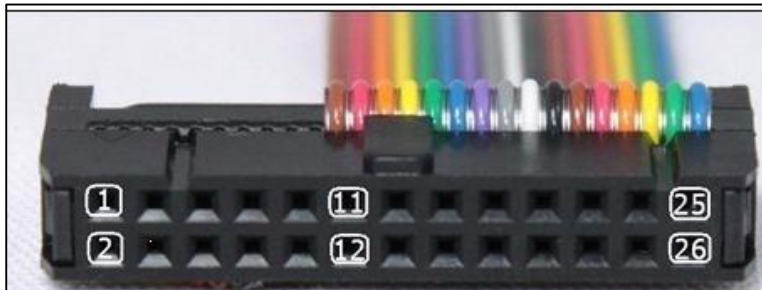			
Pin	Colore Colour		
11	Non usato Not used		
12	Non usato Not used		
13	Non usato Not used		
14	Non usato Not used		
15	Non usato Not used		
16	Blu Blue		
17	Viola Violet		
18	Grigio Grey		
19	Bianco White		
20	Nero Black		
21	Marrone Brown		
22	Rosso Red		
23	Non usato Not used		
24	Giallo Yellow		
25	Non usato Not used		
26	Non usato Not used		

Connect the wires on the pads avoiding any short circuits.

WARNING

In order to read&write properly the ECU it is necessary to perform a LINK1, LINK2, LINK3, remove them before placing back the ECU into the vehicle.

CONDENSERS' SIDE

