


PLUGIN 054 :NEW TRASDATA

Attention! There are 2 different types of HW:

HW TYPE 01 :

The lay-by pins are placed in the lower part of the ECU.

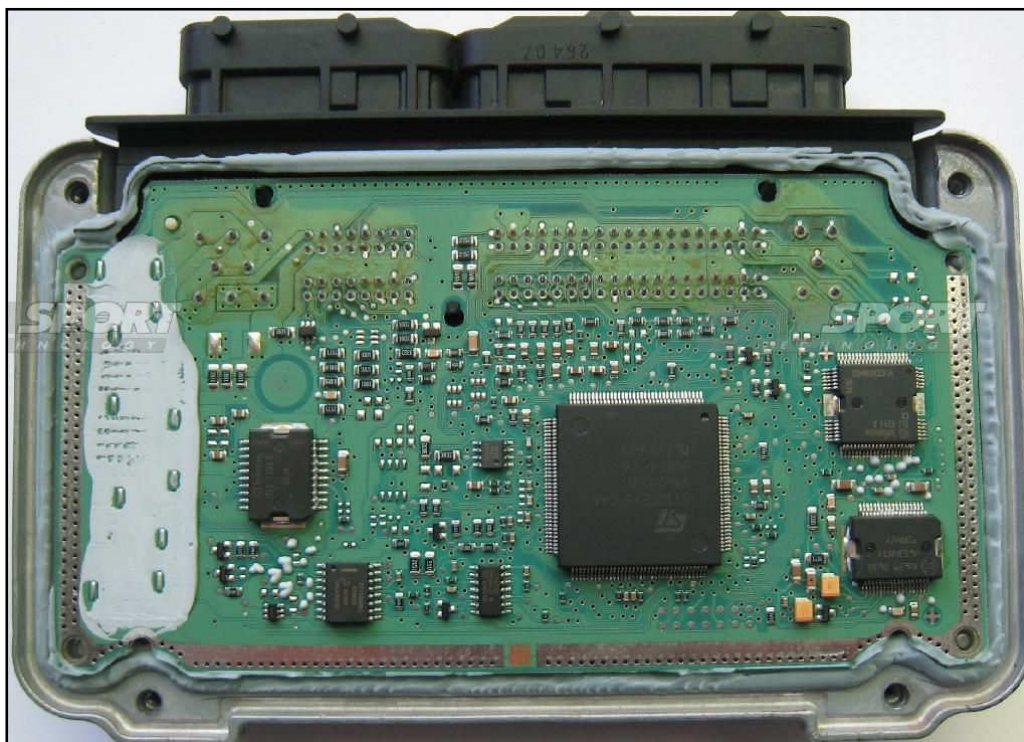


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.

Make sure that the POWER led (red) on NEW TRASDATA is ON.

DO NOT USE THIS CONNECTION WITH THE DIMA


COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHITE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE BROWN	RESET

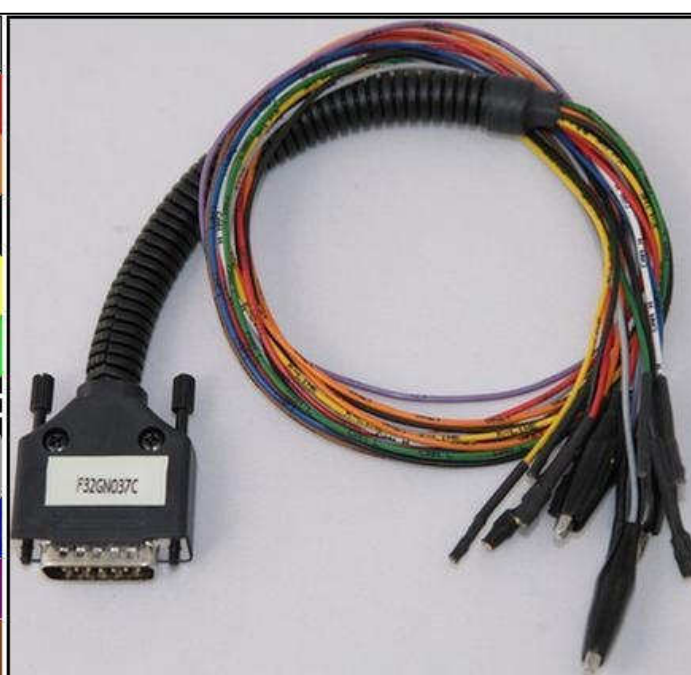

ECU CONNECTOR**POL4&POL5 CONNECTION**



Connect GREY and BLUE wire2 of the cable F32GN037C as described here below :

COLORE FILO WIRE COLOUR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

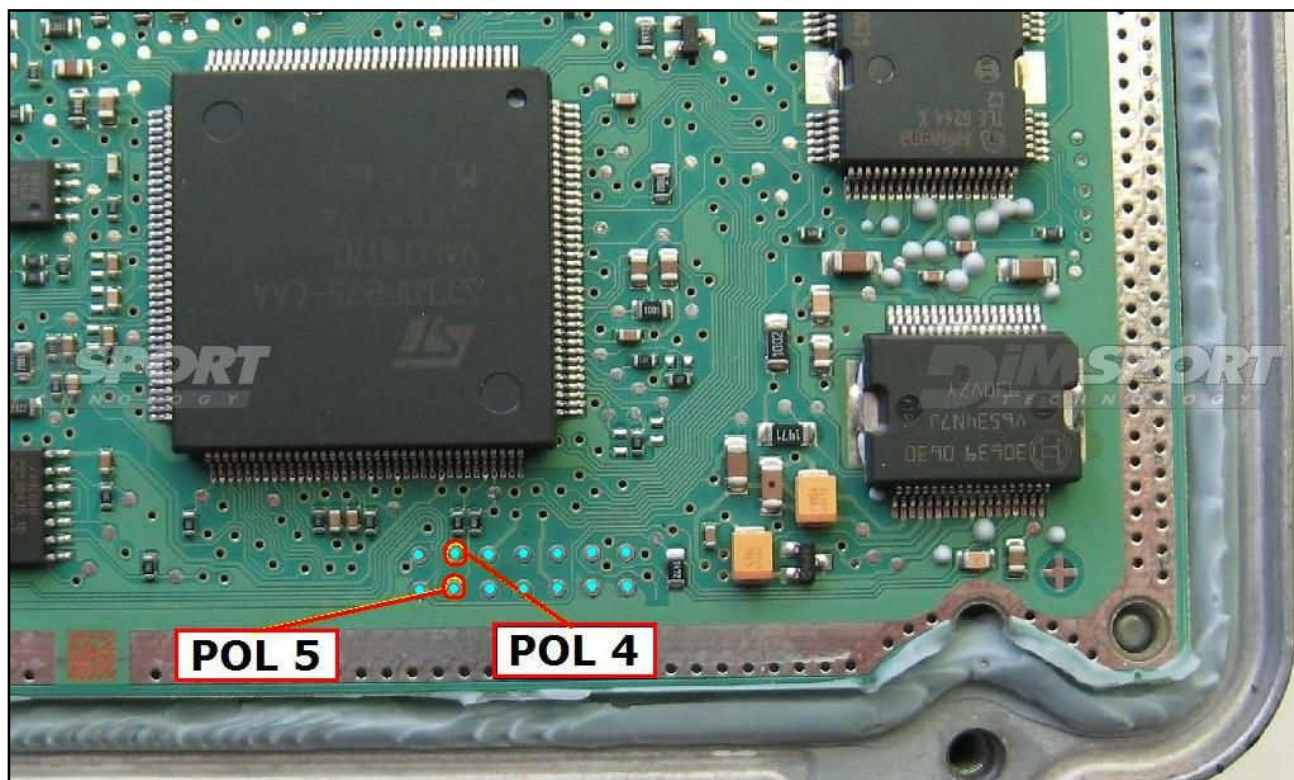


DIMA CONNECTION

With the DIMA it is required to solder the POL5 as shown in the picture here below.

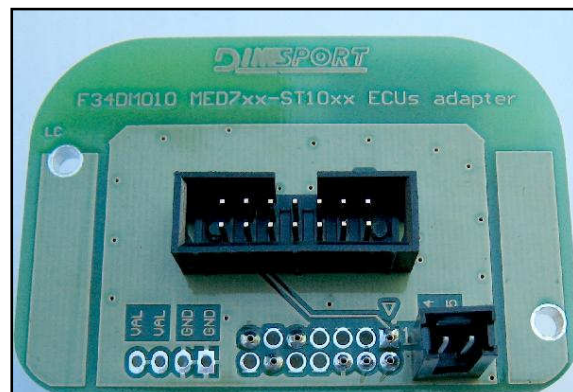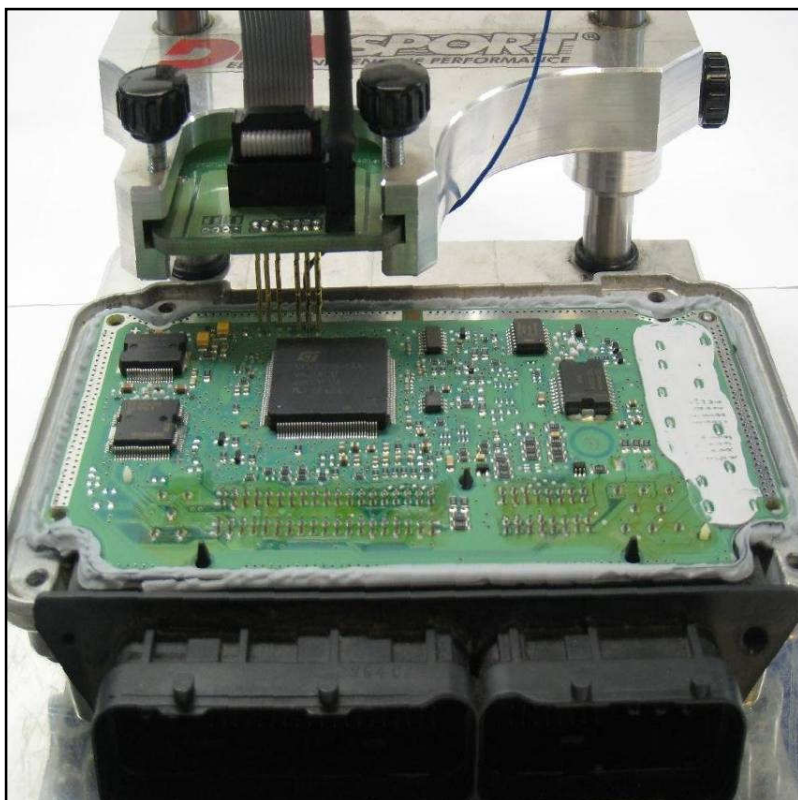

HW TIPO 02 :

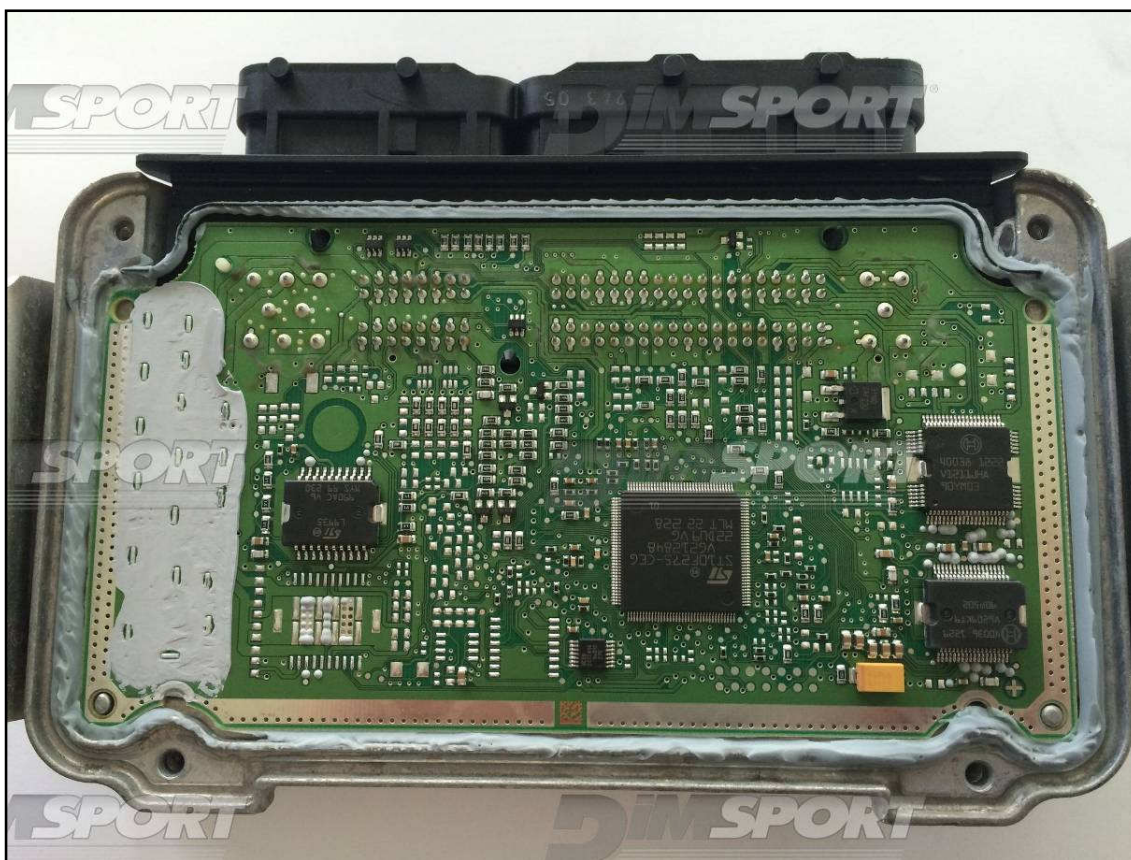


DIRECT CONNECTION

In order to connect to the ECU use the CABLE F32GN037C.


Make sure that the POWER led (red) on NEW TRASDATA is ON.

DO NOT USE THIS CONNECTION WITH THE DIMA

COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION
ROSSO RED	POSITIVO DIRETTO POWER BATTERY
ARANCIO ORANGE	POSITIVO SOTTO QUADRO POWER SWITCH ON
NERO BLACK	MASSA GND
GIALLO YELLOW	KLINE
VERDE GREEN	CAN LOW
BIANCO WHYTE	CAN HIGH
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1
VIOLA/GRIGIO PURPLE/GREY	TENSIONE PROG. PROG. VOLTAGE
MARRONE GREY	RESET

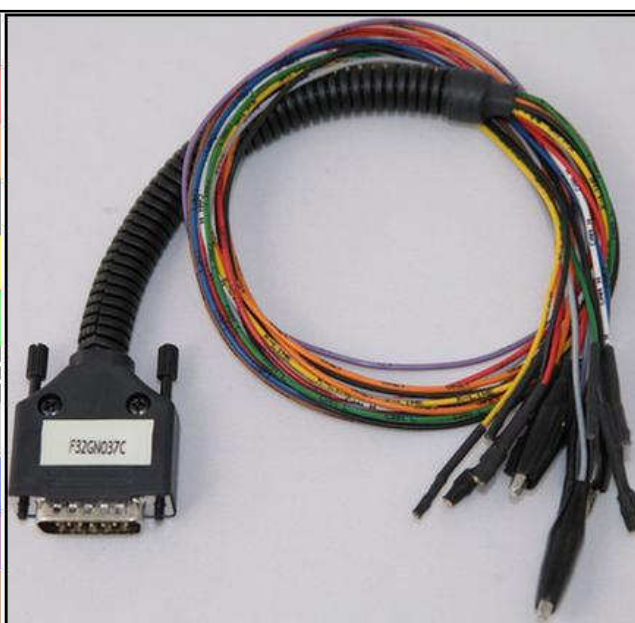


ECU CONNECTOR

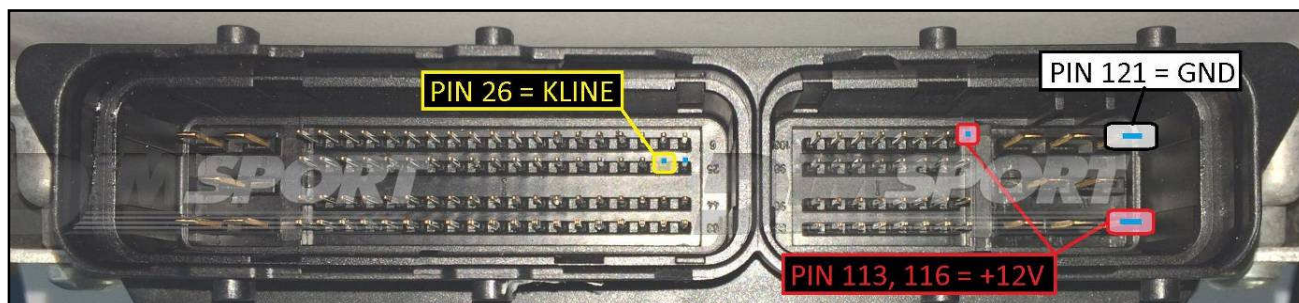

POL4&POL5 CONNECTION

Connect GREY and BLUE wire2 of the cable F32GN037C as described here below:

COLORE FILO WIRE COULOR	DESCRIZIONE DESCRIPTION
GRIGIO GREY	POL4 BOOT
BLU BLUE	POL5 CNF1

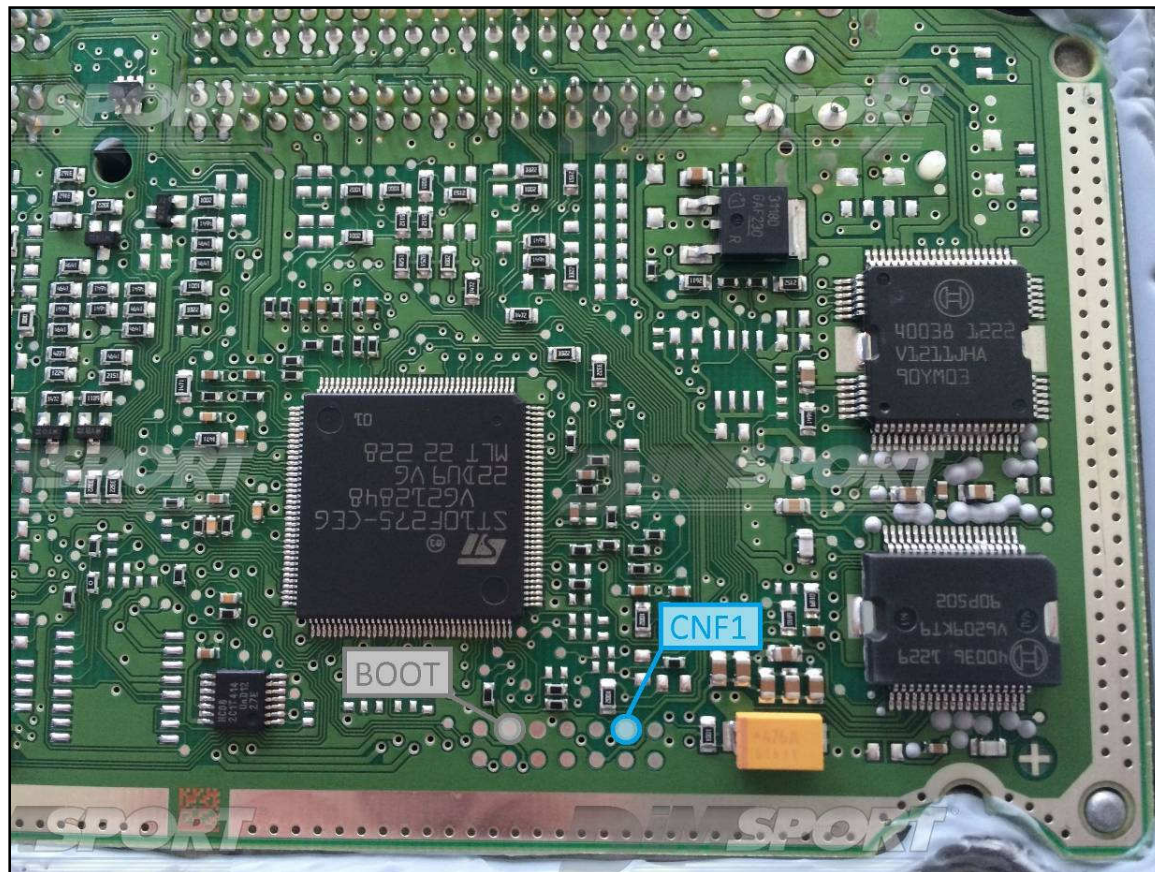

DIMA CONNECTION