

PLUGIN 952 : NEW TRASDATA

Warning: on this ECU it is possible only the metal positioning frame connection with the adapter F34DM011, the loose wires connection is not possible.






BOOT&CNF1 CONNECTION

Connect the GREY&BLUE wires of the cable F32GN037C as described here below:

COLORE FILO WIRE COLOUR		DESCRIZIONE DESCRIPTION
GRIGIO GREY		POL4 BOOT
BLU BLUE		POL5 CNF1

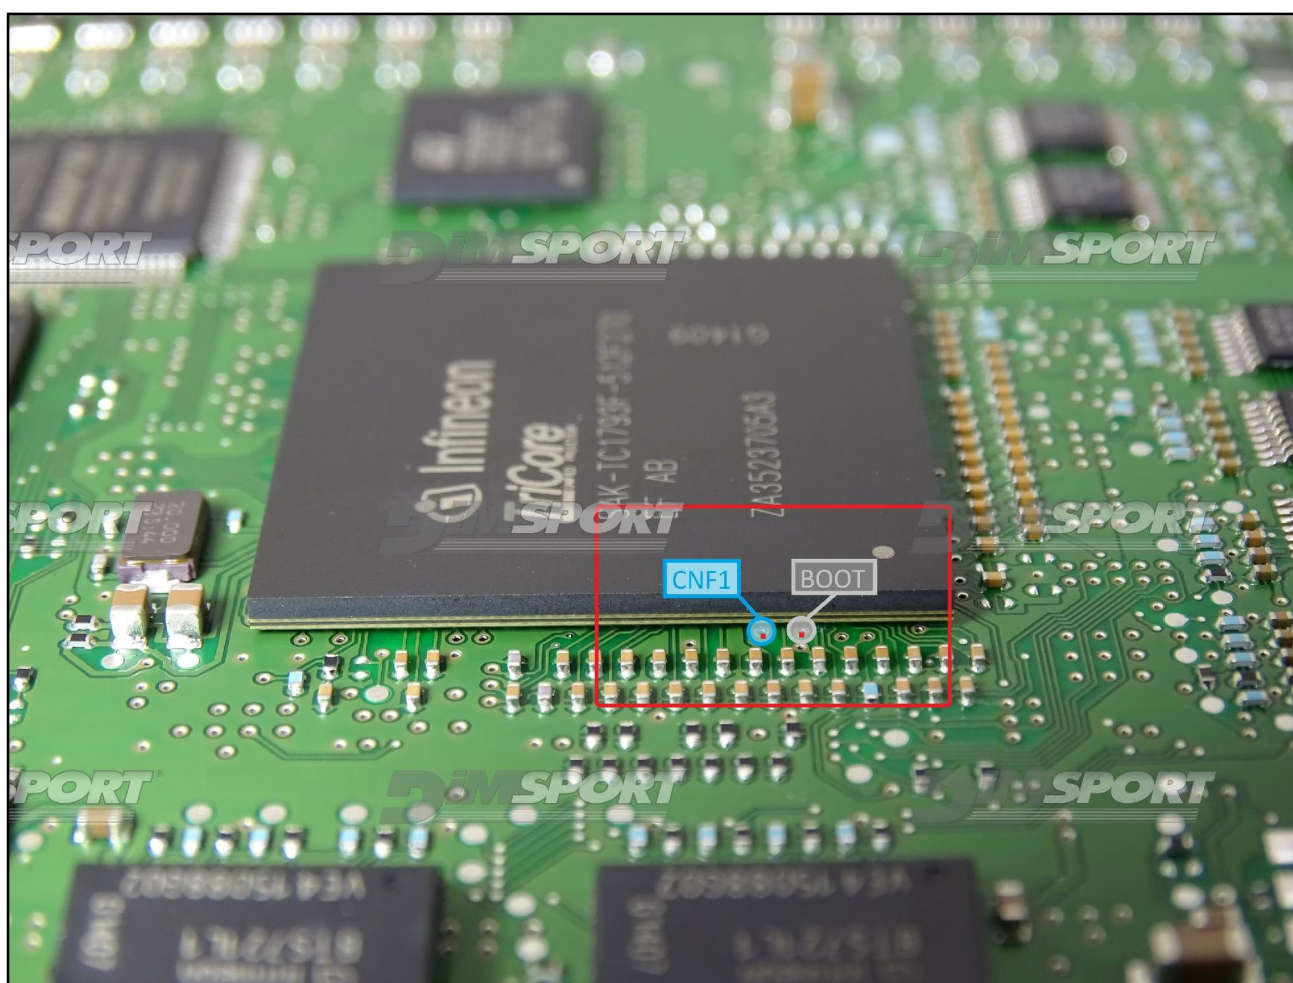

METAL POSITIONING FRAME CONNECTION

For the metal positioning frame connection is required the F34DM011 DIMA adapter. Connect the BOOT and the CNF1 wires directly to the corresponding orange BOOT clamps on the F34DM011 adapter. Check that the yellow BOOT jumper is set in ON position. Connect then the flat cable to the NewTrasdata.

