
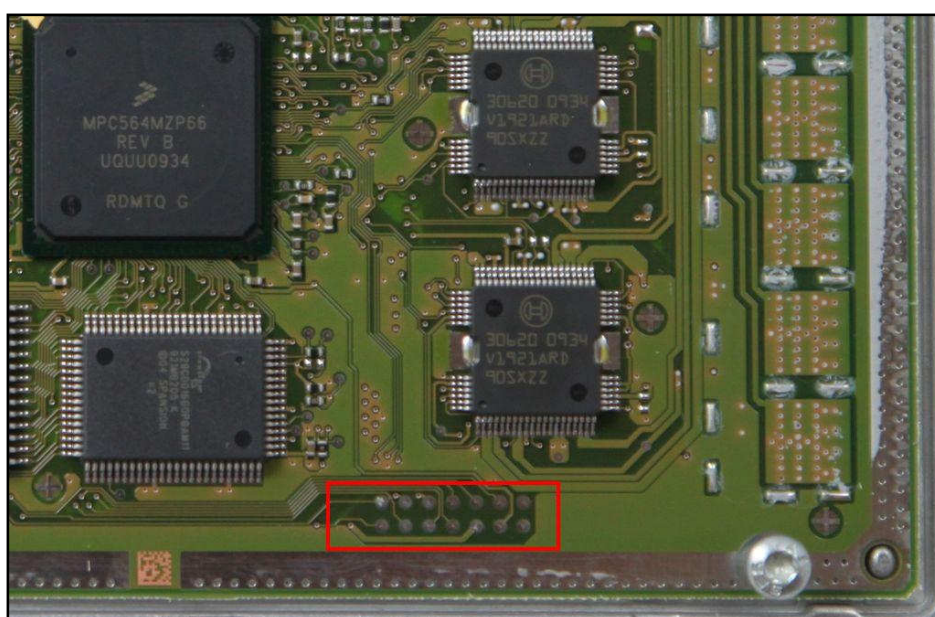


PLUGIN 163 : NEW TRASDATA



The lay-by pins are placed in the lower part of the ECU.


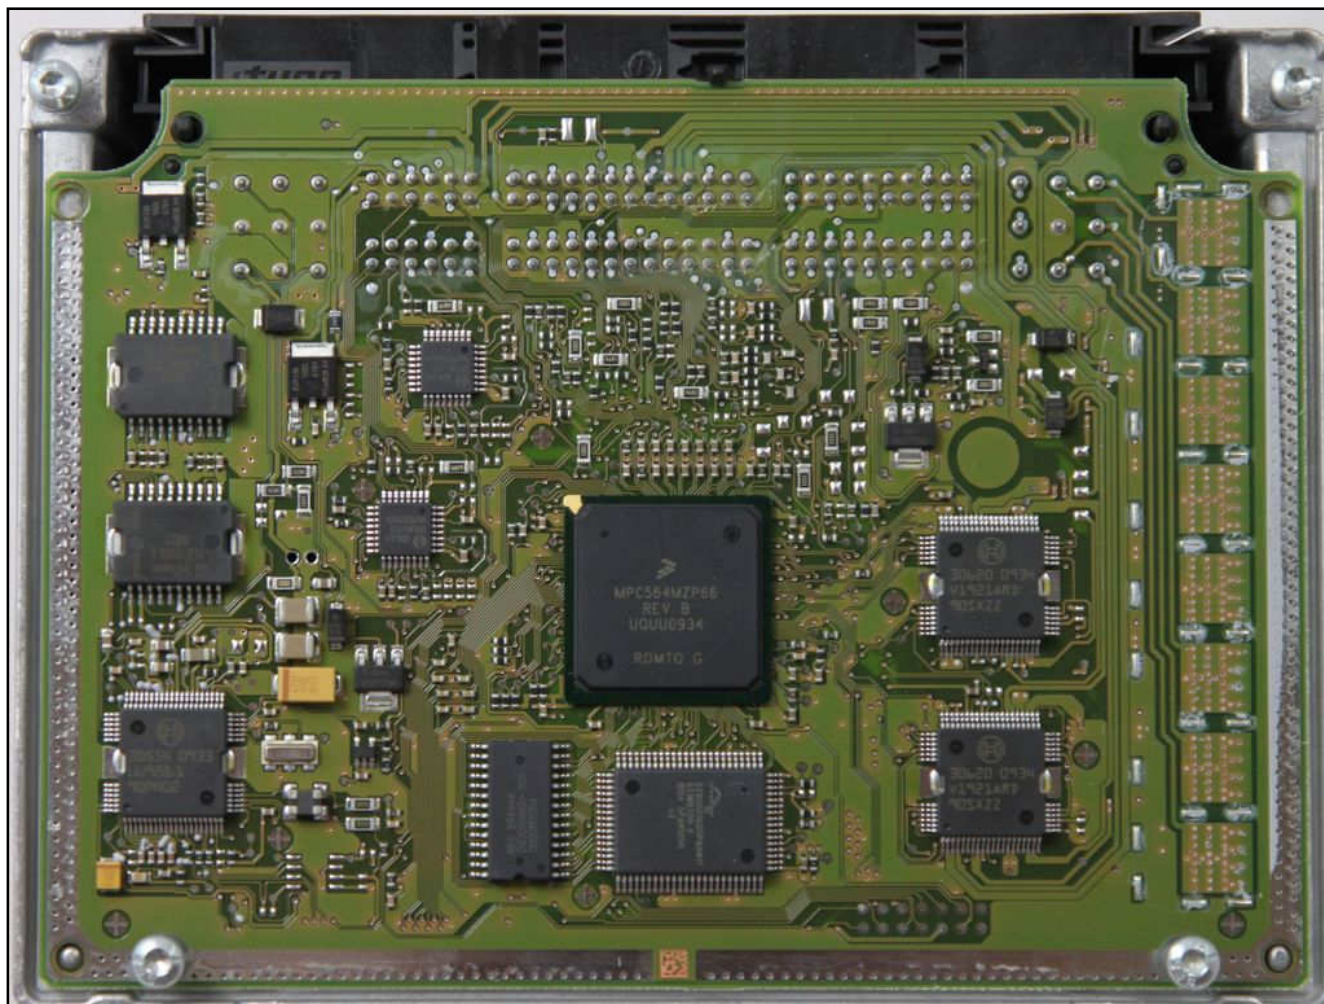


DIRECT CONNECTION

Among these 14's we will use the first 10's from the left to solder the strips or guiding pin strips.



The coloured stripe of the flat cable identifies the pin number one and MUST face left (you should watch the ECU with the connector placed upwards (EPROM side).

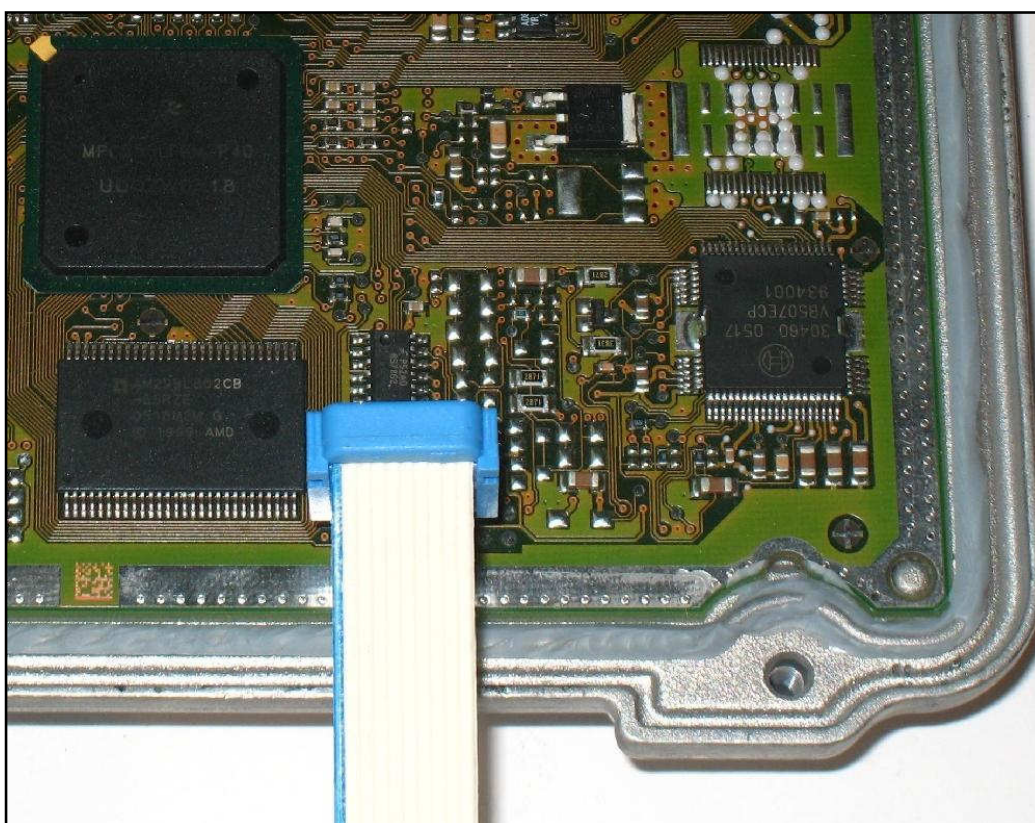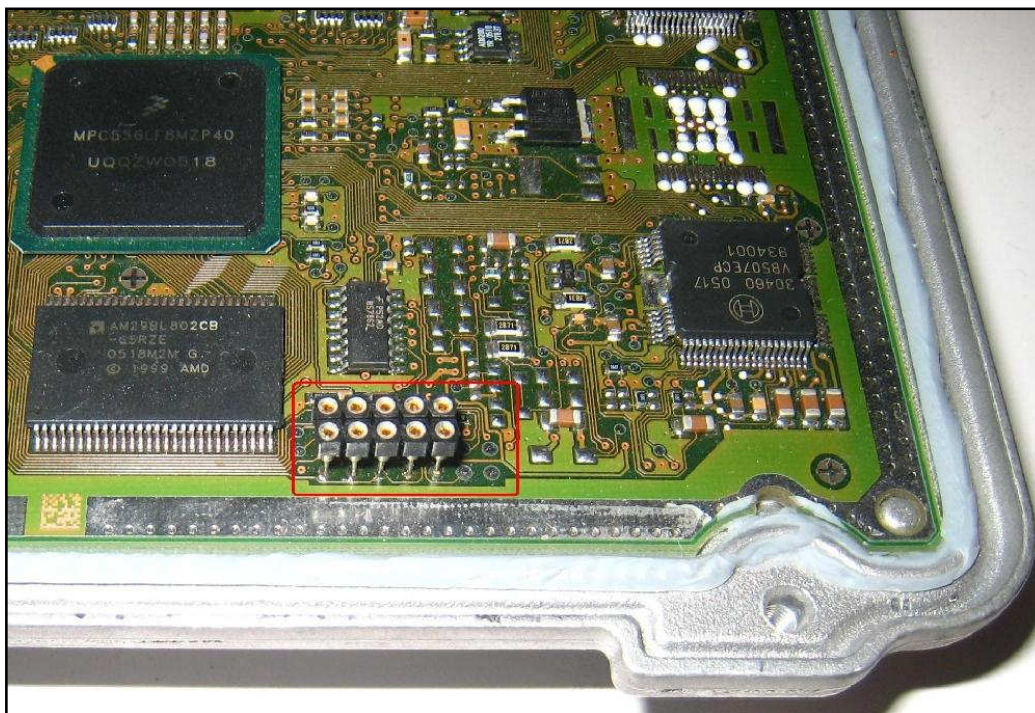

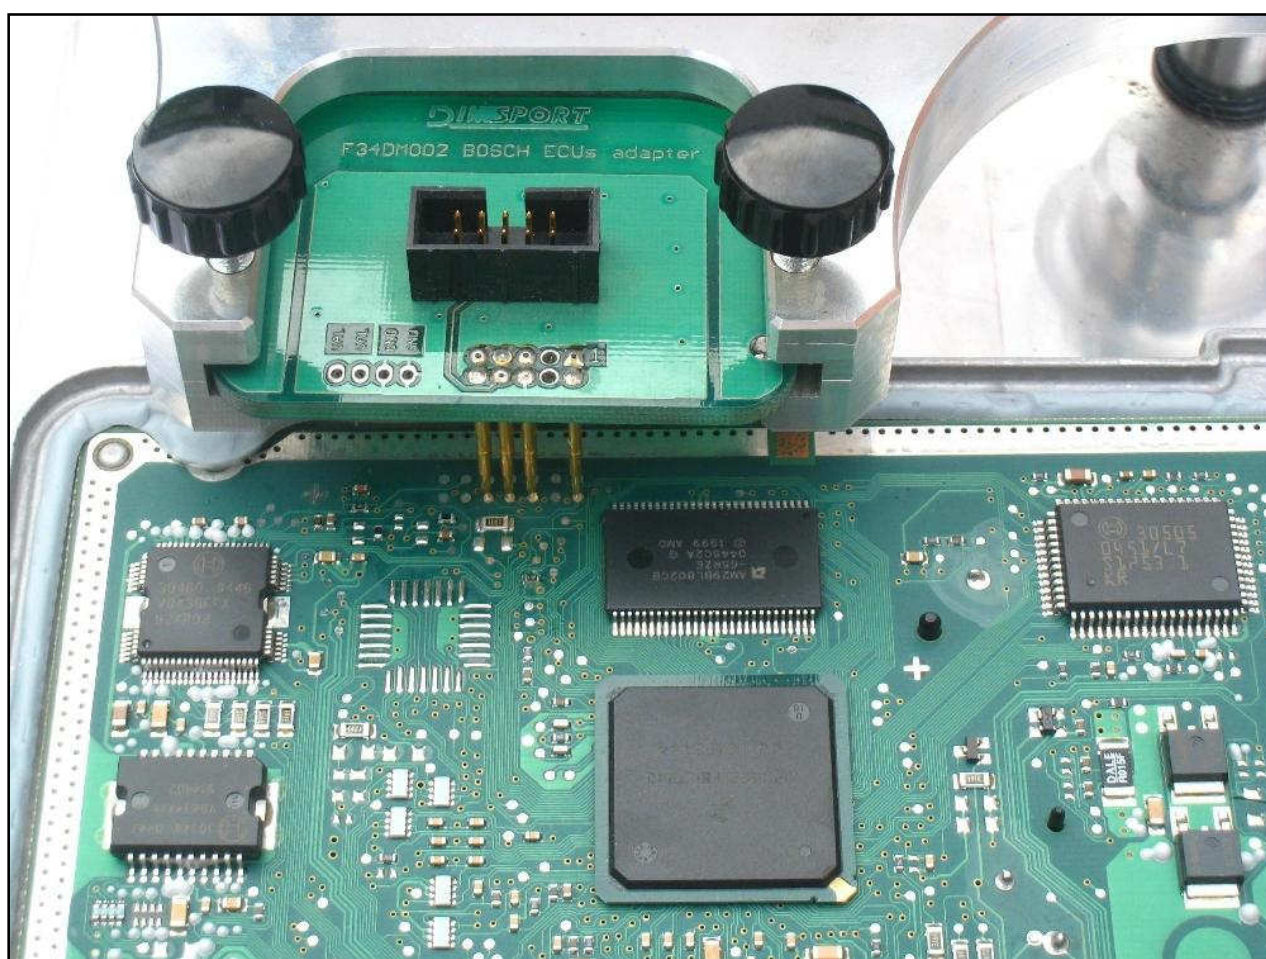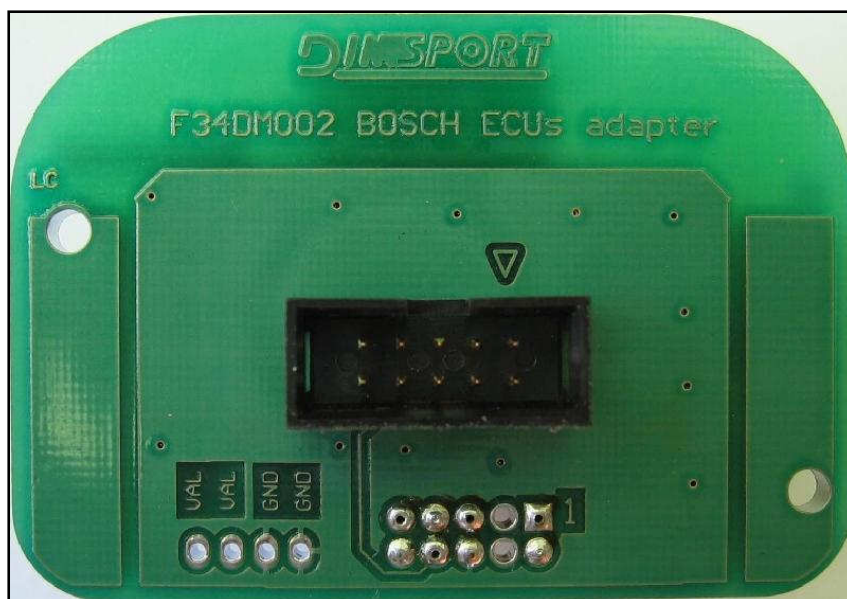DIMA CONNECTION

PLUGIN 163 : NEW TRASDATA



Le piazzole sono situate nella parte inferiore della centralina.

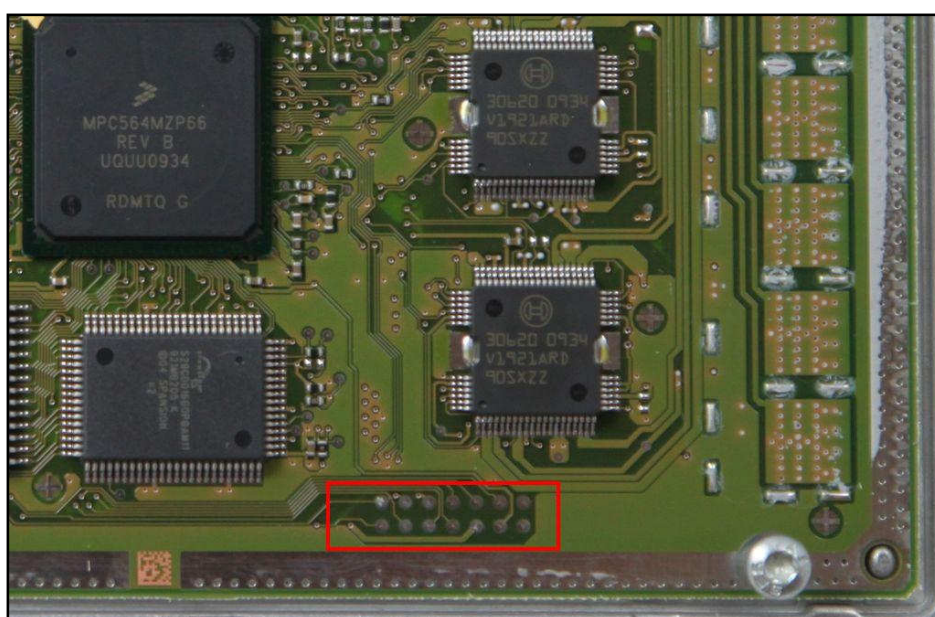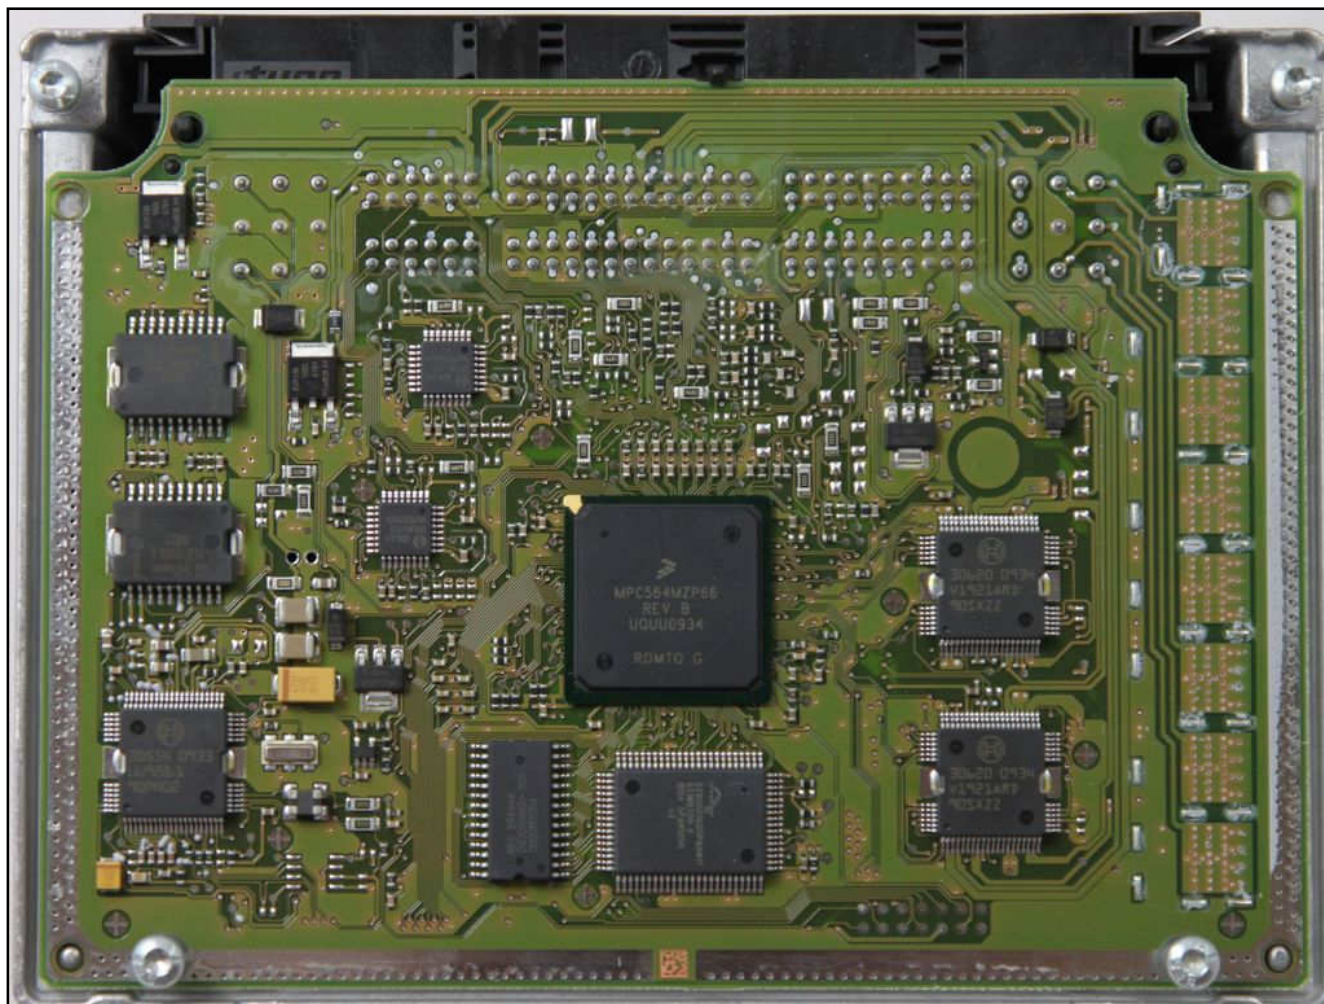

CONNESSIONE DIRETTA

Di queste 14 piazzole noi utilizzeremo le prime 10 a sinistra per saldare le STRIP oppure i pozzetti.

La banda colorata del cavo flat che identifica il pin numero uno DEVE essere rivolta verso sinistra, guardando la centralina con il connettore rivolto verso l'alto (lato eprom).

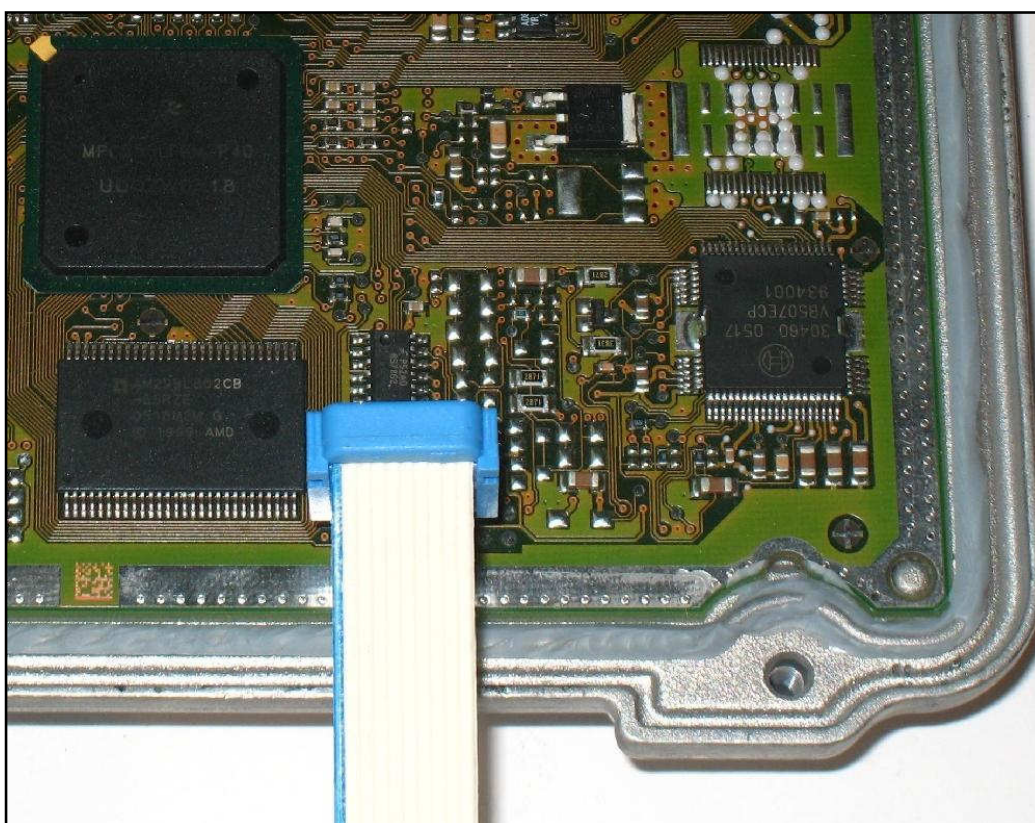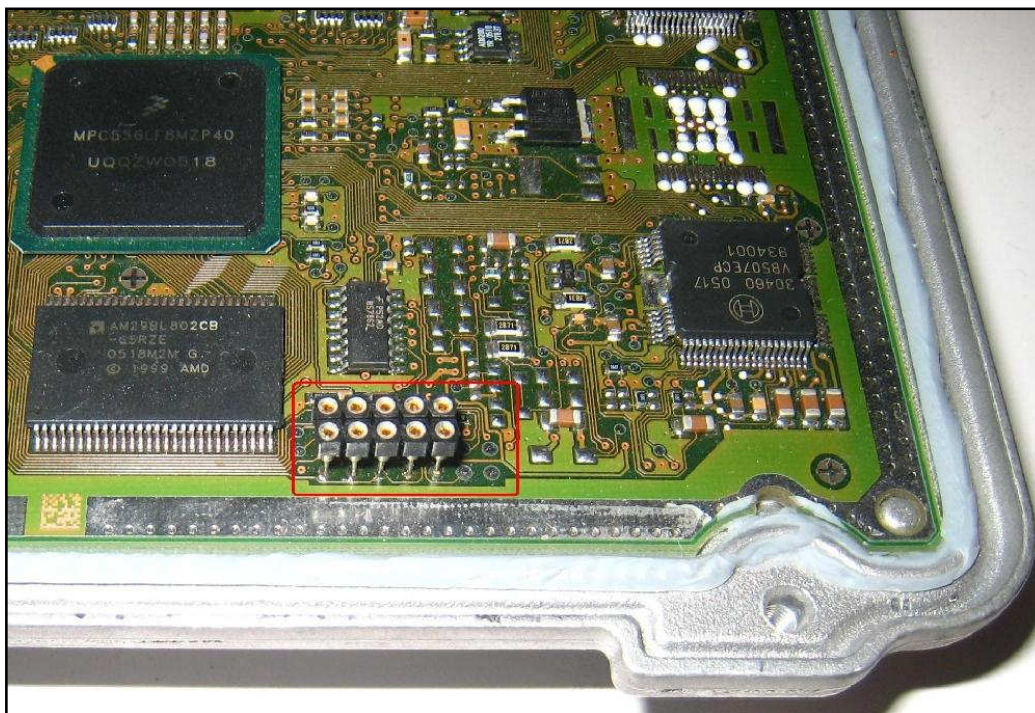

CONNESSIONE DIMA